

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Gemini CDX1200, CDX1210, and 20001210001

Redi-Remote RT20001210001

Redi-Remote Replacement Remote Control User Manual

FOR GEMINI CDX1200, CDX1210, AND 20001210001

Introduction

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with Gemini CD players. This remote is specifically compatible with Gemini models CDX1200, CDX1210, and the original remote control number 20001210001. It is a custom-built replacement and not an original Gemini product.

Product Overview

The Redi-Remote replacement remote control is a pre-programmed device that requires no additional setup for the specified Gemini CD player models. It is designed to perform all functions of the original unit it replaces.



Figure 1: Redi-Remote Replacement Remote Control. The remote features a dark gray casing with a top section for general controls and a slide-down cover revealing a lower section for advanced CD player functions.

Key Features:

- **No Programming Required:** Ready to use with compatible Gemini CD players immediately.
- **Dedicated Functionality:** Controls all functions for the specific unit it is designed for. It cannot be programmed to control auxiliary devices.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Standard Operation:** Does not include laser pointers or LED lights.

Setup

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. (Batteries are typically included with the remote).
4. Close the battery compartment cover securely.

The remote control is now ready for use. No additional programming is required.

Operating Instructions

This section details the functions of the buttons on your Redi-Remote replacement remote control.

Top Panel Controls:

- **PWR (Power):** Turns the connected Gemini CD player on or off.
- **SLEEP:** Activates the sleep timer function (if supported by the CD player).
- **CH+ / CH-:** Channel Up / Channel Down (functionality may vary based on connected device, primarily for TV/Video functions if the remote has universal capabilities, but this remote is dedicated to CD players).
- **VOL- / VOL+:** Decreases / Increases volume (functionality may vary based on connected device).
- **MUTE:** Mutes or unmutes audio output.
- **TV/VIDEO:** Switches input source to TV or Video (functionality may vary based on connected device).
- **DISP (Display):** Changes or shows display information.
- **RECALL:** Recalls previous settings or tracks.
- **MENU:** Accesses the system menu.

Number Pad:

- **0-9:** Numeric input for track selection or other functions.
- **100:** Direct access to track 100 or similar function.
- **ENT (Enter):** Confirms selections.

Hidden Panel (CD Player Specific Controls):

To access these controls, slide down the cover located on the lower half of the remote.

- **EJECT:** Ejects the CD from the player.
- **BPM:** Displays or adjusts Beats Per Minute (if supported).
- **REPEAT:** Toggles repeat playback modes (e.g., repeat track, repeat disc).

- **PROG (Program):** Enters program mode to create a custom track sequence.
- **SGL/CTN (Single/Continuous):** Switches between single track play and continuous play modes.
- **PITCH ON/OFF:** Activates or deactivates pitch control.
- **PITCH - / PITCH +:** Decreases / Increases playback pitch.
- **CUE:** Sets or recalls a cue point.
- **TIME:** Changes the time display mode (e.g., elapsed time, remaining time).
- **Play/Pause (▶ ||):** Starts or pauses playback.
- **Stop (■):** Stops playback.
- **Fast Forward (▶ ▶):** Fast forwards through the track.
- **Rewind (◀ ◀):** Rewinds through the track.
- **Skip Forward (▶ |):** Skips to the next track.
- **Skip Backward (|| ◀):** Skips to the beginning of the current track or the previous track.
- **LOOP IN:** Sets the start point for a loop.
- **LOOP OUT:** Sets the end point for a loop.
- **RELOOP:** Recalls and plays the last set loop.
- **VOL - / VOL +:** Decreases / Increases volume (specific to CD player output if applicable).

Maintenance

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all four AAA batteries at the same time with new ones. Dispose of old batteries according to local regulations.

Troubleshooting

- **Remote not responding:**
 - Ensure the remote has fresh batteries and they are inserted with correct polarity.
 - Check for any obstructions between the remote and the CD player's infrared sensor.
 - Ensure you are within the effective range and line of sight of the CD player.
- **Specific buttons not working:**
 - Verify that the button's function is supported by your specific Gemini CD player model.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
- **Remote controls other devices:**
 - This remote is specifically designed for Gemini CDX1200, CDX1210, and 20001210001. It is not designed to control auxiliary devices. If it appears to affect other devices, ensure proper aiming at the intended CD player.

If issues persist, please refer to the support information below.

Specifications

Brand:	Redi-Remote
Model Number:	RT20001210001
Compatible Devices:	Gemini CDX1200, CDX1210, 20001210001 CD Players
Connectivity Technology:	Infrared
Power Source:	4 x AAA Batteries (included)
Product Dimensions:	7 x 2.5 x 1 inches (17.8 x 6.4 x 2.5 cm)
Item Weight:	4.5 ounces (127.6 grams)
Special Feature:	No Programming Required
Max Number of Supported Devices:	1 (Dedicated to specific Gemini CD players)

Support

This Redi-Remote replacement remote control is designed for direct compatibility. If you encounter any issues or have questions regarding its operation after purchase, please contact the manufacturer, Redi-Remote, directly for assistance. For further information or to address specific concerns, please refer to the contact details provided with your purchase or visit the Redi-Remote official website.

© 2024 Redi-Remote. All rights reserved. Gemini is a registered trademark of its respective owner.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00HI0V5LS>

More documents and user manuals: <https://manuals.plus/>