

## SURKER HC-7068

# SURKER HC-7068 Hair Clipper User Manual

Brand: SURKER | Model: HC-7068

## 1. IMPORTANT SAFETY WARNINGS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do not use on children or near water sources.** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Keep out of reach of children.** Ensure children are supervised to prevent them from playing with the appliance.
- **Do not immerse the device in water.** This product is washable, but direct immersion can damage internal components.
- Follow cleaning and maintenance instructions to avoid skin irritation or eye injuries.
- Use only with a fully charged battery. Ensure the battery is charged according to the instructions before first use.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.


## 2. PRODUCT OVERVIEW AND COMPONENTS

The SURKER HC-7068 Hair Clipper is a high-performance, rechargeable electric clipper designed for various hair cutting needs. It features a durable metal blade and is powered by a Lithium-ion battery.





**Figure 2.1:** Front view of the SURKER HC-7068 Hair Clipper, showcasing its red and black design with the SURKER logo.

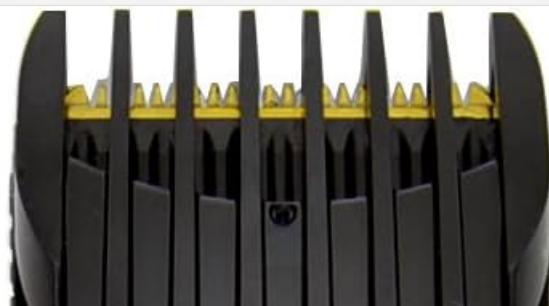



**Figure 2.2:** Back view of the hair clipper, displaying the model number HC-7068 and charging specifications.

### Package Contents:

- SURKER HC-7068 Hair Clipper
- Lithium-ion Battery (pre-installed)

- Charging Cable/Adapter
- Cleaning Comb
- Cleaning Brush
- Lubricating Oil Bottle
- Guide Comb Attachments (3-6-9-12mm)



**Figure 2.3:** Included guide comb attachments for varying cutting lengths.



**Figure 2.4:** Close-up view of the precision metal blade.

### 3. SETUP AND CHARGING

#### 3.1 Initial Charging

Before first use, fully charge the hair clipper. The charging time is approximately **8 hours**. Connect the charging cable to the clipper and plug it into a suitable power outlet. The indicator light will show the charging status.

#### 3.2 Attaching Guide Combs

To achieve desired hair lengths, attach one of the provided guide combs (3mm, 6mm, 9mm, 12mm). Align the comb with the clipper head and push it firmly until it clicks into place. Ensure it is securely fastened before use.

### 4. OPERATING INSTRUCTIONS

#### 4.1 Turning On/Off

To turn on the clipper, slide the ON/OFF switch upwards. To turn it off, slide the switch downwards.

#### 4.2 Adjusting Cutting Length

The clipper features a quick adjust dial with 5 settings for fine-tuning cutting length, in addition to the guide combs. Rotate the dial to select your preferred setting. This allows for precise trimming for various styles.

#### 4.3 Recommended Usage Areas

This versatile hair clipper is suitable for various body areas, including:

- Head (Haircuts)
- Beard and Moustache
- Neck and Body
- Chest and Back
- Bikini Line
- Nose and Ear (with appropriate care)



Figure 4.1: Illustrative examples of the clipper's versatility for different grooming needs and its ergonomic design.

#### 4.4 General Hair Cutting Tips

- Ensure hair is clean and dry before cutting for best results.
- Always start with a longer guide comb setting and gradually reduce it if a shorter cut is desired.
- Move the clipper against the direction of hair growth for an even cut.

- Use smooth, overlapping strokes.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your SURKER hair clipper.

### 5.1 Cleaning the Blades

1. Turn off the clipper and unplug it from the charger.
2. Remove the guide comb attachment.
3. Use the provided cleaning brush to brush away any loose hairs from the blades and the clipper body.
4. The clipper head is washable. You can rinse the blades under running water. **Do not immerse the entire unit in water.**
5. Allow the blades to air dry completely before reattaching the comb or storing.

### 5.2 Lubricating the Blades

After every few uses, or if the clipper feels sluggish, apply a few drops of the provided lubricating oil to the blades. Turn on the clipper for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

### 5.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

## 6. TROUBLESHOOTING

If you encounter any issues with your SURKER HC-7068 Hair Clipper, please refer to the following common problems and solutions:

- **Clipper does not turn on:** Ensure the battery is fully charged. Check if the charging cable is properly connected.
- **Clipper pulls hair or cuts unevenly:** The blades might be dull or clogged with hair. Clean and lubricate the blades as per maintenance instructions. Ensure the guide comb is securely attached.
- **Reduced battery life:** Ensure the clipper is charged for the full 8 hours. Over time, rechargeable batteries may lose capacity.
- **Excessive noise or vibration:** Clean and lubricate the blades. If the issue persists, contact customer support.

## 7. SPECIFICATIONS

<b>Brand</b>	SURKER
<b>Model Number</b>	HC-7068
<b>Power Source</b>	Battery Powered (Rechargeable)
<b>Battery Type</b>	1 Lithium-ion (included)
<b>Charging Time</b>	8 hours
<b>Blade Material</b>	Metal
<b>Body Material</b>	Metal

Color	Red
Recommended Hair Type	All
Approx. Package Dimensions	26.2 x 21.8 x 13.8 cm
Approx. Package Weight	630 grams
Special Feature	Rechargeable
Target Audience	Unisex-Adult


## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the official SURKER website or contact their customer service department.

© 2023 SURKER. All rights reserved.

Documents - SURKER – HC-7068

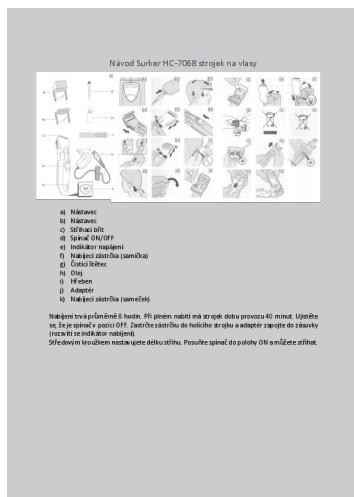

[\[pdf\]](#)

Uživatel Microsoft Office Návod Surker HC 7068 strojek na vlasy Venda cz Nabíjení trvá průměrně 8 hodin Při plném nabití má dobu provozu 40 minut Ujistěte se že je spínač v pozici OFF Zastrčte zástrčku do holícího strojku a následně zapojte do zásuvky (zdroj napětí 220-240V) Po dokončení nabíjení vystačíte sestavit zástrčku. Použijte spinac do polohy ON a následně stiskněte do holícího 1560 cs venda file |||

Nvod Surker **HC-7068** strojek na vlasy a Nstavec b Nstavec c Stihac bit d Spnac ON/OFF e Indiktor napjen f Nabjec zstrcka samicka g Cistc sttec h Olej i Heben j Adaptr k Nabjec zstrcka samecek Nabjen trv prmrn 8 hodin. Pi plnm nabit m strojek dobu provozu 40 minut. Ujistte se, ze je spn...

lang: **score:33** filesize: 223.23 K page\_count: 1 document date: 2019-01-16



### [\[pdf\] Accessories](#)

NZ three accessories Bol SURKER® HC 7068 Rotary Shavers CE tre accessori rasoir rotatif tres accesorios navaja de afeitar rotativo la función de original media s bol mijzJwAk465BO |||

...

lang: **score:14** filesize: 786.61 K page\_count: 1 document date: 2022-10-28