

[manuals.plus](#) /› [Tiger Corporation](#) /› [Tiger Corporation JAX-T10U-K 5.5-Cup \(Uncooked\) Micom Rice Cooker with Food Steamer & Slow Cooker User Manual](#)

Tiger Corporation JAX-T10U-K

Tiger Corporation JAX-T10U-K Micom Rice Cooker User Manual

Model: JAX-T10U-K | Brand: Tiger Corporation

1. INTRODUCTION

The Tiger Micom controlled rice cooker & warmer is a versatile kitchen appliance designed to simplify your cooking process. It features 4-in-1 functions including rice cooking, "tacook" Synchro-Cooking, slow cooker, and steamer functions. With 10 computerized cooking menu settings, it allows for simultaneous preparation of two dishes, ensuring perfect results with minimal effort.

Key Features:

- 5.5-Cup Microcomputer controlled rice cooker and warmer with "tacook" synchro-cooking function.
- 4-In-1 functions and 10 computerized cooking menu settings.
- 1.5-Mm Thick inner pan for even heat distribution.
- Easy to remove and wash inner lid and steam cap for convenient cleaning.
- Includes cooking plate and a comprehensive cookbook.
- Easy-to-read LCD control panel, automatic keep warm function, and delay timer.

2. COMPONENTS

Your Tiger JAX-T10U-K rice cooker comes with the following components:

- Main Rice Cooker Unit
- Inner Pot (1.5mm thick, non-stick)
- Tacook BPA-free Cooking Tray
- Ladle
- Rice Measuring Cup
- Spatula
- Cookbook



Figure 2.1: Main unit of the Tiger JAX-T10U-K Rice Cooker, showcasing its sleek black and stainless steel exterior with the control panel.



Figure 2.2: The non-stick inner pot with clear measurement markings for various rice types and cooking functions.

3. SETUP

Before First Use:

1. Unpack all components and remove any packaging materials.
2. Wash the inner pot, inner lid, steam cap, cooking plate, ladle, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth.
4. Place the rice cooker on a stable, flat, and heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
5. Plug the power cord into a standard 120V electrical outlet.

4. OPERATING INSTRUCTIONS

The Tiger JAX-T10U-K offers a variety of cooking functions for different needs.

4.1 Basic Rice Cooking (Plain Rice):

1. Measure the desired amount of rice using the provided measuring cup.
2. Wash the rice thoroughly until the water runs clear.
3. Place the washed rice into the inner pot. Add water according to the markings inside the inner pot (e.g., for 3 cups of plain rice, fill water to the '3' mark under 'Plain').
4. Close the outer lid firmly until it clicks.
5. Press the **Menu** button to select 'Plain' rice setting.
6. Press the **Start** button. The cooking indicator light will illuminate.
7. Once cooking is complete, the unit will automatically switch to 'Keep Warm' mode.



Figure 4.1: The intuitive LCD control panel with clearly labeled buttons for menu selection, timer, and start/cancel functions.

4.2 Tacook Synchro-Cooking Function:

The unique "tacook" function allows you to cook rice and a main dish simultaneously without the flavors mixing. This is achieved by placing ingredients in the Tacook cooking plate, which sits above the rice in the inner pot.

1. Prepare rice and water in the inner pot as usual.
2. Place your ingredients for the main dish into the Tacook cooking plate.
3. Carefully place the Tacook cooking plate into the inner pot, ensuring it sits securely above the rice.
4. Close the outer lid.
5. Select the 'Synchro-Cooking' menu setting using the **Menu** button.
6. Press the **Start** button. Both dishes will cook simultaneously.



Figure 4.2: The rice cooker preparing a full meal using the 'tacook' Synchro-Cooking function, with rice in the main pot and a side dish in the upper tray.

4.3 Slow Cooker and Steamer Functions:

The unit also functions as a slow cooker and steamer. For slow cooking, place ingredients directly into the inner pot and select 'Slow Cook'. For steaming, add water to the inner pot, place food on the Tacook plate (or a separate steamer basket if preferred), and select 'Steam'.

4.4 Official Product Video:

Your browser does not support the video tag.

Video 4.1: An official overview of the Tiger JAX-T10U & JAX-T18U rice cookers, demonstrating key features like Synchro-Cooking, ease of use, and cleaning. This video highlights the versatility and convenience of the appliance for various meal preparations.

5. MAINTENANCE AND CARE

Cleaning:

Regular cleaning ensures optimal performance and longevity of your rice cooker. Always unplug the unit and allow it to cool completely before cleaning.

1. **Inner Pot:** Wash with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scrubbers to protect the non-stick coating. Rinse thoroughly and dry.
2. **Inner Lid and Steam Cap:** These are easy to remove and wash. Detach them from the main lid and wash with

warm, soapy water. Rinse and dry completely before reattaching.

3. **Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Accessories:** Wash the cooking plate, ladle, and measuring cup with warm, soapy water.

6. TROUBLESHOOTING

If you encounter any issues with your rice cooker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water; rice not soaked (for some types); old rice.	Add slightly more water next time; ensure correct water level for rice type; use fresh rice.
Rice is too soft/mushy	Too much water; rice soaked too long.	Reduce water slightly next time; ensure correct water level.
Rice cooker does not start	Not plugged in; lid not closed properly; incorrect setting.	Check power connection; ensure lid is securely closed; select appropriate cooking setting.
Odor during cooking	Residue from previous cooking; new unit odor.	Clean inner pot, inner lid, and steam cap thoroughly; initial odor is normal and will dissipate.

7. SPECIFICATIONS

Feature	Detail
Brand	Tiger Corporation
Model Name	JAX-T10U-K
Capacity	5.5 Cups (Uncooked)
Product Dimensions	13.7"D x 10.1"W x 8.2"H
Power Source	Corded Electric
Voltage	120 Volts
Wattage	641 watts
Material	Stainless Steel (Exterior), Aluminum (Lid)
Item Weight	6.8 Pounds
Country of Origin	Japan

8. WARRANTY AND SUPPORT

For specific warranty details and terms, please refer to the warranty card included with your product packaging. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical support, service, or inquiries about replacement parts, please contact Tiger Corporation customer service directly. Contact information can typically be found on the manufacturer's website or in your product documentation.

You can also visit the official Tiger Store for more information and product registration:[Tiger Store on Amazon](#)

© 2025 Tiger Corporation. All rights reserved.