

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Babycakes](#) /

› Babycakes Full Size 12 Cupcake Maker Instruction Manual

Babycakes CC-12

Babycakes Full Size 12 Cupcake Maker Instruction Manual

PRODUCT OVERVIEW

The Babycakes Full Size 12 Cupcake Maker is a versatile kitchen appliance designed for baking 12 full-sized cupcakes, muffins, or mini quiches quickly and efficiently. Featuring nonstick baking plates and a latching handle, this 1200-watt unit simplifies the baking process, making it suitable for various occasions.



The Babycakes Full Size 12 Cupcake Maker, ready to bake delicious treats.

IMPORTANT SAFETY INFORMATION

- Always read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance surfaces become extremely hot during operation. Avoid placing plastic items on the lid, even when closed, as they may melt.

PRODUCT FEATURES

- **12-Cup Capacity:** Bakes 12 full-sized cupcakes or muffins simultaneously.
- **Nonstick Baking Plates:** Ensures easy release of baked goods and simplifies cleaning.
- **Latching Handle:** Provides secure closure during baking and easy portability.
- **1200 Watts Power:** For quick and efficient heating and baking.
- **Ready Indicator Lights:** Signals when the appliance is preheated and ready for use.
- **Non-Skid Feet:** Offers stability during operation.
- **Versatile Use:** Suitable for cupcakes, muffins, mini quiches, and more.

WHAT'S IN THE BOX



Power Light

Easy-Release Ceramic Cooking Surface To Prevent Sticking

Nonskid Feet

Latching Handles

What's In The Box

Cupcake Maker
Makes a dozen full-sized cupcakes in minutes.

Recipes Included
Tips & recipes are included in the owner's manual.

GINGERBRE
1 cup all-pu
1 teaspoon baker
1 teaspoon gro
1/2 teaspoon
1/2 teaspoon

THE ORIGINAL babycakes

The Babycakes Cupcake Maker and its included manual with recipes.

- Babycakes Full Size 12 Cupcake Maker

- Instruction Manual with Cupcake Recipes

SETUP

1. **Unpack:** Carefully remove the cupcake maker from its packaging.
2. **Clean:** Wipe down the nonstick baking plates with a damp cloth or sponge, then dry thoroughly.
3. **Placement:** Place the appliance on a stable, heat-resistant surface.
4. **Power Connection:** Plug the power cord into a standard 120-volt AC electrical outlet. The red 'Power' indicator light will illuminate.

OPERATING INSTRUCTIONS

Preheating

Allow the cupcake maker to preheat. The green 'Ready' indicator light will illuminate when the appliance has reached the optimal baking temperature. This typically takes 3-5 minutes.

Baking Cupcakes/Muffins



Ceramic
Coating to
Prevent
Sticking

Easy Cupcakes For Every Occasion

- 1 Simply preheat the device
- 2 Pour the batter
- 3 Close the lid
- 4 Bake for a few minutes
- 5 Pop them out with ease,
then wipe down to clean

Visual guide for the cupcake baking process.

1. **Prepare Batter:** Prepare your desired cupcake or muffin batter.
2. **Add Liners (Optional):** For easier removal and cleanup, place paper or silicone cupcake liners into each baking well.
3. **Fill Wells:** Carefully pour or spoon batter into each well, filling approximately two-thirds full. Do not overfill.
4. **Close Lid:** Gently close the lid and secure the latch.
5. **Bake:** Bake for approximately 5-8 minutes. Baking time may vary depending on the recipe and desired doneness. The green 'Ready' light may cycle on and off during baking, which is normal.
6. **Check Doneness:** To check if cupcakes are done, insert a toothpick into the center of a cupcake. If it comes out clean, they are ready.
7. **Remove:** Carefully open the lid. Using a non-metallic utensil (e.g., a silicone spatula), gently remove the baked cupcakes.
8. **Cool:** Allow cupcakes to cool on a wire rack before frosting or serving.

CLEANING AND MAINTENANCE

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a damp cloth or sponge to wipe the nonstick baking plates. For stubborn residue, a small amount of cooking oil can be applied, left for a few minutes, then wiped clean.
3. **Clean Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Storage:** Store the cupcake maker in a clean, dry place once it is completely cool and clean.

SPECIFICATIONS

Product Information

-  Wattage: 1200
-  Item Weight: 6.82 lbs.
-  Voltage: 120 Volts



Dimensions of the Babycakes Full Size 12 Cupcake Maker.

Specification	Value
Model Number	CC-12

Brand	Babycakes
Color	Pink
Material	Plastic
Wattage	1200 watts
Voltage	120 Volts
Product Dimensions	13"D x 13.5"W x 5.5"H
Item Weight	7.6 Pounds
Special Feature	Manual
UPC	655772011411

WARRANTY AND SUPPORT

The Babycakes Full Size 12 Cupcake Maker comes with a Full Warranty. For specific details regarding warranty coverage, claims, or technical support, please refer to the contact information provided in your product packaging or visit the official Babycakes website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00HMJEF6M>

More documents and user manuals: <https://manuals.plus/>