

[manuals.plus](#) /

› [MARATHON](#) /

› [MARATHON Travel and Desktop Alarm Clock \(CL030023\) - Instruction Manual](#)

MARATHON CL030023

MARATHON Travel and Desktop Alarm Clock (CL030023)

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your MARATHON Travel and Desktop Alarm Clock, Model CL030023. Please read this manual thoroughly before using the device to ensure proper function and longevity.



**LEGENDARY CRAFTSMANSHIP.
EXTREME PRECISION.**



The MARATHON Travel Alarm Clock features an easy-to-read display with a backlight, designed for convenience during travel.

TRAVEL ALARM CLOCK

Easy-to-read display with light



Front view of the MARATHON Travel and Desktop Alarm Clock, displaying current time, date, and indoor temperature.

CONTROLS AND DISPLAY OVERVIEW

Familiarize yourself with the clock's buttons and display elements:

- **SET/LOCK/ALM/TIME/CAL Button:** Used to enter setting modes for time, alarm, and calendar, and to lock settings.
- **HR (Hour) Button:** Adjusts the hour in setting modes.
- **MIN (Minute) Button:** Adjusts the minute in setting modes.
- **°C/°F Button:** Toggles between Celsius and Fahrenheit temperature display.
- **12/24 YR Button:** Toggles between 12-hour and 24-hour time format, and adjusts the year in calendar setting.
- **Light/Snooze Button:** Activates the backlight and the snooze function when the alarm sounds.
- **ALM ON/OFF Switch:** Activates or deactivates the alarm.



EASY-TO-USE

Accessible side and front buttons



LOUD ALARM

With progressive interval ring



SLEEK DESIGN

Stylish at home or on-the-go

Close-up of the control buttons located on the front and side of the alarm clock.

DYNAMIC DISPLAY

Time (12/24 H) · Calendar · Temperature (°C & °F)



The dynamic display shows time, calendar information (month, date, day), and indoor temperature.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AAA battery, ensuring the correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Initial Time and Date Setting

1. Press and hold the **SET** button until the time display begins to flash.
2. Use the **HR** and **MIN** buttons to set the current hour and minute.
3. Press **SET** again to move to the date setting. Use **HR** and **MIN** to set the month, date, and year. The **12/24 YR** button can be used to adjust the year.
4. Press **SET** once more to confirm and exit the setting mode.

3. Setting 12/24-Hour Format and Temperature Unit

- To switch between 12-hour and 24-hour time display, press the **12/24 YR** button when not in setting

mode.

- To switch between Celsius (°C) and Fahrenheit (°F) temperature display, press the **°C/°F** button.

OPERATING INSTRUCTIONS

1. Setting the Alarm

1. Slide the **ALM ON/OFF** switch to the 'ON' position. An alarm icon will appear on the display.
2. Press and hold the **ALM** button until the alarm time begins to flash.
3. Use the **HR** and **MIN** buttons to set your desired alarm time.
4. Press **ALM** again to confirm and exit the alarm setting mode.

2. Using the Snooze Function

When the alarm sounds, press the large **Light/Snooze** button to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes.

3. Activating the Backlight

Press the large **Light/Snooze** button to illuminate the display for approximately five seconds. This provides maximum illumination while being gentle on the eyes.

4. Folding and Positioning

The clock features a built-in stand. To position the clock, flip out the stand and rotate the clock face 180 degrees. This allows for stable placement on a desk or bedside table, and makes it compact for travel.

LIGHTWEIGHT AND COMPACT



The compact design of the alarm clock makes it easy to hold and transport.

MAINTENANCE

Battery Replacement

When the display dims or the clock stops functioning, it is time to replace the AAA battery. Follow the battery installation steps in the Setup section. The clock's low power consumption ensures a maximum lifespan for the included AAA battery.

Cleaning

Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the display or casing.

TROUBLESHOOTING

- **Display is blank or dim:** Replace the AAA battery. Ensure the battery is inserted with correct polarity.
- **Alarm not sounding:** Check if the **ALM ON/OFF** switch is in the 'ON' position. Verify the alarm time is set correctly.
- **Incorrect time or date:** Re-enter the time and date settings as described in the Setup section.

- **Temperature reading is inaccurate:** Ensure the clock is placed in an area with stable ambient temperature, away from direct heat sources or drafts.

SPECIFICATIONS

Feature	Detail
Brand	MARATHON
Model Number	CL030023
Color	White
Display Type	Digital
Special Feature	Foldable
Product Dimensions	2.5"W x 4"H
Power Source	Battery Powered (1 AAA battery included)
Room Type	Bedroom
Mounting Type	Tabletop
Item Weight	4 ounces
Alarm Clock	Yes
Material	Plastic

WARRANTY AND SUPPORT

This MARATHON product comes with a **Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official MARATHON website.

For technical support, troubleshooting assistance, or inquiries about your product, please contact MARATHON customer service through their official channels.

ABOUT MARATHON

MARATHON has been manufacturing precision timing instruments since 1941. The company continues its legacy by combining modern design with Swiss engineering and craftsmanship to produce high-quality products. MARATHON is a family-owned and operated business, committed to providing reliable tools.

Official video detailing the 80-year history of Marathon Watch Company, highlighting its Canadian roots, military supply, and Swiss craftsmanship in watchmaking.