

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ikea](#) /
- › [IKEA Vackis Alarm Clock/Stopwatch White User Manual](#)

Ikea Vackis

IKEA Vackis Alarm Clock/Stopwatch User Manual

Model: Vackis

PRODUCT OVERVIEW

The IKEA Vackis is a versatile device functioning as both an alarm clock and a stopwatch. Its compact design and clear analog display make it suitable for various rooms and uses.



A compact, square-shaped white alarm clock and stopwatch. It features an analog display with black hour and minute hands, a blue second hand, and black numbers from 1 to 12. The clock face is recessed within the white casing.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AA battery (not included), ensuring the correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Setting the Time

1. Turn the time setting knob, usually located on the back or side, clockwise or counter-clockwise to adjust the hour and minute hands to the current time.

OPERATING

1. Switching Between Clock and Stopwatch Modes

The Vackis clock typically has a switch or button to toggle between its clock and stopwatch functions. Refer to the markings on the device for specific controls.

2. Setting and Disabling the Alarm

1. To set the alarm, locate the alarm setting knob (often separate from the time setting knob).
2. Rotate the alarm setting knob to align the alarm hand with your desired alarm time.
3. Locate the alarm ON/OFF switch (usually a small toggle switch). Move it to the 'ON' position to activate the alarm.
4. To disable the alarm, move the alarm ON/OFF switch to the 'OFF' position.

3. Using the Stopwatch Function

If your Vackis model includes a stopwatch, it will typically have a dedicated button for start/stop and reset. Press the button once to start, again to stop, and hold or press a separate button to reset.

MAINTENANCE

1. Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surface.

2. Battery Replacement

- Replace the battery when the clock display becomes dim or the alarm sound weakens.
- Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

- **Clock not displaying/working:** Ensure the battery is inserted correctly with the right polarity and is not depleted. Try a new battery.
- **Alarm not sounding:** Check if the alarm is set to the correct time and if the alarm ON/OFF switch is in the 'ON' position. Ensure the battery has sufficient power.
- **Inaccurate time:** The clock may need a new battery. If the issue persists, the clock mechanism might be faulty.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Ikea

Model	Vackis
Product Dimensions	7.01 x 7.01 x 3.99 cm
Display Type	Analog
Style	Classic
Age Range (Description)	Adult
Room Type	Dining Room, Study, Living Room
ASIN	B00HNERRJS
First Available Date	February 5, 2015

WARRANTY AND SUPPORT

For information regarding warranty, returns, or further technical support, please refer to your purchase receipt or contact IKEA customer service directly. Details can typically be found on the official IKEA website or in the product packaging.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this item at this time.