



[Manuals.plus](#) /

› [Bajaj](#) /

› Bajaj FX7 600-Watt Food Processor User Manual

Bajaj FX7

Bajaj FX7 600-Watt Food Processor User Manual

Model: FX7 | Model Number: 410147

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bajaj FX7 600-Watt Food Processor. Please read all instructions carefully before using the appliance for the first time and retain this manual for future reference.

600W Powerful food processor for your kitchen



Image: The Bajaj FX7 600-Watt Food Processor, showcasing its main unit with the processing bowl and blender jar attached.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Ensure the processing bowl and jars are properly locked into place before operating the appliance. The built-in locking mechanism prevents operation if not correctly assembled.
- Keep hands and utensils away from moving blades during operation to prevent injury. Use a pusher for feeding food into the chute.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- This appliance is for household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.

PRODUCT COMPONENTS

Your Bajaj FX7 Food Processor comes with various components designed for versatile kitchen tasks. Familiarize yourself with each part before use.



Image: The Bajaj FX7 Food Processor main unit, processing bowl, and two stainless steel jars (grinding and chutney).

Main Unit and Jars

- **Motor Unit:** The base unit housing the 600-watt motor and control panel.
- **Processing Bowl:** A large capacity (2 liters) unbreakable polycarbonate bowl for chopping, shredding, and slicing.
- **Processing Bowl Lid:** Features a feed chute for adding ingredients during operation.
- **Pusher:** Used to guide food through the feed chute.
- **Blender Jar:** For blending liquids, making purees, and milkshakes.
- **Grinding Jar:** For dry grinding spices, coffee beans, and wet grinding pastes.
- **Chutney Jar:** Smaller jar for preparing chutneys and small quantities of pastes.



Image: Close-up of the processing bowl lid, showing the feed chute for adding ingredients.

Attachments

The FX7 includes various attachments for diverse food preparation needs:

- **Chopping Blade:** For chopping vegetables, fruits, and mincing meat.
- **Slicing Blade:** For uniform slicing of vegetables.
- **Shredding Blade:** For fine or coarse shredding of vegetables and cheese.
- **Whipping Disc:** For whipping cream, eggs, and making batters.
- **Centrifugal Juicer:** For extracting juice from hard fruits and vegetables.
- **Citrus Juicer:** For extracting juice from citrus fruits like oranges and lemons.



Image: Various stainless steel blades for slicing and shredding, used with the processing bowl.



Image: The whipping disc attachment, used for aerating liquids and batters.



Image: The centrifugal juicer basket, used for extracting juice from firm fruits and vegetables.



Image: The citrus juicer attachment, consisting of a bowl and a reamer cone for juicing citrus fruits.

SETUP AND ASSEMBLY

Before first use, wash all detachable parts (bowls, jars, lids, blades, attachments) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.

1. **Placement:** Place the motor unit on a stable, flat, and dry surface.
2. **Assembling the Processing Bowl:**
 - Place the processing bowl onto the motor unit and twist clockwise until it locks securely.
 - Insert the desired blade or disc onto the spindle inside the bowl.
 - Place the lid onto the processing bowl and twist clockwise until it locks securely. The appliance will not operate if the bowl and lid are not correctly locked.
3. **Assembling Jars:**
 - Place the ingredients into the chosen jar (blender, grinding, or chutney).
 - Secure the lid onto the jar.
 - Place the assembled jar onto the motor unit and twist clockwise until it locks securely.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Bajaj FX7 Food Processor features a 3-speed control with a pulse function and LED indicators for power and motor overload.



Image: Close-up of the control panel with speed dial and LED indicators for power and motor overload.

General Operation

1. Ensure the appliance is correctly assembled and locked.
2. Turn the speed selector knob to the desired speed (1, 2, or 3) for continuous operation.
3. For short bursts of power, turn the knob to the 'Pulse' setting and release. This is ideal for coarse chopping or mixing.
4. The LED indicators will show when the power is on and will alert you in case of motor overload.
5. After use, turn the knob to 'OFF' and unplug the appliance.

Specific Functions

- **Chopping/Mincing:** Use the chopping blade in the processing bowl. Cut ingredients into smaller pieces before adding. Use the pulse function for better control.
- **Slicing/Shredding:** Insert the appropriate slicing or shredding disc into the processing bowl. Use the feed chute and pusher to guide ingredients.
- **Blending:** Use the blender jar for liquids. Do not overfill. Start at a lower speed and gradually increase.
- **Grinding:** Use the grinding jar for dry ingredients or wet pastes. Ensure ingredients are dry for dry grinding.
- **Whipping:** Attach the whipping disc to the processing bowl. Use for whipping cream or egg whites.
- **Juicing (Centrifugal):** Assemble the centrifugal juicer attachment. Feed fruits/vegetables through the chute.
- **Juicing (Citrus):** Assemble the citrus juicer attachment. Press halved citrus fruits onto the reamer cone.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and hygiene of your food processor.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not immerse in water.
3. **Detachable Parts:** Wash all detachable parts (bowls, jars, lids, blades, discs, attachments) immediately after use.
4. **Hand Wash:** All detachable parts are recommended for hand washing. They are **not dishwasher safe**. Use warm soapy water and a non-abrasive sponge.
5. **Blades:** Handle blades with extreme care due to their sharpness. Use a brush for cleaning if necessary.

6. **Drying:** Dry all parts thoroughly before storing or reassembling.
7. **Storage:** Store the food processor and its attachments in a clean, dry place.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; Bowl/jar or lid not locked correctly; Power outage.	Check power connection; Ensure bowl/jar and lid are securely locked (twist until click); Check household power supply.
Motor stops during operation / Overload indicator lights up.	Overloading with ingredients; Continuous operation for too long; Ingredients too hard.	Switch off and unplug; Remove some ingredients; Allow motor to cool down for 15-20 minutes; Cut hard ingredients into smaller pieces.
Food is not processed evenly.	Too many ingredients; Ingredients are too large; Incorrect blade/attachment used.	Process in smaller batches; Cut ingredients into uniform, smaller pieces; Ensure correct blade/attachment for the task. Use pulse function for better control.
Leakage from jar/bowl.	Lid not properly sealed; Jar/bowl not correctly assembled; Overfilling.	Ensure lid is tightly secured; Reassemble jar/bowl correctly; Do not exceed the maximum fill line.

SPECIFICATIONS

Key technical specifications for the Bajaj FX7 600-Watt Food Processor:

Feature	Detail
Brand	Bajaj
Model Name	FX7
Model Number	410147
Wattage	600 Watts
Number of Speeds	3 + Pulse
Bowl Capacity	2 Liters (Polycarbonate)
Jar Material	Stainless Steel (2 jars)
Blade Material	Stainless Steel
Special Features	Built-in Grinder, Safety Locking Mechanism, LED Indicators

Feature	Detail
Product Care	Hand Wash (Not Dishwasher Safe)
Item Weight	4090 Grams

WARRANTY AND SUPPORT

Your Bajaj FX7 600-Watt Food Processor is covered by a manufacturer's warranty.

- **Product Warranty:** 2 years on the product.
- **Motor Warranty:** 5 years on the motor.

For any service, support, or warranty claims, please contact Bajaj customer service:

Customer Service Contact: 18125963

Please have your product model name (FX7) and model number (410147) ready when contacting support.