

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price 3-in-1 Soothing Motions Bouncer & Rocker Instruction Manual

Fisher-Price BFH07

Fisher-Price 3-in-1 Soothing Motions Bouncer & Rocker

Model: BFH07 - User Instruction Manual

PRODUCT OVERVIEW

The Fisher-Price 3-in-1 Soothing Motions Bouncer & Rocker (Model BFH07) is a versatile product designed to grow with your child, offering three distinct modes: a soothing baby swing, a comfortable baby bouncer, and a fun toddler rocking chair. It features SmartSwing Technology with 6 different swing speeds, 16 songs, and calming nature sounds to help soothe your baby. The seat is cozy and comfortable with two recline positions and includes a removable toy bar with two animal toys for entertainment. The product is designed for easy conversion between modes and features a machine-washable seat pad for convenient cleaning. Its foldable swing frame allows for easy storage.



Image: The Fisher-Price 3-in-1 Soothing Motions Bouncer & Rocker in its primary configuration, featuring a comfortable seat with a toy bar, suitable for infants.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use of this product. Failure to follow these instructions could result in serious injury.

- **For Swing and Baby Seat Mode:** Do not use this product once your child can sit up unaided or weighs more than 9 kg (20 lbs).
- **For Toddler Rocker Mode:** Only use with a child capable of sitting up unaided. The maximum weight capacity for the toddler rocker mode is 18 kg (40 lbs).

- This product is not a toy.
- Always use the restraint system.
- Never leave child unattended.
- Do not use this product if it is damaged or broken.
- Ensure all components are securely fastened before each use.
- Keep small parts away from children during assembly.
- Product complies with safety requirements of standard EN 12790:2009 (Child seat) and EN 16232:2013+A1:2018 (Baby swing).

SETUP AND ASSEMBLY

The Fisher-Price 3-in-1 Soothing Motions Bouncer & Rocker comes disassembled and requires adult assembly. Please follow these general steps. Refer to the included graphical instructions for detailed assembly diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify that all components are present.
2. **Assemble Swing Frame:** Connect the frame pieces according to the diagrams, ensuring they click securely into place.
3. **Attach Seat to Frame:** Securely attach the bouncer/rocker seat to the swing frame. Ensure the connection points are firm.
4. **Install Batteries:** Locate the battery compartment (typically on the control unit). Insert 4 D batteries (not included) with correct polarity. Close the compartment securely.
5. **Attach Toy Bar:** If desired, attach the removable toy bar to the seat.
6. **Final Check:** Before first use, double-check all connections and ensure the product is stable and secure.



Image: The bouncer seat detached from the swing frame, illustrating the modular design for different modes.

OPERATING INSTRUCTIONS

1. Baby Swing Mode

- **Activation:** Ensure the seat is securely attached to the swing frame. Place your baby in the seat and fasten the 5-point harness.
- **Swing Speeds:** Use the control panel to select one of the 6 available swing speeds. SmartSwing Technology maintains consistent speed as your baby grows.
- **Music & Sounds:** Press the music button to cycle through 16 songs and soothing nature sounds. Adjust volume as needed.
- **Recline Positions:** Adjust the seat recline to one of two positions for optimal comfort.



Image: An infant resting in the swing mode, demonstrating the product's use as a baby swing.

2. Baby Bouncer Mode

- **Conversion:** To convert to bouncer mode, detach the seat from the swing frame using the easy-release handles.
- **Stability:** Engage the locking kickstand at the base of the bouncer seat to keep it stationary.
- **Use:** Place your baby in the bouncer and secure the harness. The bouncer provides gentle bouncing motion from baby's movements or a parent's hand.



Image: The product configured as a stationary bouncer, showing the toy bar and secure seating.

3. Toddler Rocker Mode

- **Conversion:** Ensure the seat is detached from the swing frame. Disengage the locking kickstand to allow rocking motion.
- **Use:** This mode is suitable for toddlers who can sit up unaided. The seat provides a comfortable rocking chair for play or relaxation.

- **Toy Bar:** The toy bar can be removed for older children if preferred.



Image: A toddler using the product as a rocking chair, demonstrating its extended usability.

MAINTENANCE

- **Seat Pad Cleaning:** The seat pad is machine washable. Remove it from the frame, wash on a gentle cycle with cold water, and tumble dry on low heat. Do not bleach.
- **Frame Cleaning:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Do not immerse the electronic components in water.
- **Battery Replacement:** Replace batteries when the swing or music functions become weak or stop working. Always use 4 D batteries.
- **Storage:** When not in use, the swing frame can be folded for easier storage. Store in a dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing/Music not working or weak	Low or dead batteries; Incorrect battery installation.	Replace all 4 D batteries with new ones. Ensure batteries are inserted with correct polarity (+/-).
Unusual noise from swing mechanism	Loose connections; Need for lubrication.	Check all assembly points to ensure they are securely fastened. If noise persists, contact customer support. Do not attempt to lubricate internal mechanisms yourself.

Problem	Possible Cause	Solution
Swing speed inconsistent	Child's weight exceeds limit for current speed setting; Low batteries.	Ensure child's weight is within the specified limit for swing mode (max 9 kg). Replace batteries.
Seat not stable in bouncer/rocker mode	Kickstand not engaged (bouncer) or not fully converted.	For bouncer mode, ensure the locking kickstand is fully extended and locked. For rocker mode, ensure the kickstand is disengaged.

SPECIFICATIONS

Model Number: BFH07

Brand: Fisher-Price

Gender: Unisex

Maximum Weight Capacity (Swing/Baby Seat): 9 kg (20 lbs)

Maximum Weight Capacity (Toddler Rocker): 18 kg (40 lbs)

Main Material: Plastic

Care Instructions: Machine washable and dryable seat cover

Batteries Required: Yes, 4 x D batteries (not included)

Product Dimensions (L x W x H): Approximately 20.3 x 45 x 71 cm (8 x 17.7 x 28 inches)

Item Weight: 6.35 kg (14 lbs)

Manufacturer: Mattel

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Fisher-Price website. For customer support, replacement parts, or further assistance, please contact Fisher-Price customer service directly. Contact details can typically be found on the product packaging or their official website.

You can visit the official Fisher-Price website for more information: www.fisher-price.com