

[Manuals.plus](#) /

› [W-KING](#) /

› W-KING X10 70W Wireless Bluetooth Speaker User Manual

W-KING X10

W-KING X10 70W Wireless Bluetooth Speaker User Manual

Model: X10 | Brand: W-KING

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your W-KING X10 70W Wireless Bluetooth Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from medical devices, as it may interfere with their operation.
- Ensure the charging port is dry before connecting the USB cable.
- Use only the provided USB charging cable or a certified equivalent.
- This speaker is IPX6 water-resistant, meaning it can withstand powerful water jets. Do not submerge it in water.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- W-KING X10 70W Wireless Bluetooth Speaker
- USB Charging Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Front view of the W-KING X10 70W Wireless Bluetooth Speaker. This image displays the speaker's robust design, featuring the main speaker grille and control panel area.

Control Panel (Typical Layout)

- **Power Button:** Press and hold to turn on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Play/Pause Button:** Press to play or pause audio.
- **Mode Button:** Press to switch between input modes (Bluetooth, AUX, TF Card, USB).
- **EQ Button:** Press to cycle through available equalizer modes.

Ports

- **USB Charging Port:** For charging the speaker's internal battery.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **TF Card Slot:** For playing audio directly from a TF (MicroSD) card.
- **USB Port:** For playing audio directly from a USB flash drive.

5. SETUP

5.1 Charging the Speaker

1. Connect the provided USB charging cable to the speaker's USB charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate, typically red, during charging. It will turn off or change color (e.g., blue/green) when fully charged.
4. A full charge provides approximately 7 to 20 hours of playback, depending on volume level and audio content.

5.2 Powering On/Off

- To turn on: Press and hold the **Power Button** for a few seconds until you hear an audible prompt or see an indicator light.
- To turn off: Press and hold the **Power Button** again for a few seconds.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED or audible prompt). If not, press the **Mode Button** to switch to Bluetooth mode or the **Bluetooth Button** to enter pairing.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "W-KING X10" from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator light will become solid blue.
5. You can now play audio from your device through the W-KING X10 speaker. The effective range is approximately 10 meters (33 feet).

6.2 AUX Input Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the **Mode Button** on the speaker until it switches to AUX mode.
4. Play audio from your external device.

6.3 TF Card / USB Drive Playback

1. Insert a TF (MicroSD) card or USB flash drive containing audio files into the respective slot on the speaker.
2. The speaker should automatically detect the storage device and begin playing audio. If not, press the **Mode Button** to cycle through modes until TF Card or USB mode is activated.
3. Use the Play/Pause, Volume Up/Next Track, and Volume Down/Previous Track buttons to control playback.

6.4 Equalizer (EQ) Modes

The W-KING X10 speaker offers different EQ modes to customize your audio experience.

- Press the **EQ Button** repeatedly to cycle through the available sound profiles (e.g., Bass Boost, Vocal, Standard).
- Select the mode that best suits your listening preference or music genre.

7. MAINTENANCE

7.1 Cleaning

- Wipe the speaker's exterior with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure all ports are dry before use or charging.

7.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to prolong its lifespan.

7.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the speaker connected to power for excessively long periods after it is fully charged.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device; speaker is not in pairing mode; too far from device.	Ensure Bluetooth is on your device. Press the Bluetooth button on the speaker to enter pairing mode. Move device closer to speaker (within 10m).
No sound.	Volume too low; incorrect input mode; device not playing audio.	Increase speaker and device volume. Press the Mode button to select the correct input. Ensure audio is playing on your source device.
Sound distortion.	Volume too high; low battery; poor audio source quality.	Reduce volume. Charge the speaker. Try a different audio source or file.

9. SPECIFICATIONS

Model Name	X10
Brand	W-KING
Output Power	70 Watts
Connectivity Technology	Bluetooth 5.0
Wireless Range	Up to 10 meters (33 feet)
Water Resistance	IPX6 (Splashproof, resistant to powerful water jets)
Battery Capacity	15600mAh
Playback Time	7-20 hours (varies with volume and content)
Audio Input Modes	Bluetooth, AUX, TF Card, USB Drive
Speaker Configuration	2 x 93mm Subwoofers, 2 x 31mm High-Frequency Speakers
Audio Output Mode	Stereo
Compatible Devices	Smartphones, Tablets, Laptops, Personal Computers
Included Components	USB Charging Cable
Manufacturer Reference	6662

10. WARRANTY AND SUPPORT

W-KING products are designed and manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the warranty card included with your product or visit the official W-KING website.

- **Online Support:** Visit [www.w-king.com](#) (example link, actual link may vary) for FAQs, product registration, and contact information.
- **Email Support:** support@w-king.com (example email, actual email may vary).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question