

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Invicta](#) /
- › [Invicta Pro Diver Chronograph Model 12932 User Manual](#)

Invicta 12932

Invicta Pro Diver Chronograph Model 12932 User Manual

Your guide to operating and maintaining your Invicta timepiece.

1. INTRODUCTION

Thank you for choosing an Invicta timepiece. This manual provides detailed instructions for the proper setup, operation, and maintenance of your Invicta Pro Diver Chronograph Model 12932 watch. To ensure optimal performance and longevity, please read this manual thoroughly before using your watch.

2. PRODUCT OVERVIEW

The Invicta Pro Diver Chronograph Model 12932 is a men's quartz watch featuring a blue textured dial, stainless steel case, and bracelet. It includes chronograph functions, a date display, and is water-resistant up to 200 meters.

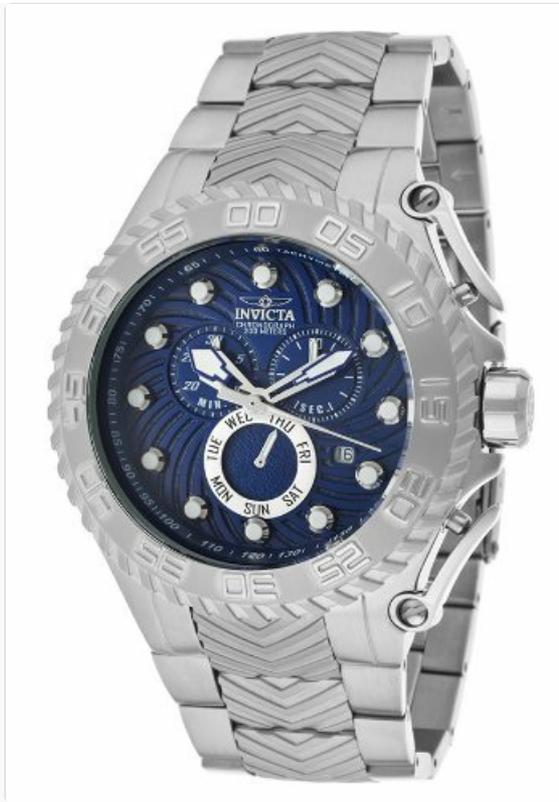


Figure 2.1: Front view of the Invicta Pro Diver Chronograph Model 12932.

Key Components

- **Crown:** Used for setting time and date.
- **Pushers:** Operate the chronograph functions.
- **Unidirectional Bezel:** Used for timing elapsed events, particularly useful for diving.
- **Chronograph Sub-dials:** Measure elapsed time in seconds, minutes, and days of the week.
- **Date Display:** Located at the 4 o'clock position.
- **Stainless Steel Case and Bracelet:** Durable and resistant to corrosion.
- **Mineral Crystal:** Protects the dial from scratches.



Figure 2.2: Rear view of the watch, highlighting the screw-down case back.



Figure 2.3: Side view of the watch, illustrating the crown and pushers.

3. SETUP

3.1 Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (located on the right side of the watch case) to position 2 for date adjustment, or position 3 for time adjustment.
2. **Set the date:** In position 2, turn the crown clockwise or counter-clockwise to set the correct date. Avoid setting the date between 9 PM and 3 AM, as this may damage the movement.
3. **Set the time:** In position 3, turn the crown to move the hands clockwise until the correct time is displayed. Ensure the AM/PM is correctly set by observing the date change.
4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.

3.2 Adjusting the Bracelet

The stainless steel bracelet can be adjusted by removing or adding links. This procedure requires specialized tools and should ideally be performed by a qualified watchmaker or jeweler to prevent damage to the bracelet or clasp.

4. OPERATING INSTRUCTIONS

4.1 Using the Chronograph Function

The chronograph allows for precise measurement of elapsed time.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph second, minute, and day sub-dials.
3. **Reset:** Press the lower pusher to reset the chronograph hands to their zero positions. The chronograph must be

stopped before it can be reset.

4.2 Using the Unidirectional Bezel

The unidirectional rotating bezel can be used to measure elapsed time up to 60 minutes. It rotates only counter-clockwise to prevent accidental increases in measured time, which is crucial for diving safety.

1. Rotate the bezel counter-clockwise to align the zero marker with the minute hand at the start of an event.
2. Read the elapsed time by noting the position of the minute hand against the bezel's scale.

4.3 Water Resistance

Your Invicta Pro Diver watch is water-resistant to 200 meters (20 ATM / 660 feet). This rating makes it suitable for professional marine activity and serious surface water sports, but not for saturation diving.

- Ensure the crown is fully pushed in before any contact with water.
- Do not operate the crown or pushers while the watch is wet or submerged.
- Rinse the watch with fresh water after exposure to salt water to prevent corrosion.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning will help maintain the appearance of your watch.

- Wipe the watch case and bracelet with a soft, damp cloth.
- For stainless steel, a mild soap solution can be used, followed by thorough rinsing and drying.
- Avoid using harsh chemicals or abrasive materials.

5.2 Battery Replacement

The quartz movement is powered by a battery. When the watch stops or the second hand begins to jump erratically (End-of-Life indicator), the battery needs to be replaced. It is recommended to have battery replacement performed by an authorized service center to ensure proper sealing and maintain water resistance.

5.3 Water Resistance Checks

The water resistance of your watch is not permanent and may be affected by aging gaskets or accidental impacts. It is recommended to have the water resistance checked annually by an authorized service center, especially if the watch is frequently exposed to water.

5.4 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace battery at an authorized service center.
Incorrect time/date	Time/date not set correctly, or crown is not fully pushed in.	Refer to Section 3.1 to reset time and date. Ensure crown is fully pushed in.
Chronograph hands do not reset to zero	Chronograph was not stopped before resetting.	Stop the chronograph first by pressing the upper pusher, then press the lower pusher to reset. If issue persists, consult a service center.
Condensation inside crystal	Loss of water resistance due to impact or aging gaskets.	Immediately take the watch to an authorized service center for inspection and repair.

7. SPECIFICATIONS



Figure 7.1: Watch face with scale, showing dimensions.

Feature	Detail
Brand	Invicta
Model Number	12932
Series	Pro Diver
Movement	Swiss Parts Chronograph Quartz
Case Material	Stainless Steel

Feature	Detail
Case Diameter	48 mm
Case Thickness	14 mm
Dial Color	Blue Textured
Crystal	Mineral
Bezel	Unidirectional
Crown	Push/Pull
Case Back	Screw-down
Band Material	Stainless Steel
Band Color	Silver
Band Width	26 mm
Band Length	Up to 9.5 inches
Clasp	Deployment with Safety
Water Resistance	20 ATM (200 meters / 660 feet)
Functions	Chronograph (30 min, 60 sec, days of week), Date Display at 4:00, Luminous Hands/Markers
Weight	262 g

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Invicta Pro Diver Chronograph Model 12932 watch comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Invicta website.

8.2 Customer Support

If you have any questions, require service, or need assistance with your Invicta watch, please contact Invicta customer support or an authorized service center. Contact information can typically be found on the official Invicta website or in your product packaging.

When contacting support, please have your watch model number (12932) and proof of purchase readily available.

© 2024 Invicta Watch Group. All rights reserved. This manual is for informational purposes only.