

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Globe](#) /
- > [Globe 1202 Knob Control User Manual](#)

Globe 1202

Globe 1202 Knob Control User Manual

Model: 1202 | Brand: Globe

INTRODUCTION

This manual provides comprehensive instructions for the proper installation, operation, and maintenance of the Globe 1202 Knob Control. This component is a genuine OEM replacement part designed for use with Globe kitchen and professional food equipment, including slicers, mixers, and scales. Adhering to these guidelines will help ensure the safety, reliability, and optimal performance of your equipment.

PRODUCT OVERVIEW

The Globe 1202 Knob Control is a durable, spherical black knob designed for precise control of various functions on compatible Globe equipment. It features a brass threaded insert for secure attachment to a control shaft.



Image: The Globe 1202 Knob Control, showcasing its spherical black design and the internal brass threaded insert for mounting.

SETUP AND INSTALLATION

Safety First: Before beginning any installation, ensure the equipment is powered off and disconnected from its power source to prevent electrical shock or injury.

1. **Identify the Shaft:** Locate the control shaft on your Globe equipment where the knob is to be installed. Ensure the shaft is clean and free of debris.
2. **Align the Knob:** Carefully align the threaded insert of the 1202 Knob Control with the corresponding threads on the equipment's control shaft.
3. **Thread On:** Gently turn the knob clockwise onto the shaft until it is securely fastened. Do not overtighten, as this may damage the knob or the shaft.
4. **Test Functionality:** Once installed, reconnect the equipment to power and test the knob's functionality to ensure it turns smoothly and operates the intended function correctly.

OPERATION

The Globe 1202 Knob Control is designed for intuitive operation. To adjust the corresponding function on your

equipment, simply grasp the knob and rotate it clockwise or counter-clockwise as required. Refer to your equipment's primary user manual for specific operational details related to the function controlled by this knob.

MAINTENANCE

- **Cleaning:** To clean the knob, wipe it with a soft, damp cloth. For stubborn grime, a mild, non-abrasive cleaner can be used. Ensure the knob is dry before operating the equipment. Avoid harsh chemicals or abrasive materials, which can damage the knob's finish.
- **Inspection:** Periodically inspect the knob for any signs of wear, cracks, or looseness. Ensure it remains securely attached to the shaft. If the knob becomes loose, gently re-tighten it.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Knob feels loose or wobbly.	Knob is not fully tightened onto the shaft.	Ensure equipment is off and disconnected. Gently tighten the knob clockwise until secure. Do not overtighten.
Knob does not turn smoothly or is stuck.	Debris or obstruction on the shaft; internal mechanism issue (less likely for a simple knob).	Ensure equipment is off and disconnected. Remove the knob and clean the shaft and the knob's interior. Reinstall. If the issue persists, consult a qualified technician or Globe support.

SPECIFICATIONS

- **Part Number:** 1202
- **Item Model Number:** 1202
- **Manufacturer:** Globe
- **Product Dimensions:** Approximately 6 x 4 x 4 inches
- **Item Weight:** Approximately 0.353 ounces
- **Item Package Quantity:** 1
- **Batteries Required:** No
- **First Available Date:** January 6, 2014

WARRANTY INFORMATION

Specific warranty details for the Globe 1202 Knob Control are not provided in this document. For information regarding warranty coverage, terms, and conditions, please refer to the documentation that accompanied your original Globe equipment or contact Globe directly.

SUPPORT

For technical assistance, replacement parts, or further inquiries regarding the Globe 1202 Knob Control or your Globe equipment, please contact Globe customer support. Refer to your equipment's main manual or the Globe official website for contact information.

