

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Instax Share Color Smartphone Printer SP-1 User Manual

Fujifilm Instax Share Printer SP-1

Fujifilm Instax Share Color Smartphone Printer SP-1 User Manual

Model: Instax Share Printer SP-1

1. INTRODUCTION

The Fujifilm Instax Share Color Smartphone Printer SP-1 allows users to print photos directly from their smartphone or tablet. This portable printer creates instant film prints from any picture stored on your device, utilizing its own Wi-Fi hotspot for seamless connectivity. It is designed for ease of use, offering various editing functions and templates through the dedicated INSTAX Share App.

2. SAFETY INFORMATION

- Do not open the back cover when film remains inside the printer. This can expose the film to light and render it unusable.
- Use only specified batteries (CR2 lithium batteries) or a compatible AC adapter.
- Keep the printer away from water or excessive moisture.
- Avoid exposing the printer to direct sunlight or high temperatures for extended periods.
- Do not attempt to disassemble or modify the printer. Refer all servicing to qualified personnel.
- Keep out of reach of small children.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Fujifilm Instax Share Smartphone Printer SP-1
- 2 x CR2 Batteries

4. SETUP

4.1 Inserting Batteries

The Instax Share SP-1 printer operates on two CR2 lithium batteries. To insert them:

1. Locate the battery compartment cover on the printer.
2. Open the cover and insert the two CR2 batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.





Figure 4.1: Front view of the Fujifilm Instax Share SP-1 printer with film partially ejected. The printer is white with green LED indicators on top.

4.2 Loading Film

The printer uses Instax Mini Instant Film. To load a film pack:

1. Ensure the printer is powered off.
2. Open the film compartment cover on the back of the printer.
3. Align the yellow mark on the film pack with the yellow mark on the printer, then gently insert the film pack.
4. Close the film compartment cover. The printer will automatically eject the black protective sheet.



Figure 4.2: The Fujifilm Instax Share SP-1 printer with a film pack visible and several printed Instax photos scattered around it, demonstrating the output.

4.3 Installing the INSTAX Share App

To use the printer, you must install the dedicated INSTAX Share App on your smartphone or tablet. The app is compatible with iOS (version 5.0 or later) and Android devices.

- Search for "INSTAX Share" in your device's app store (Apple App Store for iOS, Google Play Store for Android).
- Download and install the app.

5. OPERATING THE PRINTER

5.1 Connecting to Your Smartphone/Tablet

The Instax Share SP-1 creates its own Wi-Fi hotspot for direct connection.

1. Power on the Instax Share SP-1 printer. The Wi-Fi indicator light will illuminate.
2. On your smartphone or tablet, go to Wi-Fi settings.
3. Select the Wi-Fi network named "INSTAX-XXXXXX" (where XXXXXX is a unique identifier for your printer).
4. Open the INSTAX Share App. The app will automatically detect the connected printer.



Figure 5.1: The Fujifilm Instax Share SP-1 printer wirelessly connected to a smartphone, with a photo displayed on the phone screen and a printed photo emerging from the printer.

5.2 Printing Photos

Once connected, you can select photos from your device's gallery to print.

1. In the INSTAX Share App, select the photo you wish to print.
2. Use the app's editing functions to rotate, zoom, or adjust the image as needed.
3. Tap the "Print" button within the app. The printer will begin processing and ejecting the photo.

5.3 Using Templates and Editing Functions

The INSTAX Share App offers various templates and editing options to enhance your prints:

- **Real Time Template:** Adds date, time, location, and weather conditions to your print.
- **Limited Edition Template:** Adds a unique serial number to your print.
- **SNS (Social Networking Service) Template:** Integrates profile pictures and "likes" from Facebook or Instagram.
- **Square (Add Text) Template:** Allows adding custom text to your square-formatted photos.
- **Standard Template:** Prints the photo without additional overlays.

6. MAINTENANCE

6.1 Cleaning the Printer

To maintain optimal performance and appearance:

- Wipe the exterior of the printer with a soft, dry cloth.
- Do not use alcohol, thinner, or other volatile solvents.
- Keep the film ejection slot clear of dust and debris.

6.2 Storage

When not in use, store the printer in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not power on.	Batteries are dead or incorrectly inserted.	Replace batteries with new CR2 batteries, ensuring correct polarity.
Cannot connect to printer via Wi-Fi.	Incorrect Wi-Fi selection; printer not in range; app issue.	Ensure you select the correct "INSTAX-XXXXXX" network. Move closer to the printer. Restart the app and printer.
Photos are not printing or are blank.	No film loaded; film pack exposed to light; printer error.	Load a new film pack. Ensure film compartment is not opened once film is loaded. Check printer's LED indicators for error codes.
Print quality is poor.	Old or expired film; dirty print head; environmental factors.	Use fresh Instax Mini film. Ensure film is stored correctly. Clean the printer as per maintenance instructions.

8. SPECIFICATIONS

Feature	Detail
Model Name	Instax Share Printer SP-1
Brand	Fujifilm
Connectivity Technology	Wi-Fi

Feature	Detail
Printing Technology	Thermal
Compatible Devices	Smartphones (iOS 5.0+, Android)
Print Media	Instax Mini Instant Film (Glossy film)
Sheet Size	2.4 x 1.8 inches (Film size: 86mm x 54mm, Image size: 62mm x 46mm)
Maximum Color Print Resolution	800x600 dpi
Maximum Black and White Print Resolution	254 dpi
Power Source	2 x CR2 batteries (included)
Item Weight	9 ounces (approx. 255g)
Product Dimensions	4 x 1.65 x 4.8 inches (approx. 101.6 x 41.9 x 121.9 mm)

9. WARRANTY AND SUPPORT

This Fujifilm Instax Share Color Smartphone Printer SP-1 typically comes with a 12-month manufacturer's warranty from the date of purchase. For warranty claims, technical support, or service inquiries, please contact Fujifilm customer support through their official website or the contact information provided with your product packaging. For additional resources and FAQs, visit the official Fujifilm website:www.fujifilm.com

© 2024 Fujifilm Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question