

[Manuals.plus](#) /

› [Silvercrest](#) /

› Silvercrest Full HD Action Camcorder Instruction Manual

Silvercrest sc-1hd

Silvercrest Full HD Action Camcorder

INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for purchasing the Silvercrest Full HD Action Camcorder. This manual provides essential information on how to set up, operate, and maintain your new device. Please read this manual carefully before using the camcorder to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

Key Features:

- Super wide-angle lens, ideal for action shots
- 2-in-1: Full High-Definition video camera and digital photo camera
- Extensive accessories: includes holders for bicycle, helmet, etc.
- Waterproof up to 60 m with robust housing
- Micro-USB port with charging function
- Integrated OLED status indicator, microphone, and external microphone connection
- Includes 4 GB micro-SD memory card

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Silvercrest Action Camcorder.



Figure 2.1: Front view of the Silvercrest Action Camcorder enclosed in its transparent waterproof housing. The lens is prominently visible at the center, surrounded by a black ring, with a yellow top section on the housing. A mounting bracket is attached at the bottom.



Figure 2.2: Rear view of the Silvercrest Action Camcorder within its waterproof housing. The back panel of the housing features a black mounting plate with four screws, designed for secure attachment to various accessories. The yellow top section of the housing is also visible.



Figure 2.3: The Silvercrest Action Camcorder removed from its waterproof housing. This view highlights the camera's grey body, the main lens, and the side ports including 'MIC IN' for an external microphone and 'DC IN' for power/charging via Micro USB.

4.1 Powering On/Off

- **To Power On:** Press and hold the Power button until the OLED display illuminates.
- **To Power Off:** Press and hold the Power button until the display turns off.

4.2 Mode Selection

Use the Mode button to switch between video recording mode and digital photo mode. The current mode will be indicated on the OLED status display.

4.3 Video Recording

1. Switch to video recording mode.
2. Press the Record button to start recording. The recording indicator will flash.
3. Press the Record button again to stop recording.

Available Video Resolutions:

- Full HD: 1920 x 1080 (30 frames/s)
- 1280 x 960 (30 frames/s)
- 1280 x 720 (60 frames/s)

4.4 Taking Photos

1. Switch to digital photo mode.
2. Frame your shot.
3. Press the Shutter button to take a photo.

Self-timer Function: The camera features a 10-second self-timer for photos.

4.5 Waterproof Usage

Ensure the camcorder is securely placed inside its waterproof housing and all seals are properly closed before submerging. The housing is designed to protect the camera up to a depth of 60 meters.

4.6 Connecting to a PC

Use the Micro USB cable to connect the camcorder to your computer. The camcorder will appear as a removable storage device, allowing you to transfer videos and photos.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth. For the waterproof housing, rinse with fresh water after saltwater use and dry thoroughly.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid fully discharging the battery for extended periods.
- **Storage:** When not in use, store the camcorder in a protective case or bag to prevent dust and scratches. Remove the battery if storing for a long period.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camcorder does not power on.	Battery is drained or not inserted correctly.	Charge the battery. Ensure the battery is inserted with correct polarity.
Cannot record video/take photos.	Memory card is full or not inserted.	Insert a memory card. Delete unnecessary files or replace with an empty card.
Poor video/photo quality.	Lens is dirty or lighting conditions are poor.	Clean the lens. Ensure adequate lighting for your shots.
Computer does not recognize camcorder.	USB cable issue or driver problem.	Try a different USB port or cable. Ensure your computer meets the system requirements.

7. SPECIFICATIONS

Feature	Detail
Brand	Silvercrest
Manufacturer	Targa GmbH
Model Name	sc-1hd
Item Model Number	sc-1hd
Video Capture Resolution	1080p (Full HD)
Video Capture Format	MP4
Connectivity Technology	USB
Lens Type	Wide-angle
Water Resistance Level	Waterproof (up to 60m)
Image Stabilization	Digital
Included Components	4 GB micro SD memory card, micro-USB cable, battery, manual, bicycle and helmet holders
Dimensions (W x H x D)	Approx. 6 x 4.3 x 4.3 cm (with lens)
Weight	Approx. 77 g
Supported Memory Cards	Micro-SD/SDHC up to 32 GB

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official website of the manufacturer, Targa GmbH. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question