

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PHILIPS](#) /

› [Philips AJ3400/37 Clock Radio User Manual](#)

PHILIPS AJ3400/37

Philips AJ3400/37 Clock Radio User Manual

Model: AJ3400/37

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Philips AJ3400/37 Clock Radio. Please read these instructions carefully before using the device.



Figure 1: Philips AJ3400/37 Clock Radio. This image shows the black clock radio from a slight angle, displaying the time "12:38" in bright green LED digits on its reflective black screen. The Philips logo is visible below the time.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Philips AJ3400/37 Clock Radio
- Owner's Manual

SETUP

1. Power Connection

1. Connect the AC power cord to the clock radio.
2. Plug the other end of the power cord into a wall outlet.

2. Battery Backup Installation

The clock radio requires 2 AA batteries (not included) for time and alarm settings backup during power outages.

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 2 AA batteries, observing the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

3. Antenna Setup

For optimal FM radio reception, fully extend the FM wire antenna. Adjust its position for the best signal.

OPERATING INSTRUCTIONS

1. Setting the Clock

1. Press and hold the **TIME SET** button until the hour digits flash.
2. Press the **HOUR** button repeatedly to set the hour.
3. Press the **MINUTE** button repeatedly to set the minute.
4. Press **TIME SET** again to confirm and exit.

2. Radio Operation

The clock radio features FM digital tuning with presets.

1. Press the **RADIO ON/OFF** button to turn on the radio.
2. Press the **FM** button to select FM band.
3. To tune to a station:
 - Press **TUNE +** or **TUNE -** to manually adjust the frequency.
 - Press and hold **TUNE +** or **TUNE -** for automatic station search.
4. To save a preset station:
 - Tune to the desired station.
 - Press and hold the **PRESET** button until the preset number flashes.
 - Press **PRESET +** or **PRESET -** to select a preset number.
 - Press **PRESET** again to confirm.

5. To recall a preset station, press **PRESET +** or **PRESET -** repeatedly.

6. Adjust volume using the **VOLUME +** or **VOLUME -** buttons.

3. Setting Alarms (Dual Alarm)

The unit features dual alarms, allowing two separate wake-up times.

1. To set Alarm 1:

- Press and hold the **ALARM 1 SET** button until the hour digits flash.
- Press **HOUR** and **MINUTE** buttons to set the alarm time.
- Press **ALARM 1 SET** again. The alarm source (Buzzer or Radio) will flash.
- Press **ALARM 1 MODE** to select **BUZZER** or **RADIO**.
- Press **ALARM 1 SET** to confirm.

2. To set Alarm 2, follow the same steps using the **ALARM 2 SET** and **ALARM 2 MODE** buttons.

3. To activate/deactivate an alarm, press the respective **ALARM 1 ON/OFF** or **ALARM 2 ON/OFF** button. An indicator will light up when the alarm is active.

4. When an alarm sounds, press the **SNOOZE** button for a temporary pause. The alarm will sound again after approximately 9 minutes.

5. To turn off an alarm completely, press the respective **ALARM ON/OFF** button.

4. Sleep Timer

The sleep timer allows the radio to play for a set duration before automatically turning off.

1. Press the **SLEEP** button repeatedly to cycle through available sleep times (e.g., 120, 90, 60, 30, 15 minutes, or OFF).

2. The radio will turn off automatically after the selected time.

MAINTENANCE

Cleaning

- Disconnect the power cord before cleaning.
- Use a soft, damp cloth to clean the exterior of the unit.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the surface.

Battery Replacement

- Replace backup batteries annually or when the battery low indicator appears.
- Dispose of old batteries according to local regulations.

TROUBLESHOOTING

Problem	Solution
No power	Ensure the AC power cord is securely plugged into the wall outlet and the unit. Check if the wall outlet is functioning by plugging in another device.

Problem	Solution
Poor radio reception	Fully extend and reposition the FM wire antenna. Move the unit away from other electronic devices that may cause interference.
Alarm does not sound	Ensure the alarm is activated (indicator light is on). Verify the alarm time is set correctly. Check the alarm volume level if set to radio.
Time/settings lost after power outage	Install 2 AA batteries for backup. Replace old backup batteries.

SPECIFICATIONS

Brand	Philips
Model Number	AJ3400/37
Color	Black
Display Type	LED-backlit
Power Source	AC Power, Battery Powered (for backup)
Batteries Required	2 AA batteries (for backup)
Mounting Type	Tabletop
Product Dimensions	4.05 x 7.52 x 2.74 inches
Item Weight	11.7 ounces (0.73 Pounds)
Alarm Clock Features	Dual alarm, Wake to radio or buzzer, Snooze function
Radio Features	FM digital tuning with presets

WARRANTY INFORMATION

For warranty details, please refer to the warranty card included with your product or visit the official Philips support website. Keep your purchase receipt as proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or to register your product, please visit the Philips support website or contact customer service:

- **Philips Support Website:** www.philips.com/support
- Refer to the contact information provided in your product documentation for regional support numbers.

