

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Naxa](#) /

› [NAXA Electronics NF-1000 10.1-Inch Digital Photo Frame User Manual](#)

## Naxa NF-1000

# NAXA Electronics NF-1000 10.1-Inch Digital Photo Frame User Manual

Model: NF-1000

## INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your NAXA Electronics NF-1000 10.1-Inch TFT LCD Digital Photo Frame. Please read this manual thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury. Refer to the full safety guidelines provided in the packaging for detailed information.

## PACKAGE CONTENTS

- NAXA NF-1000 10.1-Inch Digital Photo Frame
- AC Power Adapter (AC 100-240V, DC 5V, 1A)
- User Manual

## PRODUCT OVERVIEW

The NAXA NF-1000 is a 10.1-inch digital photo frame designed to display your digital JPEG photos. It features an LED-backlit TFT LCD screen with a resolution of 1024 x 600 pixels. The frame supports various memory cards and USB memory sticks for convenient photo playback. It also includes slideshow, clock, and calendar modes, along with a small built-in memory for a few favorite photos.

## Physical Features



**Image 1:** Side view of the NAXA NF-1000 Digital Photo Frame, illustrating the adjustable stand and accessible side ports for connectivity.



**Image 2:** Rear view of the NAXA NF-1000 Digital Photo Frame, highlighting the control buttons, memory card slot, USB port, and DC power input.

## SETUP

- Insert Memory Card:** Locate the SD/SDHC memory card slot or USB port on the back of the frame. Insert your compatible SD/SDHC card with the gold contacts facing up, or plug in a USB memory stick. Ensure the memory card is formatted correctly and contains JPEG photo files.
- Connect Power Adapter:** Find the DC IN power socket on the back of the frame. Plug the barrel connector of the provided AC power adapter firmly into this socket.
- Power On:** Once the power adapter is connected, the frame will automatically power on and begin displaying photos from the inserted memory card or USB stick in a slideshow format.

For a visual guide on setup and basic operation, please watch the video below:

Your browser does not support the video tag.

**Video:** This video demonstrates the process of inserting a memory card, connecting the power adapter, and basic photo display functions on a similar NAXA digital photo frame. While the video shows model NF-900, the steps are generally applicable to the NF-1000.

## OPERATING INSTRUCTIONS

- Automatic Slideshow:** Upon powering on and detecting a compatible memory source, the frame will automatically start a slideshow of your JPEG photos.
- Manual Photo Browsing:** To pause the slideshow and browse photos manually, press the 'Play/Pause' button (often indicated by a triangle or two vertical bars). Use the arrow keys (Up, Down, Left, Right) on the back of the frame to navigate through your photos.
- Power On/Off:** To turn the photo frame off, press the 'Power' button (usually a circle with a vertical line) located on the back of the frame. Press it again to turn the frame back on.
- Modes:** The frame supports various modes including slideshow, clock, and calendar. Refer to the on-screen menu (accessible via the 'Menu' or 'Enter' button) for specific settings and navigation within these modes.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the screen and frame. Do not use liquid cleaners or abrasive materials, as they may damage the surface.
- Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place away from direct sunlight.
- Handling:** Handle the frame with care to avoid dropping or impacting the screen.

## TROUBLESHOOTING

- No Power:** Ensure the AC power adapter is securely connected to both the frame and a working power outlet.
- No Photos Displaying:** Verify that the memory card or USB stick is inserted correctly and contains compatible JPEG files. Check the file format and ensure the storage device is not corrupted.
- Image Quality Issues:** Ensure your photos are of sufficient resolution for the frame's display (1024 x 600 pixels for optimal clarity).
- Frame Unresponsive:** Disconnect the power adapter, wait a few seconds, and then reconnect it to

perform a soft reset.

## SPECIFICATIONS

Feature	Detail
Model Number	NF-1000
Screen Size	10.1-Inch
Display Type	TFT LCD with LED Backlight
Resolution	1024 x 600 pixels
Supported File Types	JPEG
Memory Card Support	SD/SDHC
USB Support	USB Memory Sticks
Power Input	AC 100-240V (DC 5V, 1A)
Product Dimensions	10.77 x 7.34 x 1 inches
Item Weight	16 ounces

## WARRANTY INFORMATION

For detailed warranty information regarding your NAXA Electronics NF-1000 Digital Photo Frame, please refer to the warranty card included with your product or visit the official NAXA Electronics website.

## SUPPORT

If you require further assistance or have questions not covered in this manual, please visit the official NAXA Electronics website for support resources and contact information: [www.naxa.com](http://www.naxa.com)