

Toyota Camry


2014 Toyota Camry with Display Audio Owners Manual

Your comprehensive guide to operating and maintaining your vehicle.

INTRODUCTION

Welcome to the world of Toyota Camry. This manual provides detailed instructions and important information regarding the operation, features, and maintenance of your 2014 Toyota Camry, including its Display Audio system. To ensure safe and optimal performance, please read this manual thoroughly and keep it in your vehicle for future reference. Understanding your vehicle's functions will enhance your driving experience and help maintain its longevity.

For your safety, pay close attention to all warnings and cautions throughout this manual. These are designed to prevent personal injury or damage to your vehicle.

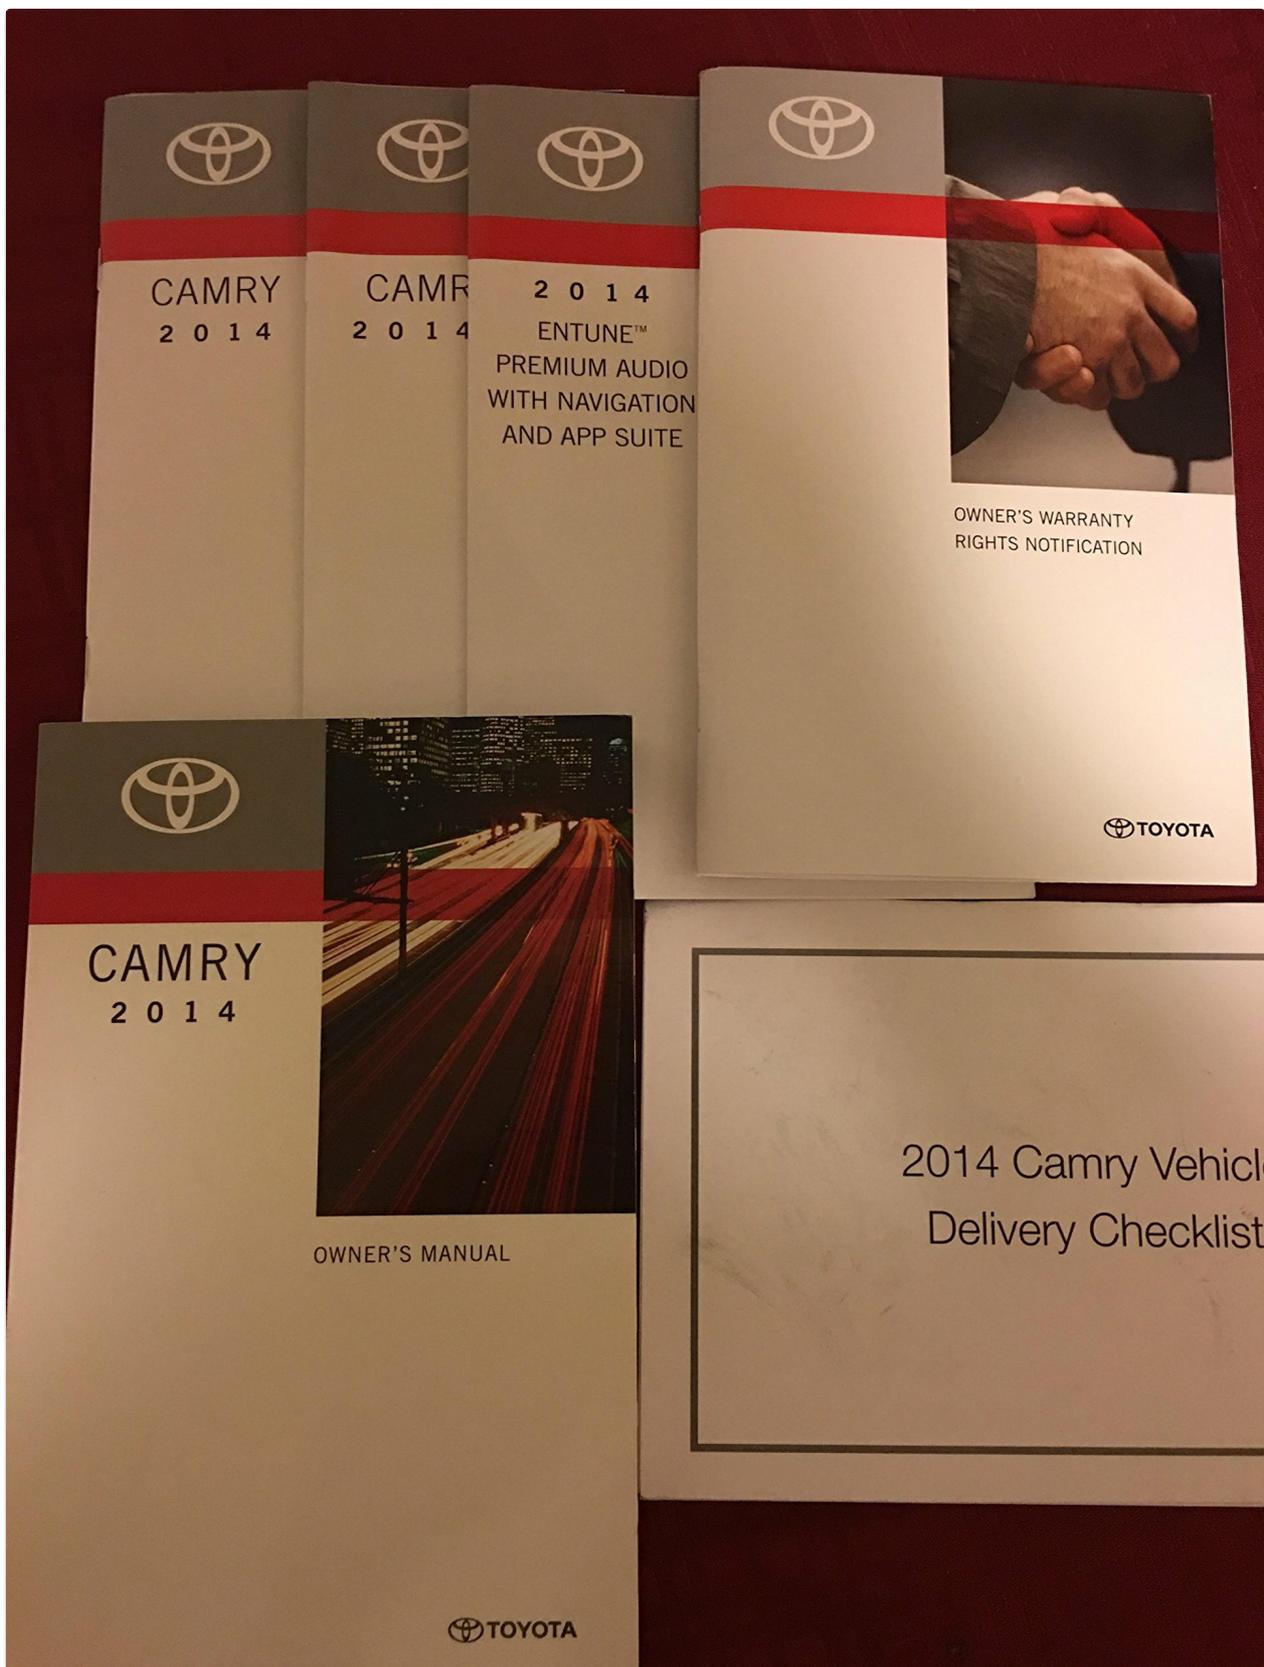

This image shows the cover of the official owners manual for the 2014 Toyota Camry, featuring the vehicle model and branding. It serves as a visual representation of the comprehensive guide contained within.

SETUP AND INITIAL FAMILIARIZATION

Before driving your Camry, take time to familiarize yourself with its controls and features. Proper setup ensures comfort and safety.

Adjusting Seats and Steering Wheel

- **Seat Position:** Adjust the driver's seat forward or backward, and the seatback angle, to achieve a comfortable and safe driving position. Ensure you can easily reach the pedals and have a clear view of the road and instrument panel.
- **Steering Wheel:** Adjust the steering wheel for both tilt and telescopic position to ensure a comfortable grip and clear view of the instrument cluster.

Mirror Adjustment

- **Rearview Mirror:** Adjust the interior rearview mirror to provide a clear view of the area directly behind your vehicle.
- **Side Mirrors:** Adjust the exterior side mirrors to minimize blind spots. The driver's side mirror should show a small portion of the vehicle's side, while the passenger side mirror should be adjusted similarly.

OPERATING YOUR VEHICLE

This section covers the fundamental aspects of operating your 2014 Toyota Camry.

Starting and Stopping the Engine

- **Key Ignition:** Insert the key into the ignition switch. Turn the key to the 'ON' position, then to 'START'. Release the key once the engine starts.
- **Push Button Start (if equipped):** With the brake pedal depressed, press the 'ENGINE START/STOP' button. To stop the engine, ensure the vehicle is in 'PARK' and press the button again.

Driving Features

- **Automatic Transmission:** Shift the lever to 'D' for normal driving. Use 'R' for reverse, 'P' for park, and 'N' for neutral.
- **Cruise Control:** To activate, press the 'ON/OFF' button on the steering wheel. Accelerate to your desired speed, then push the lever down to 'SET'.

Display Audio System

Your Camry's Display Audio system provides entertainment, communication, and navigation (if equipped) features.

- **Power On/Off:** Press the 'PWR/VOL' knob to turn the system on or off. Rotate to adjust volume.
- **Radio:** Select 'Audio' on the screen, then choose 'FM' or 'AM'. Use the 'Tune' or 'Seek' buttons to find stations.
- **Media Playback:** Connect a USB device or Bluetooth-enabled device. Select 'Audio' and then the appropriate source (USB, Bluetooth Audio).
- **Bluetooth Connectivity:** To pair a phone, go to 'Setup' > 'Bluetooth' > 'Add New Device'. Follow the on-screen prompts and your phone's instructions.
- **Navigation (if equipped):** Access the navigation system by pressing the 'MAP/NAV' button. Enter destinations using the on-screen keyboard or voice commands.

Climate Control

Adjust the temperature, fan speed, and air distribution using the controls located on the center console. Use the 'A/C' button to activate the air conditioning and 'RECIRC' to recirculate cabin air.

MAINTENANCE

Regular maintenance is crucial for the safety, reliability, and longevity of your Toyota Camry.

Scheduled Maintenance

- Refer to your separate *Warranty and Maintenance Guide* for the recommended service schedule based on mileage or time intervals.
- Regularly check fluid levels, tire pressure, and lighting.

Fluid Checks

- **Engine Oil:** Check the oil level using the dipstick when the engine is warm and turned off. Add oil if the level is below the 'LOW' mark.
- **Coolant:** Ensure the coolant level is between the 'FULL' and 'LOW' marks in the reservoir when the engine is cold.
- **Brake Fluid:** The brake fluid level should be between the 'MAX' and 'MIN' lines on the reservoir.
- **Windshield Washer Fluid:** Keep the reservoir filled for clear visibility.

Tire Care

- **Tire Pressure:** Check tire pressure regularly, especially before long trips, using a reliable gauge. Refer to the tire placard on the driver's side door jamb for recommended pressures.
- **Tire Rotation:** Rotate tires every 5,000 to 7,500 miles to promote even wear and extend tire life.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Camry.

Warning Lights

- **Check Engine Light:** If this light illuminates, it indicates a potential issue with the engine or emissions system. Consult a Toyota dealer for diagnosis.
- **Oil Pressure Warning Light:** If this light comes on while driving, pull over safely and turn off the engine immediately. Check the oil level. Do not drive if the oil level is low or the light remains on.
- **Battery/Charging System Warning Light:** Indicates a problem with the charging system. Have the system inspected by a qualified technician.

Common Issues

- **Engine Won't Start:** Check battery terminals for corrosion, ensure the battery is charged, and verify the vehicle is in 'PARK' or 'NEUTRAL'.
- **Flat Tire:** Refer to the spare tire and jack instructions in your vehicle for proper replacement procedures.
- **Display Audio System Malfunction:** Try restarting the vehicle. If the issue persists, consult your Toyota dealer.

SPECIFICATIONS

General specifications for the 2014 Toyota Camry (may vary by trim level and region).

Feature	Specification
Engine Type	2.5L 4-Cylinder or 3.5L V6 (depending on model)
Fuel Tank Capacity	Approximately 17 gallons (64 liters)
Transmission	6-speed automatic
Overall Length	Approximately 190.9 inches (4849 mm)
Overall Width	Approximately 71.7 inches (1821 mm)
Overall Height	Approximately 57.9 inches (1470 mm)

WARRANTY INFORMATION

Your 2014 Toyota Camry is covered by a comprehensive warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the separate *Warranty and Maintenance Guide* provided with your vehicle. This guide contains specific details on basic coverage, powertrain coverage, and emissions control system warranties.

It is important to adhere to the recommended maintenance schedule to ensure your warranty remains valid.

CUSTOMER SUPPORT

Should you have any questions, require assistance, or need to schedule service for your Toyota Camry, please contact your authorized Toyota dealer. They are equipped with trained technicians and genuine Toyota parts to provide the best service for your vehicle.

You can also visit the official Toyota website for additional resources, FAQs, and contact information for Toyota Customer Experience.

- **Toyota Official Website:** www.toyota.com
- **Locate a Dealer:** Use the dealer locator tool on the official website to find the nearest authorized Toyota service center.