

## Sony DSCW800

# Sony DSCW800 20.1 MP Digital Camera Instruction Manual

Model: DSCW800/B

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Camera Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

The Sony DSCW800/B is a compact 20.1 MP digital camera designed for ease of use, featuring a 5x optical zoom lens and 720p HD video recording capabilities. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using your camera. Failure to do so may result in injury or damage to the device.

- Do not expose the camera to water or moisture.
- Avoid extreme temperatures.
- Use only Sony-approved batteries and accessories.
- Keep out of reach of children.
- Do not attempt to disassemble or modify the camera.

## 3. PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Sony Cyber-Shot DSC-W800 Digital Camera
- NP-BN Rechargeable Lithium-Ion Battery
- AC Adaptor AC-UB10C
- Wrist Strap
- Multi USB Cable
- Instruction Manual (this document)

## 4. CAMERA OVERVIEW

Familiarize yourself with the various parts of your Sony DSCW800 camera.

### Front View



Figure 4.1: Front view of the camera, highlighting the lens, flash, and brand logo.

### Rear View



Figure 4.2: Rear view of the camera, displaying the 2.7-inch LCD screen and navigation buttons.

## Side View with Ports



Figure 4.3: Side view of the camera, illustrating the USB port for data transfer and charging.

## 5. SETUP

### 5.1 Inserting the Battery

1. Open the battery/memory card cover located on the bottom of the camera.
2. Insert the NP-BN battery with the correct orientation, ensuring the contacts align.
3. Close the cover securely.

### 5.2 Charging the Battery

1. Connect the Multi USB cable to the camera's USB port.
2. Connect the other end of the USB cable to the AC Adaptor AC-UB10C.
3. Plug the AC Adaptor into a wall outlet. The charge lamp will illuminate during charging.
4. Charging is complete when the charge lamp turns off. The camera also supports USB charging directly from a computer.

### 5.3 Inserting a Memory Card

1. Open the battery/memory card cover.
2. Insert a compatible memory card (SD/SDHC/SDXC or Memory Stick Duo/Pro Duo/Pro-HG Duo) into the slot until it clicks into place. Ensure the correct orientation.
3. Close the cover securely.

## 5.4 Initial Settings (Date/Time)

Upon first power-on or after the battery has been removed for an extended period, you may need to set the date, time, and language. Follow the on-screen prompts to configure these settings.

## 6. OPERATING THE CAMERA

---

### 6.1 Power On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.

### 6.2 Taking Photos

The DSCW800 offers various modes for capturing still images:

- **Intelligent Auto:** The camera automatically detects the scene and adjusts settings for optimal results.
- **Easy Mode:** Simplifies the menu and settings for basic point-and-shoot operation.
- **Scene Selection (SCN):** Choose from various preset scene modes to optimize settings for specific conditions, including High-sensitivity, Night Scene, Night Portrait, Landscape, Portrait, Beach, Snow, Gourmet, and Pet.
- **Panorama Shot:** Capture wide panoramic images by panning the camera across the scene.
- **SteadyShot:** Reduces blur in photos, especially in low light or when zooming.

### 6.3 Recording Videos

To record video, press the dedicated **MOVIE** button. The camera records in 720p HD (1280x720) at 30 frames per second. You can use the optical zoom during video recording.

### 6.4 Using the Flash

The built-in flash can be activated in various modes to provide additional illumination in dark environments. Flash modes include Advanced Flash, Auto, Flash On, Off, and Slow Sync. Access flash settings via the menu.

### 6.5 Exposure Compensation

Adjust the exposure compensation (EV) from -2 to +2 in 1/3-stop increments to make your photos darker or lighter than the camera's automatic exposure setting.

### 6.6 Autofocus Modes

The camera features several autofocus modes:

- **Multi-point AF:** Focuses on multiple points in the frame.
- **Center-weighted AF:** Prioritizes focus on the center of the frame.
- **Tracking Focus:** Maintains focus on a moving subject.
- **Face Tracking Focus:** Detects and focuses on human faces.

### 6.7 Self-Timer

The self-timer function allows you to delay the shutter release. Options include 10 seconds, 2 seconds, and self-portrait modes for one or two people, which automatically trigger the shutter after detecting faces.

## 7. MAINTENANCE

### 7.1 Cleaning the Camera

- **Lens:** Use a soft, dry cloth or a lens brush to gently remove dust. For stubborn smudges, use a lens cleaning solution on a microfiber cloth.
- **LCD Screen:** Wipe gently with a soft, dry cloth. Avoid pressing hard on the screen.
- **Camera Body:** Use a soft, dry cloth to wipe away dust and fingerprints. Do not use harsh chemicals.

### 7.2 Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.

## 8. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

- **Camera does not turn on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check if SteadyShot is enabled. Ensure proper focus by half-pressing the shutter button before fully pressing. Clean the lens if smudged.
- **Battery drains quickly:** Reduce screen brightness. Turn off the camera when not in use.
- **Memory card error:** Ensure the memory card is correctly inserted and not damaged. Try formatting the card (this will erase all data).

For more complex issues, consult the detailed troubleshooting section in the full instruction manual or contact Sony support.

## 9. SPECIFICATIONS

|                     |  |
|---------------------|--|
| Sensor Type         | 20.1 MP Super HAD CCD (1/2.3-inch)                 |
| Optical Zoom        | 5x   |
| Lens                | Sony Lens, f=4.6-23 mm (35mm Equivalent: 26-130mm) |
| Maximum Aperture    | F3.2 (W) – 6.4 (T)                                 |
| Image Stabilization | Optical SteadyShot                                 |
| LCD Screen          | 2.7 Inches, 230,000 dots                           |
| ISO Range           | Auto, 100, 200, 400, 800, 1600, 3200               |
| Video Recording     | HD 720p (1280x720 @ 30fps)                         |
| Storage Media       | SD/SDHC/SDXC, Memory Stick Duo/Pro Duo/Pro-HG Duo  |
| Connectivity        | USB 2.0  |
| Battery Type        | NP-BN Lithium-Ion                                  |
| Weight              | 8.8 ounces   |
| Color               | Black  |

## 10. WARRANTY & SUPPORT

### 10.1 Warranty Information


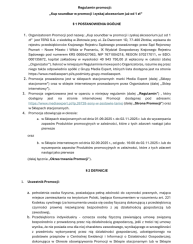


This Sony DSCW800 digital camera comes with a 1-year limited warranty covering both labor and parts. Please retain your proof of purchase for warranty claims.


### 10.2 Product Support

For additional support, frequently asked questions, software downloads, or service inquiries, please visit the official Sony website or contact an authorized Sony service center.

You can also visit the [Sony Store on Amazon](#) for more product information and accessories.

### Related Documents - DSCW800

|   |  |
|---|--|
|    | <p><a href="#">Sony DSC-WX350 Digital Camera Instruction Manual</a></p> <p>Comprehensive guide for the Sony DSC-WX350 digital camera, covering setup, basic operations, shooting modes, playback, software integration, specifications, and important safety information.</p>  |
|   | <p><a href="#">Regulamin promocji: Kup soundbar Sony i zyskaj akcesorium od 1 zł</a></p> <p>Oficjalny regulamin promocji TERG S.A. (Media Expert) 'Kup soundbar Sony i zyskaj akcesorium już od 1 zł!'. Szczegóły dotyczące produktów, dat i zasad uczestnictwa.</p>   |
|  | <p><a href="#">Sony HCD-GNZ55D Service Manual - DVD Deck Receiver</a></p> <p>This service manual provides comprehensive technical information for the Sony HCD-GNZ55D DVD Deck Receiver, covering specifications, disassembly procedures, electrical and mechanical adjustments, circuit diagrams, and a detailed parts list for repair and maintenance.</p> |
|  | <p><a href="#">Sony HCD-MDX10 Service Manual</a></p> <p>Detailed service manual for the Sony HCD-MDX10 Compact Disc Deck Receiver, covering specifications, disassembly, service modes, adjustments, diagrams, and parts lists.</p>  |

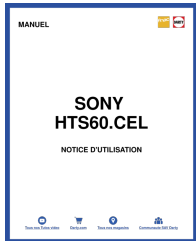

### [Manuel d'utilisation Sony HTS60.CEL : Guide complet pour votre système Home Cinema](#)

Manuel d'utilisation complet pour le système Home Cinema Sony HTS60.CEL (BRAVIA Theatre System 6). Découvrez l'installation, la configuration via l'application Sony | BRAVIA Connect, la connectivité HDMI et Bluetooth, les réglages audio, le dépannage et les spécifications techniques. Idéal pour améliorer votre expérience de divertissement à domicile.



### [Sony HT-S400 Sound Bar Bruksanvisning](#)

Denna bruksanvisning ger detaljerade instruktioner för installation, anslutning och användning av Sony HT-S400 soundbar. Lär dig hur du optimerar ljudupplevelsen och felsöker vanliga problem.