

[Manuals.plus](#) /

› [Breville](#) /

› Breville BMO734XL Quick Touch Countertop Microwave User Manual

## Breville BMO734XL

# Breville BMO734XL Quick Touch Countertop Microwave User Manual

Model: BMO734XL

## INTRODUCTION

---

This manual provides instructions for the safe and efficient operation of your Breville BMO734XL Quick Touch Countertop Microwave. Please read all instructions carefully before use and retain this manual for future reference.

The Breville Quick Touch microwave is designed for intuitive cooking, reheating, and defrosting. It features dynamic power adjustment, smart settings, and a self-locating turntable for convenience.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use the microwave for purposes other than heating food.

## SETUP

---

### Unpacking

Carefully remove all packaging materials from the microwave oven. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

## Placement

Place the microwave on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space around the oven: at least 4 inches (10 cm) at the back, 8 inches (20 cm) at the top, and 2 inches (5 cm) on the sides. Do not block air vents.

## Turntable Assembly

The self-locating turntable is designed to slide effortlessly into place.

1. Place the turntable ring inside the oven cavity.
2. Place the glass turntable plate on top of the turntable ring, ensuring it sits securely in the center hub.



Image: The Breville BMO734XL microwave with its door open, revealing the interior cavity and the glass turntable in place. This illustrates the self-locating turntable feature.

## Power Connection

Plug the power cord into a standard 110-120V AC electrical outlet.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

The Breville Quick Touch features an intuitive control panel with a large LCD display, dials, and one-touch auto buttons.



Image: A detailed view of the microwave's control panel, highlighting the LCD screen which displays power level and time, and the two main rotary dials for adjustment.

## Setting the Clock

1. Press the **CLOCK** button.
2. Rotate the **TIME/FOOD TYPE** dial to set the hour.
3. Press the **TIME/FOOD TYPE** dial to confirm.
4. Rotate the **TIME/FOOD TYPE** dial to set the minutes.
5. Press the **TIME/FOOD TYPE** dial to confirm and set the clock.

## Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Rotate the **TIME/FOOD TYPE** dial to set the desired cooking time.
4. Rotate the **POWER/AMOUNT** dial to select the power level (10% to 100%).
5. Press the **START** button to begin cooking.

**Dynamic Power Adjustment:** You can adjust both the power level and cooking time during the cooking cycle by rotating the respective dials.

## Smart Settings (Sensor IQ)

The Sensor IQ Reheat and Cook function automatically adjusts cooking time by detecting humidity levels in the food.

1. Open the door to reveal the shortcut menu.
2. Select the desired smart setting (e.g., Reheat, Cook, Defrost) from the internal menu.
3. Follow the on-screen prompts, if any, to select food type or quantity.
4. Press **START**. The microwave will automatically determine the optimal cooking time.

## "A Bit More" Function

If your food needs a little extra cooking time after a cycle finishes, press the **A Bit More** button. This adds a short burst of cooking time without needing to reset the full cycle.



Image: A close-up of the control panel showing the "A Bit More" button, which allows for adding a small amount of extra cooking time.

## One-Touch Auto Buttons

The microwave includes pre-programmed shortcuts for commonly used tasks, such as melting chocolate or softening butter. These buttons are located behind the door.

- Open the microwave door.
- Press the desired one-touch button (e.g., Melt Chocolate, Soften Butter).
- The microwave will automatically set the appropriate time and power.
- Close the door and press **START**.

## MAINTENANCE

---

### Cleaning the Microwave

Regular cleaning helps maintain the performance and longevity of your microwave.

1. Always unplug the microwave before cleaning.
2. Wipe the interior and exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
3. The glass turntable plate can be removed and washed in warm, soapy water or in a dishwasher.
4. Clean the door seals and sealing surfaces regularly to ensure proper door closure.
5. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes to loosen residue, then wipe clean.

### Replacing the Light Bulb

The interior light bulb is not user-replaceable. If the bulb needs replacement, contact Breville customer service or a qualified service technician.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.

Problem	Possible Cause	Solution
Food is not heating evenly.	Food not stirred or rearranged; Turntable not rotating.	Stir or rearrange food halfway through cooking; Ensure turntable is correctly placed and free from obstruction.
Oven light not working.	Light bulb needs replacement.	Contact Breville customer service for assistance.
Unusual noise during operation.	Turntable not correctly seated; Foreign object in cavity.	Re-seat the turntable; Check for and remove any foreign objects.

## SPECIFICATIONS

Feature	Detail
Model Number	BMO734XL
Brand	Breville
Capacity	1.2 Cubic Feet
Color	Stainless Steel
Product Dimensions (D x W x H)	18"D x 20.5"W x 12.5"H
Item Weight	35 Pounds
Wattage	1050 Watts (Cooking), 1100 Watts (Power Consumption)
Voltage	110 - 120 Volts
Number of Power Levels	10
Special Features	Defrost, Timer, Turntable, Sensor IQ Reheat and Cook, "A Bit More" function, One-Touch Auto Buttons
Installation Type	Countertop
Material	Stainless Steel

## WARRANTY AND SUPPORT

### Warranty Information

The Breville BMO734XL Quick Touch Countertop Microwave comes with a 1-Year Replacement Warranty. Please refer to the warranty card included with your product for full terms and conditions. Keep your purchase receipt as proof of purchase.

### Customer Support

For product support, service, or warranty claims, please contact Breville customer service.

- **Website:** Visit the official Breville website for FAQs and support resources.
- **Phone:** Refer to your product documentation or the Breville website for regional contact numbers.

