

Manuals.plus /

› Madeforyou /

› Madeforyou Replacement Remote Control User Manual

Madeforyou ELEGANCE 55 FLAT MF 55 – 2502 Top

User Manual

REPLACEMENT REMOTE CONTROL FOR GRUNDIG ELEGANCE 55 FLAT MF 55 – 2502 TOP

Brand: Madeforyou

1. Introduction

This manual provides instructions for the Madeforyou replacement remote control, specifically designed as a substitute for the original remote of Grundig ELEGANCE 55 FLAT MF 55 – 2502 Top models. This remote is pre-programmed and ready for immediate use with the specified device. It is a direct replacement for your original remote control.

Please note that this manual pertains only to the operation of the replacement remote control. For detailed instructions on your television or other compatible device, please refer to its original instruction manual.

2. Setup

2.1. Battery Installation

The remote control requires two LR03/AAA batteries (not included). To install the batteries:

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2.2. Initial Use (No Programming Required)

This replacement remote control is already pre-programmed by the seller for the Grundig ELEGANCE 55 FLAT MF 55 – 2502 Top model. No additional programming steps are required by the user before first use. Simply insert the batteries, and the remote is ready to operate your device.

If you wish to use this replacement remote control for another device in the future, it can be reprogrammed at any time with the help of the separately available Made 4You extra reprogramming kit (search Amazon for B007G8VDMS).



Image: The Madeforyou replacement remote control, showing its general design and button layout. This remote is pre-programmed for specific Grundig models.

3. Operating Instructions

To operate your device, point the remote control directly at the infrared receiver on your television or compatible device. Ensure there are no obstructions between the remote and the device.

3.1. Basic Functions

- **Power Button ():** Turns the device on or off.
- **Number Buttons (0-9):** Used to directly select channels.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Adjusts the volume up or down.
- **MUTE:** Mutes or unmutes the sound.
- **AV / TV:** Switches between input sources (e.g., TV, AV, HDMI).
- **MENU:** Accesses the device's main menu.
- **OK / Navigation Arrows:** Used to navigate menus and confirm selections.
- **EXIT:** Exits the current menu or function.
- **TEXT:** Activates or deactivates Teletext.
- **GUIDE:** Displays the electronic program guide (if supported by your device).
- **P/C (Picture/Color):** Adjusts picture settings.
- **SOUND:** Adjusts sound settings.
- **FAV:** Accesses favorite channels.
- **SLEEP:** Sets a sleep timer for the device.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the device and current menu/application.



Image: A direct front view of the Madeforyou replacement remote control, highlighting the arrangement of its various function buttons for easy identification.

4. Maintenance

4.1. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2. Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3. Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which could damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. Troubleshooting

5.1. Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace old or depleted batteries with new ones.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the device's infrared receiver. Point the remote directly at the device.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 7 meters).
- **Device Power:** Confirm that the television or compatible device is powered on and functioning correctly.

5.2. Certain Buttons Not Working

- **Device Compatibility:** While the remote is pre-programmed for the specified model, some advanced functions might require specific device support or may not be present on the replacement remote.
- **Clean Contacts:** If a specific button is sticky or unresponsive, gently clean around the button with a soft, dry cloth. Avoid liquid.

6. Specifications

Feature	Specification
Brand	Made4you
Compatible Devices	Television (Grundig ELEGANCE 55 FLAT MF 55 – 2502 Top)
Connectivity Technology	Infrared
Battery Type	AAA (LR03)
Special Feature	No programming required (pre-programmed)
Product Dimensions	5 x 2.49 x 21.01 cm
Item Weight	99.8 g

7. Warranty and Support

For warranty information regarding this replacement remote control, please refer to the terms and conditions provided by the seller at the time of purchase. As this is a replacement product, specific warranty details may vary.

For support related to reprogramming the remote for a different device, please refer to the Made 4You extra reprogramming kit (B007G8VDMS) or contact the Madeforyou customer service if available.