

Canon EOS Rebel T5

Canon EOS Rebel T5 EF-S 18-55mm IS II Digital SLR Camera Kit User Manual

Model: EOS Rebel T5 | Brand: Canon

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Canon EOS Rebel T5 Digital SLR Camera Kit. The Canon EOS Rebel T5 is designed for capturing high-quality still images and Full HD video, featuring an 18.0 Megapixel CMOS sensor and a DIGIC 4 image processor. Its intuitive design makes it suitable for both beginners and experienced photographers.

2. WHAT'S IN THE BOX

Your Canon EOS Rebel T5 kit typically includes the following components:

- Canon EOS Rebel T5 Camera Body
- Canon EF-S 18-55mm f/3.5-5.6 IS II Standard Zoom Lens
- Battery Pack
- Battery Charger
- Interface Cable (USB)
- Wide Strap
- EOS Digital Solution Disk (Software)
- Instruction Manuals



Figure 2.1: Typical contents of the Canon EOS Rebel T5 kit.

3. SETUP

3.1 Attaching the Lens

1. Remove the body cap from the camera and the rear lens cap from the lens.
2. Align the red index mark on the lens with the red index mark on the camera body.
3. Turn the lens clockwise until it clicks into place.



Figure 3.1: Front view of the Canon EOS Rebel T5 with the EF-S 18-55mm lens.

3.2 Inserting the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the charged battery pack with the electrical contacts facing inward, ensuring it clicks into place.
3. Close the battery compartment cover.

3.3 Inserting an SD Card

An SD card is required to store photos and videos. The SD card is not included with the kit and must be purchased separately. Open the SD card slot cover on the side of the camera and insert the SD card until it clicks. Ensure the card is inserted correctly to avoid damage.

Your browser does not support the video tag.

Video 3.1: This video provides a visual guide on unboxing and basic setup, including attaching the lens and inserting the battery into the Canon EOS Rebel T5 Digital Camera.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on the camera, rotate the power switch to the 'ON' position. To power off, rotate it to 'OFF'.

4.2 Mode Dial

The mode dial on top of the camera allows you to select various shooting modes:

- **Basic Zone Modes:** Fully automatic modes for simple point-and-shoot operation (e.g., Scene Intelligent Auto, Flash Off, Creative Auto, Portrait, Landscape, Close-up, Sports, Night Portrait).

- **Creative Zone Modes:** Provide more control over settings (e.g., Program AE (P), Shutter-priority AE (Tv), Aperture-priority AE (Av), Manual Exposure (M)).
- **Movie Shooting Mode:** For recording Full HD videos.



Figure 4.1: Rear view of the Canon EOS Rebel T5, highlighting the LCD and control layout.

4.3 Taking Photos

1. Select your desired shooting mode using the mode dial.
2. Look through the viewfinder or use the LCD screen for Live View shooting.
3. Press the shutter button halfway to activate the 9-point autofocus system and achieve focus.
4. Press the shutter button fully to take the picture.

4.4 Recording Videos

Switch the mode dial to the movie shooting mode. Press the Live View shooting/Movie shooting button to start and stop recording. The camera supports Full HD video recording.

4.5 Using the Built-in Flash

In low-light conditions or when backlighting is present, the built-in flash can be used. In Basic Zone modes, the flash may pop up automatically. In Creative Zone modes, you can manually raise the flash by pressing the flash button.

Your browser does not support the video tag.

Video 4.1: This video offers an honest review of the Canon T5, demonstrating various features and operational aspects of the camera.

5. MAINTENANCE

5.1 Lens Care

- Always keep the lens cap on when not in use to protect the front element.
- Use a lens brush or blower to remove dust, then gently wipe with a microfiber lens cloth. Avoid touching the lens surface with your fingers.
- For stubborn smudges, use a small amount of lens cleaning solution on a clean cloth.

5.2 Camera Body Care

- Wipe the camera body with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, humidity, or dust.
- Do not use organic solvents or strong cleaning agents.

5.3 Battery Care

- Charge the battery fully before first use and whenever the battery indicator is low.
- Store batteries in a cool, dry place when not in use.
- Remove the battery from the camera if it will not be used for an extended period.

6. TROUBLESHOOTING

- **"No card in camera" message:** Ensure an SD card is inserted correctly and is not full or damaged.
- **Autofocus is slow:** In very low light or with subjects lacking contrast, autofocus may be slower. Try using the built-in flash or switching to manual focus.
- **Camera does not power on:** Check if the battery is charged and inserted correctly.
- **Images are blurry:** Ensure the lens is clean, the camera is stable (use a tripod if necessary), and the correct focus mode is selected.

7. SPECIFICATIONS

Sensor Type	CMOS
Photo Sensor Resolution	18 MP
Video Resolution	FHD 1080p
Lens	EF-S 18-55mm f/3.5-5.6 IS II standard zoom lens
Autofocus Points	9-point AF System
Continuous Shooting Speed	3 FPS
Screen Size	3 Inches
Supported File Format	JPEG, RAW
Connectivity Technology	Wired, Wireless (Wi-Fi)
Item Weight	1 Pounds

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Canon EOS Rebel T5 camera kit comes with a 90-day limited warranty. Please retain your proof of purchase for any warranty claims.

8.2 Customer Support

For further assistance, technical support, or service inquiries, please refer to the official Canon support website or contact their customer service department. Detailed contact information can typically be found in the included warranty card or on the manufacturer's website.