

Eichhorn 100002029

Eichhorn 100002029 Wooden Roller Track

Instruction Manual

1. INTRODUCTION

The Eichhorn 100002029 Large Pine Wood Roller Track is an engaging and educational toy designed for children aged 1 year and older. This 7-piece set provides interactive play, promoting the development of fine motor skills and visual perception as elements roll down the tracks.

This manual provides essential information for the safe and proper use, setup, and maintenance of your Eichhorn Wooden Roller Track.

2. PRODUCT OVERVIEW

The Eichhorn 100002029 Roller Track set includes the main wooden track structure and six distinct rolling elements. These elements are designed to travel down the track in a fun, zigzag motion.

- 1 x Large Pine Wood Roller Track (67 x 56 cm)
- 2 x Wooden Balls
- 2 x Wooden Cars
- 2 x Colorful Wooden Discs

1+



7
Teile

Im Set ist die 67x56cm große Rollbahn,
2 Kugeln, 2 Autos und 2 bunte Scheiben
enthalten.

Image 2.1: The six rolling elements included with the Eichhorn Roller Track: two balls, two cars, and two colorful discs.



Eichhorn - mit Liebe erdacht,
aus Holz gemacht.

Image 2.2: The complete Eichhorn Wooden Roller Track with its rolling elements positioned on the tracks.

3. SETUP

The Eichhorn 100002029 Wooden Roller Track comes pre-assembled and does not require any additional setup. Simply remove it from its packaging, and it is ready for immediate use.

4. OPERATING INSTRUCTIONS

To operate the roller track, place one of the included rolling elements (cars, balls, or discs) at the top of any track. Release the element and observe as it rolls down the various levels in a zigzag pattern. Children can experiment with different elements and starting points to see how they move.



Interaktiver Spielspaß -
über 6 Schienen rollen die Elemente
nach unten.

Image 4.1: A child engaging with the roller track, demonstrating how to place an element at the top.



Image 4.2: The roller track in action, showing an element descending, which aids in developing fine motor skills and visual tracking.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Eichhorn Wooden Roller Track in use, showing various elements rolling down the tracks.

5. MAINTENANCE

The Eichhorn Wooden Roller Track is crafted from high-quality pine wood and finished with safe, water-based colors. To ensure its longevity and maintain hygiene:

- Wipe the toy clean with a damp cloth as needed.
- Avoid using harsh cleaning agents or abrasive materials, as these can damage the wood or paint finish.
- Do not immerse the toy in water.
- Store the toy in a dry place, away from direct sunlight or extreme temperatures, to prevent warping or fading.



Aus hochwertigem Kiefernholz gefertigt, bietet die Rollbahn eine langlebige und umweltfreundliche Spieloption, die höchsten Sicherheitsstandards entspricht.

Image 5.1: Detail of the wooden construction, illustrating the quality of materials used in the roller track.

6. SAFETY INFORMATION

Your child's safety is paramount. Please adhere to the following safety guidelines:

- **Recommended Age:** This toy is suitable for children aged 12 months and older.
- **Supervision:** Always supervise young children during play.
- **Material Safety:** The roller track is made from pine wood and uses water-based, non-toxic colors. All Eichhorn wooden toys are regularly tested by independent testing institutes to ensure safety standards are met.
- **Inspection:** Before each use, inspect the toy for any signs of damage, loose parts, or splinters. Discontinue use if any damage is found.
- **Choking Hazard:** While designed for safety, ensure all rolling elements are handled appropriately by children within the recommended age range.

7. TROUBLESHOOTING

If you encounter any issues with your Eichhorn Wooden Roller Track, consider the following:

- **Elements not rolling smoothly:** Check the tracks for any obstructions, debris, or sticky residue. Ensure the elements are placed correctly on the tracks.

- **Damaged parts:** If any part of the toy appears damaged, discontinue use immediately. Contact Eichhorn customer support for assistance.

8. SPECIFICATIONS

| | |
|---------------------------|---------------------|
| Product Dimensions | 10.5 x 68 x 57 cm |
| Weight | 400 g |
| Model Number | 100002029 |
| Recommended Age | 12 months and older |
| Material | Pine Wood |
| Number of Players | 1 player |
| Assembly Required | No |
| Batteries Required | No |
| Color | Multicolored |
| Educational Goals | Dexterity |

9. WARRANTY AND SUPPORT

Eichhorn is committed to providing high-quality wooden toys. While specific warranty details are not provided, Eichhorn has a long tradition of quality and customer satisfaction. If you have any questions, concerns, or require assistance with your product, please contact Eichhorn customer support. They are known for responding quickly and assisting with replacement parts if needed.

For more information, visit the official Eichhorn store: [Eichhorn Store on Amazon](#)