

Seiko Clocks QXR208Z

Seiko QXR208Z Radio-Controlled Wall Clock

Instruction Manual

INTRODUCTION

Thank you for purchasing the Seiko QXR208Z Radio-Controlled Wall Clock. This clock combines classic design with modern radio-controlled technology, ensuring precise timekeeping. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new clock.

SETUP GUIDE

1. Unpacking

Carefully remove the clock from its packaging. Retain the packaging for future transport or storage. Inspect the clock for any signs of damage. If damaged, do not proceed with setup and contact customer support.

2. Battery Installation

The Seiko QXR208Z requires one (1) AA battery (included). Locate the battery compartment on the back of the clock. Insert the AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Close the battery compartment cover securely.

3. Initial Time Setting (Radio Control)

Once the battery is installed, the clock will automatically begin searching for the radio time signal. This process may take several minutes to several hours, depending on your location and signal strength. During this time, the hands may move erratically or stop until a signal is acquired.

- Place the clock near a window, away from electronic devices that may cause interference.
- Avoid placing the clock near large metal objects or in basements, which can block the signal.
- Once the signal is received, the clock will automatically set itself to the correct time, including adjusting for Daylight Saving Time (DST) where applicable.

4. Mounting the Clock

The Seiko QXR208Z is designed for wall mounting. Use a sturdy screw or hook (not included) appropriate for your wall material. Ensure the mounting point is level and secure enough to support the clock's weight (approximately 1.1 kg).



Image: Front view of the Seiko QXR208Z Radio-Controlled Wall Clock. The clock features a light brown wooden frame, a white dial with clear black Arabic numerals (1-12), and black hour and minute hands. The word "SEIKO" is printed below the 12 o'clock position, and "RADIO WAVE CONTROL" is printed above the 6 o'clock position.

OPERATING INSTRUCTIONS

Automatic Time Synchronization

Your Seiko QXR208Z clock is equipped with a radio-controlled movement that automatically synchronizes with the atomic time signal. This ensures the clock always displays the precise time without manual adjustment. The clock typically attempts to receive the signal multiple times a day, usually during the night when interference is minimal.

- The clock will automatically adjust for Daylight Saving Time (DST) changes.
- If the clock loses the signal for an extended period (e.g., due to relocation or strong interference), it will attempt to resynchronize.

Manual Time Setting (If Needed)

In rare cases, or if you are in an area where the radio signal cannot be received, you may need to set the time manually. Refer to the small adjustment wheel or button on the back of the clock, usually labeled "SET" or "TIME SET". Rotate the wheel or press the button to advance the hands to the correct time. Once the signal is re-established, the clock will override manual settings.

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the wood finish or the clock mechanism.

Battery Replacement

Replace the AA battery annually, or when the clock hands stop moving or begin to slow down. Always use a fresh, high-quality alkaline AA battery. Dispose of used batteries responsibly according to local regulations.

Care and Storage

- Avoid exposing the clock to direct sunlight, extreme temperatures, or high humidity, which can affect its accuracy and material integrity.
- Do not disassemble the clock. Any repairs should be performed by qualified personnel.
- If storing the clock for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock hands are not moving or are stuck.	Low or dead battery.	Replace the battery with a new AA alkaline battery.

Problem	Possible Cause	Solution
Clock displays incorrect time.	Poor radio signal reception.	Move the clock to a location with better signal reception (e.g., near a window, away from electronics). Allow several hours for re-synchronization.
Clock does not adjust for Daylight Saving Time.	Signal reception issue or DST feature disabled (if applicable).	Ensure good signal reception. Most radio-controlled clocks automatically handle DST. If not, check for a manual DST switch on the back.
Clock makes unusual noises.	Internal mechanism issue.	Contact customer support. Do not attempt to repair yourself.

SPECIFICATIONS

- Brand:** Seiko Clocks
- Model Number:** QXR208Z
- Color:** Brown
- Product Dimensions (L x W x H):** 31 x 3.81 x 36.6 cm (12.2 x 1.5 x 14.4 inches)
- Material:** Wood (Alder)
- Features:** Radio-controlled
- Item Weight:** 1.1 Kilograms (2.4 lbs)
- Power Source:** Battery Powered (1 x AA, included)
- Display Type:** Analog
- Style:** Modern
- Shape:** Round

WARRANTY AND SUPPORT

Seiko Clocks products are manufactured to high-quality standards. This product comes with a limited warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Seiko Clocks customer support. Contact information can typically be found on the manufacturer's website or on the warranty card.

Online Support: www.seikoclocks.com/support (Example link, actual link may vary)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00IEFSZ1O>

More documents and user manuals: **<https://manuals.plus/>**