

[manuals.plus](#) /› [Bomann](#) /› **Bomann ST/WA 1364 Electric Grill, Sandwich, and Waffle Maker Instruction Manual**

Bomann ST/WA 1364

Bomann ST/WA 1364 Electric Grill, Sandwich, and Waffle Maker Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect operation can lead to personal injury and appliance damage.

- This appliance is intended for household use only. Do not use it outdoors.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- The appliance surfaces become hot during use. Use oven mitts or gloves when handling hot parts.

2. PRODUCT OVERVIEW

The Bomann ST/WA 1364 is a versatile electric appliance designed for preparing sandwiches, waffles, and grilled items. It features interchangeable non-stick plates for different cooking functions.



Figure 1: The Bemann ST/WA 1364 appliance in its closed position, showcasing its black and stainless steel design.

Key Components:

- **Main Housing:** Durable black and stainless steel construction.
- **Interchangeable Plates:** Includes sets for sandwiches, waffles, and grilling. These are non-stick for easy food release and cleaning.
- **Locking Handle:** Secures the top plate during cooking and for compact storage.
- **Indicator Lights:** Typically includes a power indicator and a ready indicator.
- **Cool-Touch Handles:** Designed for safe handling during operation.
- **Anti-Slip Feet:** Provides stability on countertops.

3. SETUP AND INITIAL USE

3.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Keep packaging materials out of reach of children.

3.2 Initial Cleaning

1. Before first use, wipe the exterior of the appliance with a damp cloth.
2. Clean the interchangeable plates with a damp cloth or sponge and a small amount of mild detergent. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaners or scouring pads, as these can damage the non-stick coating.

3.3 Installing Plates

The appliance comes with three sets of interchangeable plates: sandwich, waffle, and grill. Ensure the appliance is cool and unplugged before changing plates.



Figure 2: Detachable sandwich plates, designed to seal and cut sandwiches.



Figure 3: Detachable waffle plates, featuring a grid pattern for classic waffles.



Figure 4: Detachable grill plates, with ridges for grilling various foods.

1. Open the appliance by releasing the locking handle.
2. Locate the plate release buttons (if present, typically on the side or front). Press them to release the currently installed plates.
3. Insert the desired plates (sandwich, waffle, or grill) by aligning them with the slots and pressing down until they click into place. Ensure both top and bottom plates are securely fastened.

4. OPERATION

4.1 Preheating

1. Place the appliance on a stable, heat-resistant surface.
2. Ensure the correct plates are installed and closed.
3. Plug the power cord into a suitable wall outlet. The power indicator light (usually red) will illuminate.
4. Allow the appliance to preheat for approximately 3-5 minutes. The ready indicator light (usually green) will illuminate when the desired temperature is reached.

4.2 Cooking

Always preheat the appliance before adding food for best results.



Figure 5: The appliance open, showing two sandwiches being cooked on the sandwich plates.

1. Once the ready indicator light illuminates, carefully open the appliance using the cool-touch handle.
2. Lightly grease the non-stick plates with a small amount of cooking oil or butter, if desired, especially for the first use or for specific recipes.
3. Place your food (e.g., bread for sandwiches, waffle batter, meat for grilling) onto the bottom plate.
4. Close the top plate and secure it with the locking handle.
5. Cook for the recommended time for your recipe or until desired browning is achieved. The ready indicator light may cycle on and off during cooking as the thermostat maintains temperature.
6. Carefully open the appliance and remove the cooked food using a heat-resistant plastic or wooden utensil to avoid scratching the non-stick coating.
7. Unplug the appliance from the wall outlet after use.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

5.1 Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the interchangeable plates as described in Section 3.3.
3. Wash the plates in warm, soapy water using a soft sponge or cloth. For stubborn residue, soak the plates for a short period. Do not use abrasive cleaners, metal scouring pads, or sharp utensils.
4. Rinse the plates thoroughly and dry them completely before reattaching or storing.
5. Wipe the exterior of the appliance with a damp cloth. Do not use harsh or abrasive cleaners.
6. Never immerse the main unit, power cord, or plug in water or any other liquid.

5.2 Storage

Store the appliance in a clean, dry place once it has cooled down and been cleaned. The locking handle allows for compact, upright storage.

6. TROUBLESHOOTING

If you encounter issues with your Bomann ST/WA 1364, please refer to the following common problems and solutions:

- **Appliance does not heat up:**

- Ensure the appliance is properly plugged into a working electrical outlet.
- Check if the power indicator light is on. If not, check the power supply.

- **Food sticks to the plates:**

- Ensure the plates were lightly greased before adding food, especially for the first use.
- The non-stick coating may be worn. Avoid using metal utensils that can scratch the surface.

- **Food is not cooking evenly:**

- Ensure the appliance was fully preheated before adding food (ready indicator light on).
- Distribute food evenly across the plates.

- **Smoke or unusual odor during first use:**

- This is normal during the first use as manufacturing residues burn off. Ensure good ventilation. If it persists, unplug and contact support.

If the problem persists after checking these points, please contact customer support.

7. SPECIFICATIONS

Attribute	Specification
Model Number	ST/WA 1364
Power	650 W
Voltage	230 V
Frequency	50 - 60 Hz
Color	Black
Housing Material	Stainless Steel
Dimensions (L x W x H)	10 x 48 x 50 cm
Weight	1.5 kg
Features	2 Sandwich Capacity, Locking Handle, Non-stick Coating, Cool-touch Handles, Anti-slip Feet, Indicator Light, Interchangeable Plates (Sandwich, Waffle, Grill)

8. WARRANTY AND SUPPORT

This Bomann appliance is covered by a manufacturer's warranty. Please refer to the warranty card included

with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or spare parts, please contact your retailer or the authorized Bomann service center in your region. Keep your proof of purchase for warranty claims.

Manufacturer: Bomann

Related Documents - ST/WA 1364

	<p>Bomann BQ 1240 N CB Table Grill: User Manual and Safety Guide</p> <p>Comprehensive user manual and safety guide for the Bomann BQ 1240 N CB table grill, covering operation, safety, technical specifications, warranty, and disposal.</p>
	<p>Bomann WA 7110 Waschmaschine Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für die Bomann WA 7110 Haushaltswaschmaschine, inklusive Installations-, Betriebs-, Wartungs- und Fehlerbehebungshinweisen.</p>
	<p>BOMANN KG 320.2 Kühl-/Gefrierkombination Bedienungsanleitung</p> <p>Finden Sie detaillierte Anleitungen zur Installation, Bedienung, Wartung und Fehlerbehebung für die BOMANN KG 320.2 Kühl-/Gefrierkombination. Sicherheitshinweise und technische Daten.</p>
	<p>Bomann MWG 2216 H EB Microwave Oven with Grill and Hot Air User Manual</p> <p>This document provides comprehensive instructions for the Bomann MWG 2216 H EB microwave oven, covering its operation, safety precautions, cleaning, and troubleshooting. It details various functions including microwave, grill, convection, and combination modes, along with automatic programs and defrosting options.</p>
	<p>BOMANN WA 7161: Bedienungsanleitung für Haushalt-Waschmaschinen</p> <p>Umfassende Bedienungsanleitung für die BOMANN WA 7161 Haushalt-Waschmaschine. Finden Sie Anleitungen zur Installation, sicheren Bedienung, Wartung und Fehlerbehebung.</p>



[Bomann WPT 7150 Household Heat Pump Dryer - Instruction Manual](#)

Comprehensive instruction manual for the Bomann WPT 7150 household heat pump dryer, covering installation, operation, maintenance, troubleshooting, and technical specifications.