

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic SCPMX800 Hi-Res Audio Network HiFi System User Manual](#)

## Panasonic SCPMX800

# Panasonic SCPMX800 Hi-Res Audio Network HiFi System User Manual

Model: SCPMX800

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Panasonic SCPMX800 Hi-Res Audio Network HiFi System. Please read this manual thoroughly before using the product and retain it for future reference.

The SCPMX800 system is designed to deliver high-fidelity audio from various sources, including CDs, FM radio, USB devices, and network streaming services like Chromecast built-in and AirPlay 2. It features a Technics JENO Engine amplifier for enhanced sound quality and 3-way speakers with silk dome tweeters.

## 2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, injury, or damage to the unit.

- **Power Source:** Connect the unit only to the specified power supply.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or excessive humidity.
- **Foreign Objects:** Do not insert any objects into the unit's openings.
- **Servicing:** Refer all servicing to qualified service personnel. Do not attempt to repair the unit yourself.
- **Speaker Cables:** Ensure speaker cables are connected correctly to prevent short circuits.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Main Unit (SCPMX800)
- Two Speaker Units
- AC Power Cord
- Remote Control (with batteries included)
- Indoor FM Antenna

- Two Speaker Cables



Image: The Panasonic SCPMX800 main unit flanked by two speaker units.

## 4. SYSTEM OVERVIEW

---

The Panasonic SCPMX800 system comprises a central receiver unit and two passive speaker units. The receiver unit integrates a CD player, FM tuner, and network streaming capabilities. The speakers are 3-way designs, optimized for high-resolution audio reproduction.



Image: Detailed views of a speaker unit and the main receiver unit.

The system incorporates a Technics JENO Engine amplifier, which is crucial for processing and delivering high-resolution audio with minimal distortion.



Image: A man sitting in a black leather swivel chair, smiling and holding a tablet, in a modern living room with a bookshelf in the background.

## 5. SETUP

---

### 5.1 Speaker Connection

1. Connect the provided speaker cables to the speaker terminals on the rear of the main unit and the corresponding terminals on each speaker.
2. Ensure correct polarity: connect the red (+) terminal on the main unit to the red (+) terminal on the speaker, and the black (-) terminal on the main unit to the black (-) terminal on the speaker.

### 5.2 Antenna Connection

Connect the indoor FM antenna to the FM antenna terminal on the rear of the main unit. Position the antenna for optimal reception.

### 5.3 Power Connection

Connect the AC power cord to the main unit and then plug it into a wall outlet.

### 5.4 TV Connection (Optional)

For enhanced TV audio, connect your television to the SCPMX800 using either an optical cable or an AUX cable. The system supports auto-start when the TV is switched on, and the TV remote can be used to adjust the system's volume.

## 6. OPERATION

---

### 6.1 Power On/Off

Press the Power button on the main unit or the remote control to turn the system on or off.

### 6.2 Volume Control

Adjust the volume using the volume knob on the main unit or the Volume +/- buttons on the remote control.

### 6.3 Source Selection

Press the 'Source' or 'Function' button on the main unit or remote to cycle through available input sources: CD, FM, Bluetooth, USB, AUX, Optical, and Network (Chromecast/AirPlay 2).

## 6.4 CD Playback

1. Select the 'CD' source.
2. Insert a CD into the disc tray.
3. Playback will begin automatically. Use the Play/Pause, Skip, and Stop buttons for control.
4. The CD High-Res Remaster feature enhances the sound quality of standard CDs.

## 6.5 FM Radio

1. Select the 'FM' source.
2. Use the tuning buttons to find desired radio stations.
3. Save favorite stations to presets for quick access.

## 6.6 Bluetooth Connectivity

1. Select the 'Bluetooth' source. The unit will enter pairing mode.
2. On your smartphone, tablet, or computer, search for Bluetooth devices and select 'SCPMX800'.
3. Once paired, you can stream audio wirelessly to the system.

## 6.7 USB Playback

1. Insert a USB storage device containing MP3 audio files into the USB port.
2. Select the 'USB' source.
3. Use the navigation buttons to browse and play files. The system supports remastering for MP3 tracks.

## 6.8 Network Features (Chromecast built-in, AirPlay 2)

Connect the SCPMX800 to your home network to access streaming services and network audio playback.

- **Chromecast built-in:** Stream music from compatible apps on your mobile device or computer.
- **AirPlay 2:** Stream audio from Apple devices.
- Access various internet radio stations and services like Spotify.

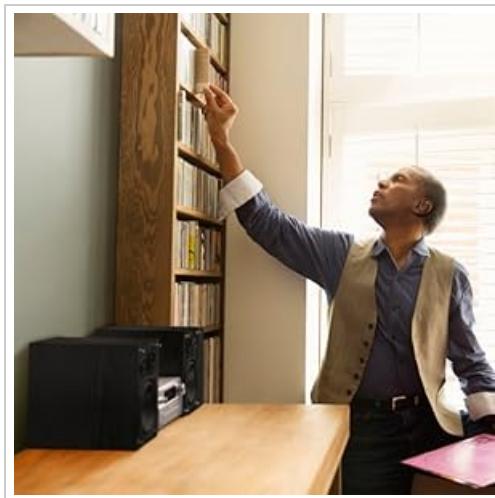


Image: A user interacting with a tablet, demonstrating wireless control over the audio system.



Image: A user reaching for a CD, highlighting the system's physical media playback capabilities.

## 7. MAINTENANCE

---

### 7.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they can damage the finish.

### 7.2 Storage

If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

---

If you encounter issues with your SCPMX800 system, refer to the following common solutions:

Problem	Possible Cause / Solution
Unit does not power on / Display shows '8 dots'	This may indicate a safety trip. Disconnect the power cord, wait for 30 seconds, then reconnect. If the issue persists, contact support.
No sound output	Check speaker cable connections for correct polarity and secure fit. Ensure the correct input source is selected and volume is not muted or too low.
Bluetooth pairing fails	Ensure the unit is in Bluetooth pairing mode. Check that your device's Bluetooth is enabled and within range. Try restarting both devices.
Poor FM radio reception	Adjust the position of the indoor FM antenna. Check for local interference sources.
Cannot connect to network services	Ensure the unit is properly connected to your Wi-Fi network. Check your router and internet connection. Verify app compatibility for Chromecast or AirPlay 2.

## 9. SPECIFICATIONS

---

Feature	Detail

Feature	Detail
Brand	Panasonic
Model	SCPMX800
Output Power	120 watts
Audio Output Mode	Stereo
Speaker Configuration	3.0 channel (3-way speakers with silk dome tweeters)
Supported Media	CD
Supported Audio Formats	MP3 (via USB)
Connectivity	Bluetooth, USB, Optical Input, AUX Input, Network (Chromecast built-in, AirPlay 2)
Compatible Devices	MP3 Player, Personal Computer, Smartphone, Tablet, TV
Power Source	Corded Electric
Dimensions (Main Unit)	Approx. 42 x 39 x 31 cm (Parcel Dimensions)
Weight	Approx. 9.3 kg (Parcel Weight)

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Panasonic website. Keep your proof of purchase for any warranty claims.