

[Manuals.plus](#) /

> [Indesit](#) /

> Indesit Washing Machine Drain Hose User Manual

Indesit C00051563

Washing Machine Drain Hose Instruction Manual

BRAND: INDESIT
Model: C00051563

PRODUCT OVERVIEW

This document provides essential information for the installation, operation, and maintenance of your replacement washing machine drain hose. This hose is designed to ensure efficient and reliable water drainage from your washing machine.

Key features include:

- Compatible with various appliance brands: INDESIT, ARISTON, WHIRLPOOL, HOTPOINT.
- Designed as a direct replacement part.



Image 1: The Indesit washing machine drain hose, shown coiled. This hose is a crucial component for proper water drainage from your appliance.

COMPATIBILITY

This drain hose (Model: C00051563) is compatible with a wide range of washing machine models from the following brands:

- **INDESIT:** WT 118 (FR), WITP 102 (EU), WT 119 (FR), WITL 100 (FR), WITL 120 (FR), WT 100 (FR), WT 124 (FR), WT 92 (FR), WITL1001FR, AVTF104EU, AVTF129EU, AVTL109EU, AVTL82EU, AVTL83EU, AVTL89EU, WIT 60 (FR), WIT 61 (EU), WITL 85 (FR), WITL 90 (FR), WITL120FR/Y, WITP 82 (EU), WAT10

(IT), WAT6 (IT), WAT8 (IT), WT 102 T (FR), WT 112 (FR), WT 120 (EX), WT 80 (FR), WT100 (CSI), WT102 EX, WT65 (EX), WT67 (EU), WT70 FR, WT80 (CSI), WT82 EX, WT82T FR, WT90 (CSI).

- **ARISTON:** AVTL 108 (FR), AT 125 (FR), ATD 122 (FR), AVTF 129 (EU), AVTF 159 (FR), AVTL 104 (EU), AVTL 119 (FR), AVTL 129 (FR), AVTL 149 (FR), AT 104 (EX), AT 105 (FR), AT 109 (FR), AT 110 (FR), AT 84 (AG), AT 84 (EO), AT 84 (EX), AT 85 (FR), AT 95 (FR), AT62 (IT), AT82 (IT), ATD 100 (FR), ATD 102 (FR), ATD 104 (EX), ATD 120 (FR), ATD 90 (FR), ATD104 (IT), ATD120 (EX), ATD84 (IT), AVTF 104 (EU), AVTF 109 (EU), AVTF 129 (FR).
- **WHIRLPOOL:** FTL 1050 (EA), T 1043 (EX), T 1043 (OM), T 643 (EX), T 643 (IT), T 843 (EO), T 843 (EX), T 843 (IT), T 850.

Please verify that this part is compatible with your specific appliance model before installation. If unsure, consult your appliance's user manual or contact a qualified technician.

SETUP AND INSTALLATION

Proper installation of the drain hose is crucial for preventing leaks and ensuring efficient operation of your washing machine. Follow these general steps:

1. **Safety First:** Before beginning any work, ensure the washing machine is unplugged from the power outlet and the water supply is turned off.
2. **Locate Old Hose:** Identify the existing drain hose at the back of your washing machine. It typically connects to a drain pump outlet on the machine and leads to a standpipe or sink drain.
3. **Disconnect Old Hose:** Loosen any clamps or fasteners securing the old hose to the washing machine and the drain point. Have a bucket or towels ready to catch any residual water. Carefully remove the old hose.
4. **Connect New Hose:** Attach one end of the new drain hose to the washing machine's drain pump outlet. Secure it firmly with a hose clamp (not included, typically reusable from old hose or purchased separately) to prevent leaks.
5. **Route Hose:** Route the other end of the hose to your designated drain point (e.g., standpipe, utility sink). Ensure the hose is not kinked or bent sharply, which can impede drainage. The end of the hose should be securely placed to prevent it from dislodging during operation.
6. **Secure Hose:** If connecting to a standpipe, ensure the hose is inserted deep enough to prevent splashing but not so deep that it creates a siphon effect. Use a U-bend bracket if necessary to secure it.
7. **Test for Leaks:** Once installed, turn on the water supply and plug in the washing machine. Run a short rinse or drain cycle and carefully inspect all connections for any signs of leaks.



Image 2: Close-up view of the drain hose ends, illustrating the angled and straight connectors for attachment to the washing machine and drain.

OPERATING CONSIDERATIONS

While the drain hose itself does not have operational controls, its proper function is integral to the washing machine's operation. During the wash and rinse cycles, the washing machine's pump will push wastewater through

this hose to the drain. Ensure the hose remains free of kinks and obstructions to allow for smooth and complete drainage.

MAINTENANCE

Regular inspection of your drain hose can help prevent issues and prolong its lifespan:

- **Check for Kinks:** Periodically check the hose for any kinks or sharp bends, especially if the washing machine has been moved. Kinks can restrict water flow and lead to drainage problems.
- **Inspect for Wear and Damage:** Look for cracks, tears, bulges, or signs of deterioration on the hose material. Any visible damage may indicate a potential leak risk.
- **Clean Connections:** Occasionally, check the connections at both ends of the hose for any buildup of lint or debris that might impede drainage or cause blockages.
- **Secure Placement:** Ensure the hose remains securely in its drain point to prevent accidental dislodgement during the spin cycle.

TROUBLESHOOTING

If you encounter issues related to drainage, consider the following:

- **No Drainage or Slow Drainage:**
 - Check if the drain hose is kinked or bent. Straighten any kinks.
 - Ensure the drain hose is not inserted too far into the standpipe, which can create a siphon effect and prevent proper drainage.
 - Inspect the drain filter or pump filter on your washing machine for blockages.
 - Verify that the drain itself (sink or standpipe) is not clogged.
- **Leaks at Connections:**
 - Ensure hose clamps are tightened securely at both the washing machine and the drain point. Do not overtighten, as this can damage the hose.
 - Check if the hose is properly seated on the connection points.
 - Inspect the hose for any cracks or damage near the connections.
- **Hose Detachment:**
 - Ensure the hose is securely fastened to the washing machine and the drain. Use appropriate clamps and brackets.
 - Verify that the washing machine is level and stable to minimize excessive vibration during the spin cycle, which can cause the hose to move.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance technician.

SPECIFICATIONS

Attribute	Detail
Manufacturer	INDESIT
Reference / Model Number	C00051563

ASIN	B00IFHTLUU
First Available Date	February 13, 2014

WARRANTY AND SUPPORT

This product is typically covered by a standard return policy. For specific details regarding returns or replacements, please refer to the purchase terms and conditions from your seller. The buybox winner for this product offers a return policy of 30 days (refund/replacement).

For technical support or further inquiries, it is recommended to contact the seller directly. The seller for this product is SEM BOUTIQUE.