

[manuals.plus](#) /› [Snakebyte](#) /› [Snakebyte PS3 Premium Wired Controller User Manual](#)

Snakebyte PS3 Premium Wired Controller

Snakebyte PS3 Premium Wired Controller User Manual

1. INTRODUCTION

1.1 Product Overview

The Snakebyte PS3 Premium Wired Controller is designed for an enhanced gaming experience on both PlayStation 3 and PC platforms. It features a comfortable, ergonomic design and includes a touchpad for precise control and navigation. The controller connects via USB, ensuring a stable and reliable connection without the need for batteries.



Image 1.1: Front view of the Snakebyte PS3 Premium Wired Controller.

1.2 Package Contents

- Snakebyte PS3 Premium Wired Controller
- Integrated USB Connection Cable

2. SETUP

2.1 Connecting to PlayStation 3

1. Ensure your PlayStation 3 console is powered on.
2. Connect the USB cable of the Snakebyte controller to an available USB port on your PlayStation 3 console.
3. The controller should be automatically recognized by the console. Press the central PS button to activate and assign the controller to a player number.

2.2 Connecting to PC

1. Ensure your PC is powered on.
2. Connect the USB cable of the Snakebyte controller to an available USB port on your PC.
3. Your operating system should automatically detect and install the necessary drivers. This process may take a few moments.
4. Once drivers are installed, the controller is ready for use with compatible PC games. You may need to configure controller settings within individual game applications.

3. OPERATING INSTRUCTIONS

3.1 Controller Layout

The Snakebyte PS3 Premium Wired Controller features a standard layout for intuitive gameplay. Refer to the image below for a visual guide to the controller's buttons and components.



Image 3.1: Detailed view of the controller's button layout.

- **Directional Pad (D-Pad):** Located on the left, used for precise directional input.
- **Left Analog Stick:** Located below the D-Pad, used for movement and camera control.
- **Right Analog Stick:** Located below the action buttons, used for camera control or aiming.
- **Action Buttons (Triangle, Circle, Cross, Square):** Located on the right, used for in-game actions.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top edge of the controller, used for various in-game functions like aiming, firing, or menu navigation.
- **PS Button:** Central button, used to access the PlayStation menu or activate the controller.
- **SELECT Button:** Typically used for menu navigation or specific in-game functions.
- **START Button:** Typically used to pause games or access in-game menus.
- **TURBO Button:** Activates a rapid-fire function for assigned buttons.
- **CLEAR Button:** Deactivates the TURBO function.
- **Touchpad:** Central touch-sensitive surface for additional input, primarily on PS3.

3.2 Using the TURBO Function

1. Press and hold the **TURBO** button.
2. While holding TURBO, press the desired action button (e.g., Cross, Square, Circle, Triangle, L1, R1, L2, R2) you wish to assign the rapid-fire function to.
3. Release both buttons. The assigned button will now activate its function repeatedly when held down.
4. To deactivate the TURBO function for a specific button, press and hold the **CLEAR** button, then press the assigned action button.

4. MAINTENANCE

4.1 Cleaning

To maintain the controller's condition, clean it regularly. Use a soft, dry cloth to wipe down the surface. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the controller's finish and internal components. Do not allow liquids to enter the controller.

4.2 Storage

Store the controller in a dry place, away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the controller to prevent damage to buttons or analog sticks. Keep the USB cable neatly coiled to prevent tangling or damage.

5. TROUBLESHOOTING

Problem	Possible Solution
Controller not responding.	<ul style="list-style-type: none">Ensure the USB cable is securely connected to both the controller and the console/PC.Try connecting the controller to a different USB port.Restart your console or PC.For PC, check Device Manager to ensure drivers are installed correctly.
Specific buttons or analog sticks are not working correctly.	<ul style="list-style-type: none">Check for any physical obstructions or debris around the buttons or sticks.Ensure the controller is properly connected and recognized by the system.Test the controller with another game or application to determine if the issue is game-specific.
TURBO function not activating or deactivating.	<ul style="list-style-type: none">Ensure you are following the correct procedure: press and hold TURBO, then press the desired action button to activate. Press and hold CLEAR, then press the action button to deactivate.Verify that the TURBO and CLEAR buttons themselves are functioning.

6. SPECIFICATIONS

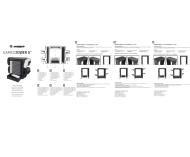
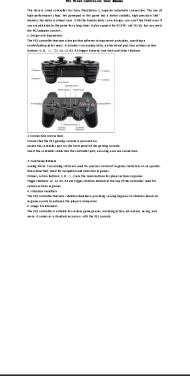
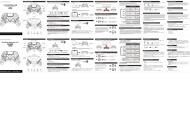
Feature	Detail
Brand	Snakebyte
Compatible Devices	PC, PlayStation 3
Controller Type	Gamepad
Connectivity Technology	USB (Wired)
Special Feature	Touchpad
Item Weight	10.4 ounces (approx. 295 grams)

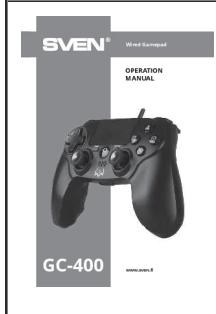
Feature	Detail
Package Dimensions	8.6 x 6.1 x 3.3 inches (approx. 21.8 x 15.5 x 8.4 cm)
Date First Available	February 18, 2014

7. WARRANTY AND SUPPORT

For information regarding warranty coverage and technical support, please refer to the documentation included with your purchase or visit the official Snakebyte website. Contact details for customer service are typically available on the manufacturer's product page or support section.

Related Documents - PS3 Premium Wired Controller

	<p>Snakebyte GAMES: TOWER 5 for PS5 - Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Snakebyte GAMES: TOWER 5 storage and accessory solution for PlayStation 5. Includes product information, content list, assembly instructions, and safety precautions in multiple languages.</p>
	<p>snakebyte KEY:BOARD PRO™ Gaming Keyboard: Instruction Manual & Features</p> <p>Download the official instruction manual for the snakebyte KEY:BOARD PRO™ gaming keyboard. Learn about installation, media controls, RGB lighting effects, conflict-free gaming keys, safety guidelines, and technical support.</p>
	<p>Sven GC-400 Wired Gamepad Operation Manual</p> <p>Official operation manual for the Sven GC-400 Wired Gamepad, covering features, system requirements, connection, installation, and troubleshooting for PC and PlayStation consoles.</p>
	<p>PS2 Wired Controller User Manual - Sony PlayStation 2 Gaming Accessory</p> <p>Comprehensive user manual for the PS2 Wired Controller, detailing its ergonomic design, functional buttons, connection instructions for PlayStation 2, PS3, and PC, vibration feedback, and essential care and maintenance tips.</p>
	<p>AyeBeau Wireless Controller for PS4, PS3, PC, and Mobile Devices - User Manual</p> <p>Comprehensive user manual for the AyeBeau wireless controller, compatible with PlayStation 4, PlayStation 3, PC, Android, and TV devices. Includes setup, operation, and troubleshooting information.</p>



[Sven GC-400 Wired Gamepad Operation Manual](#)

Comprehensive operation manual for the Sven GC-400 wired gamepad, covering setup, features, troubleshooting, and system requirements for PC and PlayStation consoles.