

[Manuals.plus](#) /

› [RM Series](#) /

› [RM Series RMC10664 Remote Control User Manual](#)

## RM Series RMC10664

# RM Series RMC10664 Remote Control User Manual

Dedicated Replacement Remote Control

## INTRODUCTION

---

This RM Series remote control is a dedicated replacement designed to operate all functions of the original RMC10664 remote control. It requires no programming; simply insert batteries, and it is ready for use. The remote control is assembled and checked in the UK.

It utilizes the latest remote control technology chipsets to ensure infrared codes precisely match the original remote control. Unlike generic replacements, all buttons on this RM Series remote are correctly labeled, eliminating the need to constantly refer to a manual for button functions.



**Figure 1:** Front view of the RM Series RMC10664 remote control, displaying its ergonomic design and clearly labeled buttons for various functions including power, numbers, volume, channel, navigation, and dedicated app buttons.


## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

The remote control is now ready for immediate use without any programming.

 





**Figure 2:** Back view of the remote control with the battery compartment closed (left) and open (right), illustrating the battery installation process for two AAA batteries.

## OPERATING INSTRUCTIONS

---

To operate your device, point the remote control directly at the device's infrared receiver. Ensure there are no obstructions between the remote and the device.

- **Power Button:** Press the **POWER** button (usually red, top left) to turn your device on or off.
- **Number Buttons (0-9):** Use these buttons to directly select channels or input numerical values.
- **Volume Control:** Press **VOL+** to increase volume and **VOL-** to decrease volume. The **MUTE** button silences the audio.
- **Channel Control:** Use **CH+** to go to the next channel and **CH-** to go to the previous channel.
- **Navigation Buttons:** The directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) are used to navigate through menus and options. Press the **OK** button to confirm a selection.
- **Source/Input:** The **SOURCE** or **INPUT** button allows you to switch between different input sources (e.g., HDMI 1, HDMI 2, AV).
- **Menu/Exit:** Access the device's main menu with the **MENU** button and exit menus with the **EXIT** or **BACK** button.
- **Playback Controls:** Buttons like **PLAY, PAUSE, STOP, REWIND, FAST FORWARD** are used for media playback.
- **Dedicated App Buttons:** If present, buttons labeled **NETFLIX, YOUTUBE**, etc., provide direct access to these applications.

Refer to your device's original manual for specific functions related to its menu structure and advanced features.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

### Battery Care

- Replace batteries when the remote control's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent potential leakage and damage.
- Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

### Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the positive (+) and negative (-) terminals aligned as indicated. Replace old batteries with new ones.
- **Line of Sight:** Verify there are no obstructions (e.g., furniture, other objects) between the remote control and the device's infrared receiver. The remote requires a clear line of sight.
- **Device Power:** Confirm that the device you are trying to control is powered on and functioning correctly.
- **Remote Indicator:** The remote control features a red LED indicator. If this indicator does not light up when a button is pressed, the batteries may be dead or incorrectly inserted.

### Intermittent Operation

- Weak batteries can cause intermittent operation. Replace them.
- Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the device.

## SPECIFICATIONS

---

<b>Model</b>	RMC10664
<b>Brand</b>	RM Series
<b>Connectivity Technology</b>	Infrared
<b>Maximum Operating Range</b>	10 Meters
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Compliance</b>	CE, ROHS