

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT PHILIPS TV REMOTE User Manual

USARMT SG_B00IINRZMW_US

USARMT PHILIPS TV REMOTE User Manual

Model: SG_B00IINRZMW_US

INTRODUCTION

This user manual provides essential information for the operation and maintenance of your USARMT replacement remote control for Philips televisions. This remote is designed to be compatible with a wide range of Philips TV models, offering a direct replacement experience without complex setup.

Compatible Philips TV Models include:

- 32PFL3514D, 32PFL3504D, 42PFL3704D
- 19PFL3504D, 22PFL3504D, 22PFL4505D
- 19PFL4505D, 19PFL3505D, 22PFL3505D
- 32PFL4507, 26PFL4507, 22PFL4507
- 32HFL4663S, 32PFL3515D, 32PFL3505D
- 32PFL3506, 32PFL4505D, 46PFL3705D
- 40PFL3705D, 46PFL3505D, 40PFL3505D
- 46PFL3706, 40PFL3706, 40PFL4707, 50PFL3707





Figure 1: Overview of the USARMT Philips TV Remote Control. This image displays the full layout of the remote, including all buttons and their labels.

The USARMT replacement remote control is preprogrammed and requires no additional setup or programming for compatible Philips TV models. Simply insert the batteries, and the remote will be ready for use.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use new batteries and dispose of old batteries responsibly according to local regulations.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your USARMT remote control.

Button Functions

Button	Function
Power ()	Turns the television on or off.
SOURCE	Selects the input source (e.g., HDMI, AV, Component).
FORMAT	Adjusts the screen aspect ratio or picture format.
SLEEP	Sets a timer for the TV to automatically turn off.
AUTO PIC	Adjusts picture settings automatically.
AUTO SOUND	Adjusts sound settings automatically.
SAP	Selects Secondary Audio Program (e.g., foreign language, audio description).
BACK	Returns to the previous menu or channel.
FREEZE	Pauses the current image on the screen.
Navigation Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms a selection or enters a menu.
EXIT	Exits the current menu or on-screen display.
MENU	Opens the main menu of the television.
INFO	Displays information about the current program or input.
VOL (+/-)	Adjusts the volume level up or down.
MUTE	Mutes or unmutes the television sound.
CH (+/-)	Changes the channel up or down.

Button	Function
Numeric Keypad (0-9)	Directly enters channel numbers or other numerical inputs.
PREV CH	Switches to the previously viewed channel.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries: Check if batteries are inserted correctly with correct polarity. Replace old or dead batteries with new ones. ◦ Line of Sight: Ensure there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions. ◦ Distance: Make sure you are within the effective operating range of the remote.
Some buttons not working.	◦ Dirt/Debris: Buttons may be stuck or obstructed by dirt. Clean the remote as described in the Maintenance section. ◦ Damage: If the remote has been dropped or subjected to impact, internal damage may have occurred.
Remote works intermittently.	◦ Low Batteries: Batteries may be running low. Replace them. ◦ Interference: Other electronic devices might be causing infrared interference. Try using the remote in a different environment.

SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model Number	SG_B00IINRZMW_US

Feature	Detail
Product Dimensions	10 x 6 x 2 inches
Item Weight	2.39 ounces
Color	Black
Special Feature	Ergonomic
Max Number of Supported Devices	1
Compatible Devices	Television

WARRANTY AND SUPPORT

Specific warranty information for USARMT products is typically provided at the point of purchase or through the seller. Please refer to your purchase documentation for details regarding warranty coverage.

For technical support or further assistance, please contact the seller or manufacturer directly. Contact information may be available on the product packaging or the seller's online storefront.