

[manuals.plus](#) /› [Bose](#) /› [Bose Acoustic Wave Music System II - Graphite Gray User Manual](#)**Bose 352752-1100**

Bose Acoustic Wave Music System II User Manual

Model: 352752-1100

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bose Acoustic Wave Music System II. This all-in-one music system is designed to deliver high-quality audio for various environments. It incorporates advanced waveguide speaker technology and a digital platform for accurate sound reproduction. The system supports CD playback, AM/FM radio, and auxiliary input for external devices. It is controlled via an intuitive interface and a credit card-sized remote.

PRODUCT OVERVIEW

The Bose Acoustic Wave Music System II integrates multiple audio components into a single unit. Key features include:

- Waveguide speaker technology for rich, full-range sound.
- Integrated CD player compatible with standard and home-burned CDs.
- AM/FM radio tuner with station presets.
- Auxiliary input for connecting external audio sources like MP3 players.
- Headphone jack for private listening.
- Informational display for track, station, and system status.
- Compact design suitable for various room placements.



Image: The Bose Acoustic Wave Music System II in Graphite Gray, shown with its remote control and a compact disc. The system features a sleek, curved design with speaker grilles on the sides and a central control panel on top.

SETUP

Follow these steps to set up your Acoustic Wave Music System II:

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
- 2. Placement:** Place the system on a stable, flat surface. Ensure adequate ventilation around the unit. Avoid placing it near heat sources or in direct sunlight.
- 3. Power Connection:** Connect the power cord to the AC power inlet on the back of the system, then plug it into a wall outlet.
- 4. Antenna Connection:** For optimal AM/FM reception, connect the supplied AM loop antenna and FM wire antenna to their respective jacks on the back of the system. Position the antennas for best reception.
- 5. Initial Power On:** Press the **On/Off** button on the system or remote control to power on the unit.

OPERATING INSTRUCTIONS

Power On/Off

Press the **On/Off** button on the system's control panel or the remote control to turn the system on or off.

CD Playback

To play a CD:

1. Press the **CD** button on the control panel or remote.
2. Insert a CD into the CD slot, label-side up. The system will automatically begin playing the disc.

3. Use the **Play/Pause** button to pause or resume playback.
4. Press the **Seek / Track** buttons (|◀◀ or ▶▶|) to skip tracks. Hold them down to seek within a track.
5. Press the **Stop** button to stop playback.



Image: A close-up view of the control panel and display screen of the Bose Acoustic Wave Music System II. The display shows 'CD RAIN KING' and track time. Buttons for Volume, Seek/Track, Play/Pause, Stop, Tune/MP3, Play Mode, and Menu/Adjust are visible.

Radio Operation (AM/FM)

To listen to the radio:

1. Press the **FM** or **AM** button on the control panel or remote.
2. Use the **Tune / MP3** buttons (< or >) to manually tune to a station.
3. To set a preset: Tune to the desired station, then press and hold one of the numbered **Presets** buttons (1-6) until you hear a beep.
4. To recall a preset: Press the corresponding numbered **Presets** button (1-6).

Auxiliary Input

To connect an external audio device:

1. Connect an audio cable (not supplied) from the headphone jack or line-out of your external device to the **AUX IN** jack on the back of the Acoustic Wave Music System II.
2. Press the **AUX** button on the control panel or remote.
3. Start playback on your external device. Adjust its volume as needed.

Remote Control

The credit card-sized remote control provides full functionality for your system. Ensure the remote has a working battery and is pointed towards the system's front panel for optimal operation.



Image: The remote control for the Bose Acoustic Wave Music System II. It features buttons for On/Off, Mute, FM, AM, CD, AUX 1-2, Volume, Presets/Disc (1-6), Seek/Track, Play/Pause, Stop, Tune/MP3, CD Changer, and Next Disc.

MAINTENANCE

Proper care ensures the longevity and performance of your system:

- **Cleaning the Unit:** Wipe the exterior surfaces with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **CD Player Lens Cleaning:** If you experience issues with CD playback, such as skipping or tracks not advancing, the CD player lens may require cleaning. Use a commercially available CD lens cleaner disc according to its instructions.
- **Ventilation:** Ensure that the ventilation openings on the system are not blocked to prevent overheating.
- **Battery Replacement:** Replace the remote control battery when its range decreases or it stops responding. Refer to the remote's battery compartment for the correct battery type.

TROUBLESHOOTING

If you encounter issues with your Acoustic Wave Music System II, refer to the following common problems and solutions:

- **No Power:** Ensure the power cord is securely plugged into both the system and a working wall outlet.
- **No Sound:** Check the volume level on the system and any connected auxiliary devices. Ensure the correct source (CD, AM, FM, AUX) is selected.
- **CD Skipping or Not Playing:** Ensure the CD is clean and free of scratches. Try cleaning the CD player lens as described in the Maintenance section.
- **Poor Radio Reception:** Adjust the position of the AM loop and FM wire antennas. Ensure they are fully extended and away from other electronic devices that may cause interference.
- **Display Issues (e.g., going out):** Try unplugging the system from the power outlet for a few minutes, then plugging it back in. If the issue persists, contact customer support.
- **System Randomly Switches Input Modes:** Ensure no buttons on the system or remote are stuck. Check for potential electrical interference from other devices. If the problem continues, contact customer support.
- **Unbalanced Sound (e.g., low bass, voice-forward):** Access the system's menu (using the **Menu / Adjust** button) to check for sound balance or tone control settings. Adjust these settings to your preference.

If these steps do not resolve the issue, please contact Bose customer support for further assistance.

SPECIFICATIONS

Model Number	352752-1100
Brand	Bose
Color	Graphite Gray
Product Dimensions (L x W x H)	20.8 x 14.6 x 10.5 inches
Item Weight	17.91 pounds
Connectivity Technology	Auxiliary
Speaker Type	Stereo
Date First Available	September 23, 2006

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Bose

website. For technical support, product registration, or to inquire about accessories, please contact Bose customer service directly.

Legal Disclaimer: This product is intended for shipment within the U.S. Only.

Related Documents - 352752-1100

	<p>Bose Wave Music System IV Owner's Guide: Setup, Features, and Operation</p> <p>This comprehensive owner's guide for the Bose Wave Music System IV provides detailed instructions on setup, system features, connecting external devices, personalizing settings, and troubleshooting. Learn to enjoy high-quality audio from FM/AM radio, digital radio, and CDs.</p>
	<p>Bose Acoustic Wave Music System II Owner's Guide</p> <p>A comprehensive owner's guide for the Bose Acoustic Wave Music System II, detailing setup, operation, features, connectivity, personalization, and troubleshooting for optimal audio performance.</p>
	<p>Bose Wave Music System IV Owner's Guide</p> <p>Comprehensive owner's guide for the Bose Wave Music System IV, covering setup, operation, features, safety instructions, and troubleshooting.</p>
	<p>Bose Bass Module 700: Quick Start Guide</p> <p>Learn how to set up your Bose Bass Module 700 with your Bose Smart Soundbar or Bose TV Speaker using the Bose Music app or a wired connection. Includes setup instructions and placement guidelines.</p>
	<p>Bose Lifestyle Music Center Owner's Manual</p> <p>This owner's manual provides comprehensive instructions for setting up, operating, and troubleshooting the Bose Lifestyle Music Center, a sophisticated multi-zone home audio system. Learn about its features, connections, remote control, and more.</p>
	<p>Bose Wave Music System User Manual and Guide</p> <p>Official user manual for the Bose Wave Music System, detailing setup, operation of CD player, radio (FM/AM), AUX input, sleep timer, clock settings, and troubleshooting. Includes model numbers OM-1317-S and 1201 (B).</p>

