

## Severin MW 7874

# SEVERIN Microwave Oven with Grill 20 L, MW 7874 Instruction Manual

Model: MW 7874

## 1. INTRODUCTION

---

Thank you for choosing the SEVERIN MW 7874 Microwave Oven with Grill. This appliance is designed for convenient and efficient heating, defrosting, and grilling of various foods. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before first use and keep it for future reference. This manual provides essential information on product features, safety precautions, installation, operation, maintenance, and troubleshooting.

## 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not operate the oven if the door or door seals are damaged. Contact qualified service personnel for repair.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed to stifle any flames.
- Do not overcook food.
- Clean the oven regularly and remove any food deposits.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

- This appliance is intended for household use only.
- Ensure the appliance is properly grounded.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your SEVERIN MW 7874 Microwave Oven with Grill.

9 niveaux de puissance différents dont décongélation et gril

Boutons rotatifs pour régler la puissance et le temps



Front view of the SEVERIN MW 7874 Microwave Oven with Grill, showcasing its stainless steel and black design with rotary controls.

- **Oven Cavity:** The interior space where food is cooked.
- **Door:** With a viewing window and handle.
- **Door Safety Lock System:** Prevents operation when the door is open.
- **Control Panel:** Features two rotary knobs for power/function selection and time setting.
- **Turntable Support:** Holds the glass turntable in place.
- **Glass Turntable:** Rotates food for even cooking.
- **Grill Rack:** Used for grilling food.



*The interior of the microwave oven, featuring the removable glass turntable and the metal grill rack positioned above it.*

## 4. SETUP

---

Follow these steps for initial setup of your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packaging materials. Check for any damage. Do not operate if damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation by leaving at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
3. **Power Connection:** Plug the power cord into a properly grounded electrical outlet (230V, 50Hz). Ensure the voltage matches the rating label on the appliance.
4. **Turntable Assembly:**
  - Place the turntable support ring in the center of the oven cavity.
  - Position the glass turntable on top of the support ring, ensuring it sits securely in the center hub.
5. **First Use:** Before cooking food, place a cup of water in the oven and heat it for 5 minutes at maximum microwave power. This helps to remove any manufacturing odors.

## 5. OPERATING INSTRUCTIONS

---

The SEVERIN MW 7874 features two rotary knobs for easy control: one for power/function selection and one for time/weight setting.



*A detailed view of the upper rotary dial, used to select microwave power levels from 125W to 700W, and grill/combination settings up to 900W, including a defrost setting.*



*A detailed view of the lower rotary dial, used to set the cooking time up to 30 minutes, and also for defrosting by weight.*

## 5.1. General Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.

3. Select the desired cooking function and power level using the upper rotary knob.
4. Set the cooking time using the lower rotary knob (up to 30 minutes). The oven will start automatically.
5. When the set time expires, an acoustic signal will sound, and the oven will switch off.
6. Carefully remove the food. Always use oven mitts as dishes can be hot.

## 5.2. Microwave Cooking

Use the upper rotary knob to select one of the 9 microwave power levels (e.g., 125W, 250W, 400W, 550W, 700W). Higher wattage means faster cooking.

## 5.3. Grill Function

To use the grill function (up to 900W), select the grill symbol on the upper rotary knob. Place food on the grill rack, which should be placed on the turntable. The grill function is ideal for browning and crisping food.

## 5.4. Combination Cooking

The appliance offers combination settings (e.g., Grill + Microwave 200W, Grill + Microwave 350W, Grill + Microwave 450W). These settings combine microwave cooking with grilling for faster results and a crispy finish. Select the desired combination setting using the upper rotary knob.

## 5.5. Defrost Function

The defrost function allows you to thaw food either by time or by weight.

- **Defrost by Time:** Select the defrost symbol (snowflake) on the upper rotary knob. Then, use the lower rotary knob to set the desired defrosting time.
- **Defrost by Weight:** Select the defrost by weight symbol (snowflake with kg) on the upper rotary knob. Use the lower rotary knob to set the weight of the food. The oven will automatically calculate the defrosting time.

# 6. MAINTENANCE AND CLEANING

---

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool down completely.
- **Oven Interior:** Clean the oven cavity after each use with a damp cloth. For stubborn stains, use a mild detergent. Avoid abrasive cleaners or metal brushes. The stainless steel interior is designed for easy cleaning.
- **Oven Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Door and Door Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
- **Glass Turntable and Grill Rack:** The glass turntable and grill rack can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors from the oven cavity, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat on high microwave power for 5 minutes, then let it sit in the oven

for another 5 minutes before wiping the interior.

## 7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect power level or cooking time set; Food not suitable for microwave; Utensil not microwave-safe.	Adjust power level and cooking time; Ensure food is suitable for microwave cooking; Use only microwave-safe dishes.
Turntable not rotating	Turntable not correctly placed; Turntable support dirty or damaged; Food too large or heavy.	Re-position turntable and support; Clean turntable support and rollers; Use smaller dishes or lighter food items.
Sparking in oven	Metal in oven; Food residue on cavity walls.	Remove any metal objects (foil, metal-trimmed dishes); Clean oven interior thoroughly.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

If the problem persists after checking these points, please contact SEVERIN customer service or a qualified technician.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Severin
Model Number	MW 7874
Capacity	20 Liters
Microwave Power Output	700 Watts
Grill Power Output	Up to 900 Watts
Power Levels	9 (including defrost and grill combinations)
Timer	30 minutes with acoustic signal
Turntable Diameter	24.5 cm
Dimensions (L x W x H)	45.2 x 36.3 x 26.2 cm

Feature	Specification
Weight	11.47 kg
Voltage	230 Volts
Material	Stainless Steel
Interior Coating	Stainless Steel
Installation Type	Countertop

## 9. WARRANTY AND SUPPORT

---

SEVERIN products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or service inquiries, please contact your local SEVERIN customer service center. You can usually find contact information on the SEVERIN official website or in the product packaging. When contacting support, please have your model number (MW 7874) and purchase date ready.