



Manuals.plus /

› Transformers /

› Transformers Age of Extinction Chomp and Stomp Grimlock Figure Instruction Manual

Transformers A6145

Transformers Age of Extinction Chomp and Stomp Grimlock Figure Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Transformers Age of Extinction Chomp and Stomp Grimlock Figure. This manual provides essential information for the safe and proper operation, maintenance, and troubleshooting of your new figure. Please read these instructions carefully before use and retain them for future reference.

The Chomp and Stomp Grimlock figure is a large, interactive toy designed for fans aged 5 and up. It features a one-step transformation between robot and dinosaur modes, light-up eyes, chomping jaw, and pop-out weapons. An Optimus Prime mini-figure is included to activate additional features.

2. PRODUCT OVERVIEW

The Transformers Age of Extinction Chomp and Stomp Grimlock Figure is a 20-inch tall robot that transforms into a T-Rex dinosaur. It includes:

- Stomp And Chomp Grimlock Figure with Sword
- Optimus Prime Mini-Figure
- Demo Batteries (2 AAA batteries)
- Instruction Manual (this document)



Figure in Packaging: The image shows the Transformers Age of Extinction Chomp and Stomp Grimlock Figure in its retail packaging, highlighting its 1-step transformation and 20-inch size. The included Optimus Prime mini-figure and sword are also visible.



Grimlock in Robot Mode: This image displays the Grimlock figure in its impressive robot mode, standing tall with its golden sword. The small Optimus Prime mini-figure is shown next to it for scale.

3. SETUP

3.1 Battery Installation

Your Grimlock figure requires 2 AAA batteries (included for demonstration purposes). To install or replace batteries:

1. Locate the battery compartment on the figure (refer to the diagram in the original packaging for exact location).
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw.

Note: Adult assembly is required for initial setup, including battery installation and attaching the tail.

3.2 Attaching the Sword

The included golden sword can be placed in Grimlock's hand in robot mode. Gently slide the handle of the sword into the designated slot in his hand until it is secure.

4. OPERATING INSTRUCTIONS

4.1 One-Step Transformation

Grimlock features a simple one-step transformation:

- **Robot to Dinosaur Mode:** Locate the lever on Grimlock's back. Press and push down on this lever to initiate the transformation. The figure will automatically convert from robot to T-Rex dinosaur mode.
- **Dinosaur to Robot Mode:** To revert to robot mode, press the same lever on Grimlock's back and push it upwards. The figure will transform back into its robot form.

Your browser does not support the video tag.

Official Product Video: This video demonstrates the one-step transformation of the Transformers Age of Extinction Stomp and Chomp Grimlock Figure between its robot and dinosaur modes, showcasing its ease of use and dynamic action.

4.2 Activating Lights and Sounds

Grimlock is equipped with various interactive features:

- **Light-Up Eyes & Chomping Jaw:** In dinosaur mode, squeeze the lever on his back or press down on his head to activate his light-up eyes and chomping jaw, accompanied by roaring sounds.
- **Optimus Prime Interaction:** Place the included Optimus Prime mini-figure onto Grimlock's back in dinosaur mode. This will activate different lights, sounds, and weapons, enhancing the play experience.
- **Pop-Out Weapons:** Grimlock features pop-out weapons that can be deployed for battle in either mode.



Interactive Play: A child is shown interacting with the Grimlock figure in dinosaur mode, with the Optimus Prime mini-figure placed on its back, demonstrating the toy's interactive features.

5. MAINTENANCE

- **Cleaning:** Wipe the figure with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight to prevent discoloration or damage.
- **Battery Care:** Remove batteries if the toy is not going to be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Figure not transforming smoothly:** Ensure no parts are obstructed. Apply gentle, even pressure to the transformation lever.
- **Lights or sounds not working:** Check battery installation and replace with fresh batteries if necessary. Ensure the Optimus Prime mini-figure is correctly placed to activate features.
- **Loose parts:** If any parts become loose, gently reattach them. Avoid excessive force during play.

7. SPECIFICATIONS

Feature	Detail
Model Number	A6145
Dimensions (L x W x H)	6.73" x 14.25" x 16.26" (Robot Mode)
Weight	4.6 Pounds
Material	Plastic
Recommended Age	5 years and up
Batteries	2 AAA batteries (included)
Included Components	Stomp And Chomp Grimlock Figure With Sword, Optimus Prime Figure, Demo Batteries, Instructions

8. WARRANTY AND SUPPORT

This product comes with no manufacturer warranty. For any questions or concerns regarding your Transformers Age of Extinction Chomp and Stomp Grimlock Figure, please refer to the contact information provided on the product packaging or visit the official Transformers website.

For additional information or to explore other Transformers products, visit the Transformers Store.