

UPBRIGHT AV Input Cord

UPBRIGHT Audio/Video Cable Instruction Manual

Compatible with The Sharper Image EC-PJ10 ECPJ10 Movie/Video Game Entertainment LCD Projector

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your UPBRIGHT Audio/Video (AV) Input Cord. This cable is designed to connect compatible devices, such as DVD players or game consoles, to The Sharper Image EC-PJ10 ECPJ10 LCD Projector for transmitting audio and video signals.

2. SAFETY INFORMATION

- Ensure all devices are powered off before connecting or disconnecting the cable.
- Avoid bending or kinking the cable sharply, as this can damage internal wires.
- Keep the cable away from heat sources, moisture, and direct sunlight.
- Do not attempt to modify or repair the cable. Contact support if damaged.

3. PACKAGE CONTENTS

- 1 x UPBRIGHT Audio/Video (AV) Input Cord

4. SETUP

Follow these steps to connect your UPBRIGHT Audio/Video Cable to your projector and source device:

1. **Identify Connectors:** The AV cable features three color-coded RCA connectors on each end:
 - **Yellow:** For composite video signal.
 - **White:** For left audio channel.
 - **Red:** For right audio channel.
2. **Connect to Source Device:** Locate the corresponding yellow, white, and red AV output ports on your source device (e.g., DVD player, game console). Insert the cable's connectors into the matching color-coded ports.
3. **Connect to Projector:** Locate the corresponding yellow, white, and red AV input ports on The Sharper Image EC-PJ10 ECPJ10 Projector. Insert the other end of the cable's connectors into the matching color-coded

ports.



This image displays the UPBRIGHT Audio/Video Cable, featuring a black cable with three color-coded RCA connectors on each end: red for right audio, white for left audio, and yellow for composite video. The connectors are designed for secure attachment to compatible devices.

5. OPERATING INSTRUCTIONS

After connecting the cable:

1. Power on your source device and The Sharper Image EC-PJ10 ECPJ10 Projector.
2. On your projector, select the correct input source (usually labeled AV, Video, or Composite) using the projector's remote control or on-device menu.
3. The audio and video from your source device should now be displayed and heard through the projector or connected audio system.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the cable and connectors. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, coil the cable loosely and store it in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tight coiling or tangling.

7. TROUBLESHOOTING

No Video or Audio Output

- Ensure the cable is securely connected to both the source device and the projector, matching the color codes (yellow to yellow, white to white, red to red).
- Verify that the projector's input source is correctly set to AV or Composite Video.
- Check that both the source device and the projector are powered on and functioning correctly.
- Test with another AV cable if available to rule out a cable issue.

Poor Video or Audio Quality

- Ensure all connectors are fully inserted and secure. Loose connections can cause signal degradation.
- Check for any visible damage to the cable or connectors.
- Ensure the cable is not running near strong electromagnetic interference sources.

8. SPECIFICATIONS

- **Brand:** UPBRIGHT
- **Compatible Devices:** Projector (Specifically The Sharper Image EC-PJ10 ECPJ10)
- **Recommended Uses:** Game, Movie/Video Entertainment
- **Color:** Black (Cable), Red/White/Yellow (Connectors)
- **Connector Gender:** Male-to-Male (RCA)
- **Shape:** Round
- **Indoor/Outdoor Usage:** Indoor, Outdoor

9. WARRANTY AND SUPPORT

UPBRIGHT offers the following for this product:

- **Refund Policy:** 30 days from the date of purchase.
- **Exchange Policy:** 24 months from the date of purchase for units in great working condition.

For further assistance or inquiries, please refer to the UPBRIGHT official website or contact their customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question