

[Manuals.plus](#) /

› [Seiko](#) /

› Seiko Analog Black Dial Men's Watch-SKA635 User Manual

## Seiko SKA635

# Seiko Analog Black Dial Men's Watch - SKA635 User Manual

Model: SKA635

### INTRODUCTION

Welcome to the user manual for your Seiko Analog Black Dial Men's Watch, model SKA635. This timepiece combines classic design with Seiko's innovative Kinetic technology, providing reliable and precise timekeeping. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your watch, ensuring you get the most out of your investment.

### PRODUCT OVERVIEW



This image displays the Seiko Analog Black Dial Men's Watch, model SKA635. The watch features a sleek black dial with silver hour markers and hands, a date display at the 3 o'clock position, and a durable stainless steel case and bracelet. The dial is marked with "SEIKO" at the 12 o'clock position and "KINETIC 100M" above the 6 o'clock position, indicating its movement type and water resistance.

## SETUP

### Initial Charge

Your Seiko Kinetic watch is powered by the motion of your arm. Before initial use, or if the watch has stopped, it requires an initial charge.

1. Gently swing the watch from side to side in an arc of about 20 cm (8 inches) at a rate of approximately two swings per second.
2. Continue swinging for several minutes until the second hand begins to move at one-second intervals.
3. For a full charge, continue swinging for approximately 250 swings (about 5 minutes) to achieve 24 hours of power reserve, or up to 500 swings (about 10 minutes) for a full charge of approximately 6 months

power reserve.

## Setting the Time and Date

1. Pull the crown out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands. When setting the minute hand, advance it a few minutes past the desired time and then turn it back to the exact time.
3. Push the crown back in to the first click position.
4. Turn the crown to set the date. Ensure the date changes at midnight, not noon. If setting the date between 9 PM and 1 AM, adjust the time first, then the date, to avoid the date changing incorrectly the next day.
5. Push the crown back in to the normal position.

## OPERATING YOUR WATCH

### Timekeeping

The watch operates continuously once sufficiently charged. The second hand moves in one-second intervals.

### Power Reserve Indication

To check the power reserve, press the button located at the 2 o'clock position (if available, this model might not have a dedicated power reserve button). The second hand will move to indicate the remaining power reserve:

- **5 seconds:** Approximately 1 day
- **10 seconds:** Approximately 7 days
- **20 seconds:** Approximately 1 month
- **30 seconds:** Approximately 6 months (full charge)

After indicating the power reserve, the second hand will return to normal timekeeping.

### Water Resistance

This watch is water resistant to 100 meters (10 ATM). This makes it suitable for everyday use, swimming, and snorkeling. It is not suitable for scuba diving.

- Do not operate the crown or buttons when the watch is wet or submerged in water.
- Rinse the watch with fresh water after exposure to salt water and dry thoroughly.

## MAINTENANCE

### Cleaning

To maintain the appearance and longevity of your watch:

- Wipe the case and bracelet regularly with a soft, dry cloth.
- For stubborn dirt, use a soft brush with mild soap and water, then rinse thoroughly with fresh water and dry completely.
- Avoid using chemical cleaners or solvents.

### Temperature Extremes

Avoid exposing your watch to extreme temperatures (below 5°C or above 35°C) for prolonged periods, as this can affect the accuracy and lifespan of the movement.

### Magnetic Fields

Keep the watch away from strong magnetic fields, such as those produced by speakers, refrigerators, or mobile phones, as this can temporarily affect the watch's accuracy.

### Regular Inspection

It is recommended to have your watch inspected by an authorized Seiko service center every 2-3 years to ensure optimal performance and water resistance.

## TROUBLESHOOTING

| Problem                                             | Possible Cause                                | Solution                                                                                                        |
|-----------------------------------------------------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Watch has stopped or second hand moves irregularly. | Insufficient charge.                          | Swing the watch vigorously for several minutes to generate power. Refer to "Initial Charge" section.            |
| Date changes at noon.                               | AM/PM setting is incorrect.                   | Advance the time by 12 hours.                                                                                   |
| Watch is losing or gaining time significantly.      | Exposure to strong magnetic fields or impact. | Demagnetize the watch or have it inspected by an authorized service center.                                     |
| Condensation inside the crystal.                    | Water ingress.                                | Immediately take the watch to an authorized service center for inspection and repair to prevent further damage. |

## SPECIFICATIONS

- **Model:** SKA635
- **Movement Type:** Kinetic (Automatic Quartz)
- **Case Material:** Stainless Steel

- **Band Material:** Stainless Steel
- **Dial Color:** Black
- **Case Diameter:** 42 mm
- **Case Thickness:** 10 mm
- **Crystal:** Hardlex
- **Water Resistance:** 100 meters (10 ATM / 330 feet)
- **Weight:** Approximately 272 g

## WARRANTY AND SUPPORT

### Warranty Information

Your Seiko watch is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact the seller of record.

### Customer Support

For technical assistance, repairs, or inquiries regarding your Seiko SKA635 watch, please contact an authorized Seiko service center or the retailer from whom you purchased the watch.

You can find more information and locate service centers on the official Seiko website [www.seikowatches.com](http://www.seikowatches.com)