

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Women's Easy Reader Watch 30mm Instruction Manual](#)

Timex TW2R30300

Timex Women's Easy Reader Watch Instruction Manual

Model: TW2R30300

PRODUCT OVERVIEW

The Timex Women's Easy Reader Watch is designed for clear readability and classic style. Featuring a 30mm case, an easy-to-read dial, and the signature Indiglo backlight, this watch combines functionality with a timeless aesthetic. It is water-resistant up to 30 meters.



Image: Front view of the Timex Women's Easy Reader Watch, showcasing the white dial with large, clear numbers and a brown leather strap.

SETUP

Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to the furthest position.
2. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.



Image: Side profile of the watch, highlighting the crown used for time adjustment.

OPERATING INSTRUCTIONS

Using the Indiglo Night-Light

Your Timex Easy Reader watch features the Indiglo night-light for visibility in low-light conditions.

- To activate the Indiglo night-light, press and hold the crown. The entire dial will illuminate.
- Release the crown to turn off the night-light.

Your browser does not support the video tag.

Video: A demonstration of the Timex Women's Easy Reader watch, highlighting its design and features, including the Indiglo night-light. This video is provided by the seller.

MAINTENANCE

Water Resistance

This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for splashes or brief immersion in water, but not for swimming or bathing. Do not press the crown while the watch is wet.

Cleaning

Wipe the watch case and crystal with a soft, damp cloth. For leather straps, avoid excessive moisture and harsh chemicals to preserve their quality.

Battery Replacement

The watch uses 1 Lithium Metal battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.







Image: A close-up view of the watch's brown leather strap and silver buckle.

TROUBLESHOOTING

- Watch not running:** Ensure the crown is fully pushed in. If it still doesn't run, the battery may need replacement.
- Indiglo not working:** Check if the crown is being pressed firmly. If not, the battery may be low.
- Condensation under crystal:** This may indicate a loss of water resistance. Have the watch inspected by a professional immediately.

SPECIFICATIONS

Feature	Detail
Model Number	TW2R30300
Case Diameter	30mm
Case Material	Brass
Band Material	Leather
Movement Type	Quartz
Water Resistance Depth	30 Meters (3 ATM)
Crystal Type	Mineral
Battery Type	Lithium Metal (included)

WARRANTY AND SUPPORT

This Timex watch comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Timex website. For support, contact Timex customer service.

Protection plans are available for purchase separately:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases