

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Big Boss](#) /

› [Big Boss 9287 Ceramic 7-Piece Multi-Functional Grill Set Instruction Manual](#)

Big Boss 9287

Big Boss 9287 Ceramic 7-Piece Multi-Functional Grill Set

Model: 9287 | Brand: Big Boss

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Big Boss 9287 Ceramic 7-Piece Multi-Functional Grill Set. This versatile countertop appliance is designed for grilling, sandwich making, and waffle preparation, offering convenience for various culinary tasks.

PRODUCT FEATURES

- Three sets of PFOA-free non-stick ceramic coating plates for grilling, waffles, and sandwiches.
- Dual cooking surface designed to cook food evenly on both sides simultaneously.
- Compact design for convenient storage.
- Removable plates for simplified cleaning.
- Capable of preparing breakfast, lunch, and dinner items with a single unit.

BIG BOSS™

7PC. CERAMIC GRILL SET

EASY TO
COOK &
CLEAN

CERAMIC
NON-STICK PLATES

NO OIL NEEDED!



SEALS IN JUICES
AND FLAVORS



Figure 1: The Big Boss 9287 set includes the main unit and three types of interchangeable cooking plates.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the unit with a damp cloth. Wash the interchangeable cooking plates with warm, soapy water, rinse thoroughly, and dry completely.
3. **Placement:** Place the grill on a stable, heat-resistant, and dry surface, ensuring adequate ventilation around the unit.
4. **Plate Installation:** Ensure the unit is unplugged and cool. Align the desired cooking plates (grill, waffle, or sandwich) with the slots on the upper and lower heating elements and press firmly until they click into place.

OPERATING INSTRUCTIONS

1. **Preheating:** Close the grill and plug the power cord into a standard 120V electrical outlet. The indicator light will illuminate, signaling that the unit is preheating. Allow approximately 3-5 minutes for the grill to reach optimal cooking temperature.
2. **Food Placement:** Once preheated, carefully open the grill. Place your food item(s) onto the bottom cooking plate. Avoid overcrowding the cooking surface.
3. **Cooking:** Gently close the top cooking plate over the food. The dual cooking surface will cook both sides simultaneously. Cooking times will vary based on the type and thickness of the food.
4. **Monitoring:** Periodically check food for desired doneness. Use heat-resistant, non-metallic utensils to avoid damaging the non-stick coating.

5. **Completion:** Once cooking is complete, carefully remove the food using heat-resistant utensils. Unplug the unit from the electrical outlet and allow it to cool completely before cleaning.

Specific Plate Usage:

- **Grill Plates:** Ideal for meats, vegetables, and panini-style sandwiches. The ribbed surface creates grill marks and drains excess fat.
- **Waffle Plates:** Use for preparing waffles. Ensure batter is evenly spread across the plate.
- **Sandwich Plates:** Designed for sealed sandwiches. Place bread and fillings, then close to seal and toast.



Figure 2: The grill plates are suitable for cooking various meats and vegetables.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your grill set.

1. **Always Unplug:** Before cleaning, always unplug the appliance and allow it to cool completely.
2. **Remove Plates:** Once cool, gently press the release buttons (if applicable) and remove the cooking plates.
3. **Hand Wash Plates:** Wash the non-stick ceramic plates with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick coating. Rinse thoroughly and dry completely.
4. **Clean Exterior:** Wipe the exterior of the grill unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Store the clean, dry unit and plates in a cool, dry place.

TROUBLESHOOTING

- **Appliance Not Heating:** Ensure the power cord is securely plugged into a functional electrical outlet. Check if

the outlet is receiving power.

- **Food Sticking to Plates:** Although plates are non-stick, a light application of cooking oil or spray can be used for certain foods to prevent sticking and enhance browning. Ensure plates are clean and free of residue.
- **Uneven Cooking:** Ensure the food item is placed centrally on the cooking plate and the top plate is fully lowered. For very thick items, slight adjustments to cooking time may be necessary.
- **Smoke or Odor During First Use:** It is normal for a new appliance to emit a slight smoke or odor during its initial use. This should dissipate after a few minutes. Ensure adequate ventilation.

SPECIFICATIONS

Brand	Big Boss
Model Number	9287
Color	Red
Material	Ceramic
Special Feature	Non-Stick Coating
Included Components	3 interchangeable non-stick cooking plates
Voltage	120 Volts
Number of Settings	4
Item Weight	4.85 Pounds
Product Dimensions	9.76 x 10.15 x 3.81 inches
Manufacturer	E.Mishan & Sons Inc.
UPC	080313092879

WARRANTY AND SUPPORT

This Big Boss 9287 Ceramic 7-Piece Multi-Functional Grill Set comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or contact the manufacturer directly.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact Big Boss customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.