

[Manuals.plus](#) /

› [Dickie Toys](#) /

› Dickie Toys 203308361 Action Series Explorer Boat User Manual

Dickie Toys 203308361

Dickie Toys Action Series Explorer Boat User Manual

Model: 203308361

1. PRODUCT OVERVIEW

The Dickie Toys Action Series Explorer Boat is an interactive toy set designed for outdoor play, featuring a main explorer boat and a detachable submarine. This set includes light and sound functions, a rope winch, and an anchor for engaging play scenarios.



Image 1.1: The Dickie Toys Explorer Boat and Submarine set as packaged.

2. SAFETY INFORMATION

Please read and understand all safety instructions before use. This product is intended for children aged 36 months and older. Adult supervision is recommended during play.

- Keep small parts away from younger children to prevent choking hazards.
- Do not submerge the boat or submarine in water deeper than recommended to avoid damage to electronic components.
- Ensure battery compartment is securely closed to prevent water ingress.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Explorer Boat (33 cm)
- 1 x Submarine
- 1 x Rope Winch (integrated)
- 1 x Anchor

4. SETUP

4.1. Unboxing

1. Carefully remove the Explorer Boat and Submarine from their packaging.
2. Remove any protective films or ties.

4.2. Battery Installation

The Explorer Boat requires 2 AA batteries for its light and sound functions.

1. Locate the battery compartment on the underside of the Explorer Boat.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover and tighten the screw.



Image 4.1: The Explorer Boat with its anchor feature.



Image 4.2: The detachable Submarine.

5. OPERATING INSTRUCTIONS

5.1. Initial Placement

1. Place the Explorer Boat in water. Ensure the water level is appropriate for the toy's size.

5.2. Activating Light and Sound Functions

1. Locate the activation button(s) on the boat. Press to activate the integrated light and sound features.

5.3. Manual Steering and Play

1. Manually steer the Explorer Boat and Submarine through the water.
2. Use the integrated rope winch to raise or lower the anchor or to simulate lifting the submarine.
3. The submarine can be detached and played with separately or reattached to the boat for combined adventures.



Image 5.1: The Explorer Boat with the Submarine attached via the winch.

6. MAINTENANCE

6.1. Cleaning

- After use, especially in water, wipe the boat and submarine with a clean, damp cloth.
- Ensure all parts are thoroughly dry before storage to prevent mold or damage.
- Do not use harsh chemicals or abrasive cleaners.

6.2. Storage

- Store the toy in a cool, dry place away from direct sunlight.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

7.1. Lights and Sounds Not Working

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure the battery compartment cover is securely closed.

7.2. Boat Not Floating Properly

- Ensure no water has entered the internal compartments. If so, drain and dry thoroughly.
- Verify that all components are correctly assembled and no parts are missing or damaged.

8. SPECIFICATIONS

Feature	Detail
Brand	Dickie Toys
Model Number	203308361
Material	Metal, Plastic
Size (Boat)	33 cm
Item Dimensions (LxWxH)	15.2 x 45.5 x 23.5 cm
Item Weight	1 Kilogram
Power Source	Battery
Battery Type	2 x AA batteries (required)
Operation Mode	Manual
Recommended Age	36 months and up
Educational Goals	Literacy and spatial awareness

9. WARRANTY INFORMATION

This product comes with a 2-year manufacturer's warranty from the date of purchase. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10. SUPPORT AND CONTACT INFORMATION

For further assistance, troubleshooting, or warranty claims, please contact Dickie Toys customer service. Refer to the product packaging or the official Dickie Toys website for the most current contact details in your region. You can also visit the [Dickie Toys Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question