

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Pocket Radar](#) /
- › [Pocket Radar Ball Coach User Manual](#)

Pocket Radar PR1000-BC

Pocket Radar Ball Coach User Manual


Model: PR1000-BC | Brand: Pocket Radar

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Pocket Radar Ball Coach. This device is a stand-alone radar gun specifically designed to accurately measure the fastest speed of a ball or puck in flight for various sports.

Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

PRODUCT OVERVIEW

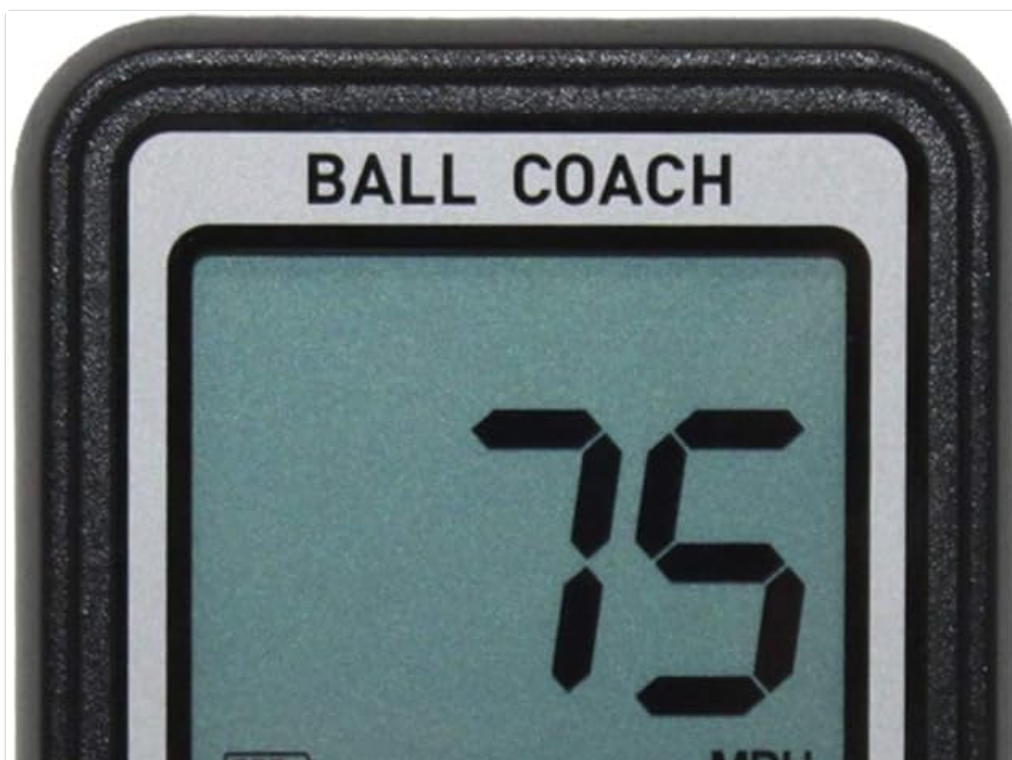



Front View: The device features a clear digital display showing speed readings in MPH, a battery indicator, and a blue measurement button. The "MODE/RECALL" button is located below the main display.



Back View: The rear of the device includes the model number (PR1000-BC), FCC ID, and brief operating instructions: "Hold button down well before ball is in flight, and release button when speed is displayed."



Compact Design: The Pocket Radar Ball Coach is designed to be easily held in one hand, making it portable and convenient for use in various sports settings.

SETUP

Included Components:

- Pocket Radar Ball Coach Device
- Wrist Strap
- Quick Start Guide (QSG)

Battery Installation:

The Pocket Radar Ball Coach uses standard AAA batteries (not specified if included, assume user needs to install). Locate the battery compartment on the back of the device. Insert the batteries according to the polarity indicators (+/-). Close the compartment securely.

Attaching the Wrist Strap:

Thread the included wrist strap through the designated loop on the device to prevent accidental drops during use.

OPERATING INSTRUCTIONS

Measuring Speed:

1. **Power On:** Press the main blue button to turn on the device. The display will illuminate.
2. **Positioning:** Hold the Pocket Radar Ball Coach facing the direction of the incoming ball or puck. Ensure

there are no obstructions between the device and the target.

3. Measurement:

- Press and **hold** the main blue button *before* the ball or puck is in flight.
- Continue holding the button as the ball/puck passes the measurement area.
- **Release** the button once the ball/puck has passed and the speed is displayed on the screen. The device will capture the fastest speed detected during the measurement period.

4. Reading Display: The measured speed will be shown on the digital display in miles per hour (MPH).





In Use: The device is designed for easy, hands-free operation, allowing users to accurately measure speeds during practice or games.

Recalling Previous Speeds:

Press the "MODE/RECALL" button to cycle through previously recorded speeds. The device stores a limited number of recent measurements.

Power Off:

The device may have an automatic power-off feature to conserve battery. Alternatively, press and hold the main blue button or the "MODE/RECALL" button (refer to QSG for specific power-off instructions if not automatic).

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage.
- **Water Resistance:** The device is not waterproof. Avoid exposure to rain or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Dead or incorrectly installed batteries.	Replace batteries with fresh ones, ensuring correct polarity.
Inaccurate or inconsistent readings.	Incorrect operating technique; obstructions in measurement path; environmental interference.	Ensure button is held down before and released after the ball passes. Clear line of sight. Avoid strong electromagnetic fields.
Display is dim or flickering.	Low battery.	Replace batteries.

SPECIFICATIONS

- **Model Name:** PR1000-BC
- **Brand:** Pocket Radar
- **Color:** Black
- **Item Weight:** 0.25 Pounds
- **Item Dimensions (LxWxH):** 4.6 x 0.8 x 2.3 inches
- **Item Diameter:** 2.3 Inches
- **Construction Type:** Plastic
- **Sport Compatibility:** Baseball, Softball, Tennis, Volleyball, Lacrosse, Hockey, Cricket
- **UPC:** 851766002063
- **Manufacturer:** Pocket Radar, Inc.
- **First Available Date:** March 4, 2014

WARRANTY AND SUPPORT

Warranty Information:

The Pocket Radar Ball Coach includes a 2-year manufacturer's warranty. For detailed warranty terms and conditions, please refer to the manufacturer's official website or the Quick Start Guide.

Warranty Description from product data: "Please see manufacturer website"

Customer Support:

For further assistance, technical support, or warranty claims, please contact Pocket Radar, Inc. directly. You can find contact information on their official website or through the [Pocket Radar Store on Amazon](#).

© 2024 Pocket Radar, Inc. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.