

Bose 625946-0010

Bose Freestyle Earbuds (Model 625946-0010) User Manual

Brand: Bose | Model: 625946-0010

[Introduction](#) [What's in the Box](#) [Setup](#) [Operation](#) [Features](#) [Care & Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the Bose Freestyle Earbuds (Model 625946-0010). These wired earbuds are designed to deliver deep, clear sound with a comfortable and secure fit, suitable for an active lifestyle. Please read this manual thoroughly before using your earbuds to ensure proper operation and to maximize your listening experience.

2. WHAT'S IN THE BOX

Verify that all items are present:

- Bose Freestyle Earbuds (Wired)
- Multiple sizes of StayHear tips (Small, Medium, Large)
- Carrying case
- Clothing clip
- Documentation (User Guide, Warranty Information)



Figure 2.1: Contents of the Bose Freestyle Earbuds package, including the earbuds, various StayHear tips, and the carrying case.

3. SETUP

3.1 Selecting the Right StayHear Tips

The Bose Freestyle Earbuds come with three sizes of StayHear tips (Small, Medium, Large) to ensure a comfortable and secure fit. Experiment with each size to find the one that feels most comfortable and provides the best sound quality. The correct size will create a gentle seal in your ear canal without causing discomfort.

1. Gently pull off the pre-installed ear tip from the earbud.
2. Select a different size tip and align it with the earbud nozzle.
3. Push the tip firmly onto the earbud until it clicks into place.
4. Repeat for the other earbud.

3.2 Connecting to Your Device

The Freestyle Earbuds connect via a standard 3.5 mm audio jack.

- Insert the 3.5 mm audio jack into the headphone port of your smartphone, tablet, laptop, or other compatible audio device.
- Ensure the connection is secure for optimal audio performance.



Figure 3.1: A user wearing the Bose Freestyle Earbuds, demonstrating the in-ear fit and connection to a mobile device.

4. OPERATING INSTRUCTIONS

4.1 In-line Remote and Microphone

The earbuds feature an in-line remote with an integrated microphone, allowing for easy control of music and calls.

Table 4.1: In-line Remote Functions

Button/Action	Function
Center Button (Single Press)	Play/Pause music, Answer/End call
Center Button (Double Press)	Skip to next track (for compatible devices)
Center Button (Triple Press)	Skip to previous track (for compatible devices)
Volume Up (+)	Increase volume
Volume Down (-)	Decrease volume

Button/Action	Function
Microphone	For hands-free calling

Note: Compatibility of all remote functions may vary depending on your device's operating system and model. The remote is optimized for iOS devices.

5. KEY FEATURES

- **Deep, Clear Sound:** Engineered with TriPort technology for full-range audio performance.
- **Comfortable and Secure Fit:** Exclusive StayHear tips conform to your ear's shape, providing comfort and stability during various activities.
- **Durable Design:** Built to withstand an active lifestyle, featuring sweat and weather resistance.
- **In-line Microphone/Remote:** Easily switch between music and calls, control volume, and manage tracks.
- **Lightweight Construction:** Designed for extended wear without discomfort.

Your browser does not support the video tag.

Video 5.1: An official product video showcasing the design, comfort, and durability of the Bose Freestyle Earbuds in various active scenarios.

6. CARE AND MAINTENANCE

- **Cleaning Ear Tips:** Remove the StayHear tips from the earbuds. Wash them with mild soap and water, rinse thoroughly, and allow them to air dry completely before reattaching.
- **Cleaning Earbuds:** Use a soft, dry cloth to wipe the earbuds. Do not allow moisture to enter the earbud openings.
- **Storage:** When not in use, store your earbuds in the provided carrying case to protect them from dust, dirt, and damage.
- **Sweat and Weather Resistance:** The earbuds are designed to be sweat and weather resistant. However, they are not waterproof. Avoid submerging them in water.

7. TROUBLESHOOTING

Table 7.1: Common Issues and Solutions

Problem	Solution
No sound or low volume	<ul style="list-style-type: none"> ◦ Ensure the 3.5 mm jack is fully inserted into your device. ◦ Check the volume level on your device and using the in-line remote. ◦ Test with another audio source or device to rule out device issues. ◦ Ensure ear tips are clean and properly attached.

Problem	Solution
Poor sound quality (muffled, distorted)	<ul style="list-style-type: none"> ◦ Ensure ear tips are the correct size and create a proper seal in your ear. ◦ Clean the ear tips and earbud nozzles to remove any debris. ◦ Test with another audio source or device.
Microphone not working	<ul style="list-style-type: none"> ◦ Ensure the 3.5 mm jack is fully inserted. ◦ Check your device's settings to ensure the external microphone is selected. ◦ Test with another device.
Earbuds fall out easily	<ul style="list-style-type: none"> ◦ Try a different size of StayHear tips. The correct size should feel secure without being tight. ◦ Ensure the ear tips are correctly oriented and seated in your ear.

8. SPECIFICATIONS

Table 8.1: Technical Specifications

Feature	Detail
Brand	Bose
Model Number	625946-0010
Model Name	FreeStyle
Color	Blue (Ice Blue)
Connectivity Technology	Wired (3.5 mm Jack)
Ear Placement	In Ear
Form Factor	In Ear
Impedance	4 Ohms
Item Weight	17.96 g
Noise Control	Active Noise Cancellation
Audio Driver Type	Dynamic Driver
Compatible Devices	Phone, tablet, laptop
Control Type	Media Control
GTIN / UPC	017817626330

9. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service, please refer to the documentation included in your product package or visit the official Bose website. Keep your proof of purchase for warranty claims.

Online Support: www.bose.com/support