

## HUDORA 10322

# HUDORA Überländer 10322 Wagon Instruction Manual

Model: 10322

## INTRODUCTION

Thank you for choosing the HUDORA Überländer 10322 Wagon. This manual provides essential information for the safe and efficient use, assembly, and maintenance of your wagon. Please read it thoroughly before use and retain it for future reference.

## SAFETY INSTRUCTIONS

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 100 kg. Overloading can cause damage to the wagon and pose a safety risk.
- **Children Supervision:** When transporting children, ensure they are always supervised by an adult. Do not allow children to stand or play unsupervised in the wagon.
- **Even Weight Distribution:** Distribute weight evenly within the wagon to maintain stability.
- **Terrain:** While designed for various terrains, exercise caution on uneven, steep, or slippery surfaces.
- **Folding Mechanism:** Keep hands and fingers clear of moving parts when folding or unfolding the wagon to prevent pinching.
- **Regular Checks:** Before each use, inspect the wagon for any signs of wear, damage, or loose parts. Do not use if damaged.
- **Not for Road Use:** This wagon is not intended for use on public roads or in traffic.

## SETUP AND UNFOLDING

The HUDORA Überländer 10322 Wagon features an innovative folding technique for easy setup and storage. No complex assembly is required.

1. **Unpacking:** Carefully remove the wagon from its packaging and carry bag.
2. **Unfolding the Frame:** Locate the locking mechanism or release levers on the folded frame. Release them and gently pull the sides of the wagon apart until the frame fully extends and locks into place. Ensure all locking points are securely engaged.
3. **Attaching the Handle:** If the handle is detached, insert it into the designated slot until it clicks securely.
4. **Checking Wheels:** Ensure all four wheels are properly attached and rotate freely.



Image: The HUDORA Überländer 10322 Wagon fully unfolded and ready for use. This image shows the wagon's robust frame and spacious interior.

## OPERATING INSTRUCTIONS

### Loading the Wagon

- Place items or children carefully into the wagon.
- Ensure the load does not exceed 100 kg.
- Distribute weight evenly to prevent tipping.
- Secure loose items to prevent them from falling out during movement.



Image: Two children enjoying a ride in the HUDORA Überländer 10322 Wagon, demonstrating its capacity for passenger transport.

## **Pulling and Maneuvering**

- Hold the handle firmly with both hands for better control.
- Pull the wagon at a steady pace. Avoid sudden starts or stops.
- The ball-bearing wheels provide smooth and agile movement, even with heavy loads.
- When turning, steer gradually to maintain stability.



Image: The HUDORA Überländer 10322 Wagon being pulled by an adult, demonstrating its use for transporting goods during an outdoor activity.

## Folding for Storage

1. Empty the wagon completely.
2. Release the locking mechanisms that hold the frame extended.
3. Gently push the sides of the wagon together until it folds compactly.
4. Secure the folded wagon with any integrated straps or clips.
5. Place the folded wagon into its practical carry bag for transport or storage.





Image: The HUDORA Überländer 10322 Wagon folded and stored in its carry bag, highlighting its portability and compact design.

## MAINTENANCE

- **Cleaning:** Wipe down the fabric and frame with a damp cloth and mild soap as needed. Allow to air dry completely. The upholstery covers can be removed and washed.
- **Wheel Inspection:** Periodically check the wheels and axles for debris, wear, or damage. The tires are maintenance-

free and puncture-proof.

- **Lubrication:** The ball bearings are designed for smooth operation. No regular lubrication is typically required.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.

## TROUBLESHOOTING

- **Wagon not folding/unfolding smoothly:** Check for any obstructions or debris in the folding mechanism. Ensure all locking levers are fully disengaged/engaged. Do not force the mechanism.
- **Wagon feels unstable:** Ensure the load is evenly distributed and does not exceed the maximum weight capacity. Verify that the frame is fully extended and all locking points are secure.
- **Wheels not turning freely:** Inspect wheels for tangled debris (e.g., grass, string) or damage. Clean as necessary.

## SPECIFICATIONS

<b>Model Number:</b>	10322
<b>Brand:</b>	HUDORA
<b>Material:</b>	Alloy Steel (Frame, Handle)
<b>Color:</b>	Blue
<b>Product Dimensions (Folded):</b>	42.01 x 33.5 x 22.5 cm
<b>Item Weight:</b>	17.62 kg
<b>Maximum Weight Capacity:</b>	100 kg
<b>Number of Wheels:</b>	4
<b>Tire Type:</b>	Tubeless, Puncture-proof
<b>Special Features:</b>	Innovative folding technique, maintenance-free tires
<b>Assembly Required:</b>	No

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official HUDORA website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

*Note: Specific warranty terms may vary by region and retailer.*

