

PDP PL3702

PDP PL3702 Afterglow Controller

USER MANUAL

1. Introduction

Thank you for choosing the PDP PL3702 Afterglow Controller for Xbox 360. This controller is designed to enhance your gaming experience with its ergonomic design, responsive controls, and signature Afterglow lighting. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new controller.

Please read this manual thoroughly before using the product to ensure proper operation and to maximize your enjoyment.

2. Package Contents

Verify that all items are present in your package:

- PDP PL3702 Afterglow Controller for Xbox 360
- USB Cable (attached to controller)
- Quick Start Guide (if included separately)

3. Controller Features

The PDP PL3702 Afterglow Controller features a transparent casing with internal LED lighting, providing a unique visual experience. It includes standard Xbox 360 button layouts, dual rumble motors for immersive feedback, and a 9-foot USB cable for extended reach.



Figure 1: Front view of the PDP PL3702 Afterglow Controller. This image displays the transparent casing, illuminated internal circuitry, and the standard button layout including the D-pad, ABXY buttons, analog sticks, and the Xbox Guide button.

4. Setup

4.1. Connecting to Xbox 360

1. Ensure your Xbox 360 console is powered on.
2. Locate an available USB port on your Xbox 360 console.
3. Plug the USB connector of the PDP PL3702 Afterglow Controller into the USB port.
4. The controller's Afterglow lighting will illuminate, and the Xbox Guide button will light up, indicating a successful connection. The quadrant light around the Guide button will show which player number the controller is assigned to.

4.2. Connecting to PC (Windows)

The PDP PL3702 Afterglow Controller is compatible with Windows PCs, typically recognized as an Xbox 360 controller.

1. Ensure your PC is powered on.
2. Locate an available USB port on your PC.
3. Plug the USB connector of the PDP PL3702 Afterglow Controller into the USB port.
4. Windows will automatically detect and install the necessary drivers. This process may take a few moments.
5. Once drivers are installed, the controller's Afterglow lighting will activate, and it will be ready for use with compatible PC games.



Figure 2: Illustrates the USB connection process. The image shows the controller's USB plug being inserted into a standard USB port, highlighting the simple plug-and-play setup for both Xbox 360 and PC.

5. Operation

5.1. Basic Controls

The PDP PL3702 Afterglow Controller functions identically to a standard Xbox 360 wired controller. All buttons, analog sticks, and triggers will respond as expected in your games.

- **Left and Right Analog Sticks:** For movement and camera control.
- **D-Pad:** For directional input, often used in menus or for specific game actions.
- **A, B, X, Y Buttons:** Primary action buttons.
- **Left and Right Bumpers (LB, RB):** Shoulder buttons.
- **Left and Right Triggers (LT, RT):** Analog triggers for precise input.
- **Start and Back Buttons:** For in-game menus and functions.
- **Xbox Guide Button:** Accesses the Xbox Guide on console or specific functions on PC.

5.2. Afterglow Lighting

The Afterglow lighting feature is automatically activated when the controller is connected and powered. The internal LEDs will illuminate, providing a distinctive glow. There are no user-adjustable settings for the Afterglow lighting on this specific model; it is designed to be continuously active during use.

6. Maintenance

Proper care will extend the life of your controller.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the controller. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.

- **Storage:** Store the controller in a clean, dry place away from extreme temperatures and direct sunlight when not in use. Avoid wrapping the cable too tightly around the controller to prevent damage.
- **Cable Care:** Do not pull on the cable to disconnect the controller. Always grasp the USB plug firmly.

7. Troubleshooting

If you encounter issues with your PDP PL3702 Afterglow Controller, please refer to the following common solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely plugged into both the controller and the console/PC.
 - Try plugging the controller into a different USB port.
 - Restart your Xbox 360 console or PC.
 - If on PC, check Device Manager to ensure drivers are installed correctly.
- **Afterglow Lighting Not Working:**
 - Verify the controller is properly connected and powered on.
 - If the controller functions otherwise, but the lighting does not, there may be an internal issue. Contact customer support.
- **Buttons/Sticks Not Responding Correctly:**
 - Ensure the controller is clean and free of debris around the buttons and sticks.
 - Test the controller with another game or on a different console/PC to isolate the issue.

8. Specifications

- **Model Number:** PL3702
- **Brand:** PDP
- **Compatible Devices:** Windows PC
- **Compatible Video Game Console Models:** Microsoft Xbox 360, Microsoft Xbox 360 E
- **Connectivity:** Wired USB
- **Cable Length:** Approximately 9 feet (2.7 meters)
- **Features:** Afterglow LED lighting, Dual Rumble Motors
- **ASIN:** B00ITWQTU6

9. Warranty and Support

For warranty information or technical support, please refer to the official PDP website or contact their customer service directly. Details regarding warranty periods and support contact methods are typically provided with your product packaging or on the manufacturer's website.

When contacting support, please have your product model number (PL3702) and proof of purchase readily available.