



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Patio Swing Chair Instruction Manual

Outsunny CA01-03010231

Outsunny Patio Swing Chair Instruction Manual

Model: CA01-03010231

Brand: Outsunny

INTRODUCTION

Thank you for purchasing the Outsunny Patio Swing Chair. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new outdoor swing. Please read this manual thoroughly before assembly and retain it for future reference.



Image: The Outsunny Patio Swing Chair with its wooden frame and white canopy.

SAFETY INFORMATION

- Ensure all bolts and nuts are securely tightened before each use.
- Do not exceed the maximum weight capacity of 792 lbs (360 kg). This swing is designed for up to three individuals.
- Place the swing on a flat, stable surface to prevent tipping.
- Keep children and pets away from the swing during assembly.
- Avoid using the swing in strong winds or severe weather conditions. The canopy should be removed or secured during such conditions.
- Regularly inspect the wooden frame and metal chains for any signs of wear, damage, or corrosion.
- Do not stand on the swing or use it for purposes other than intended seating.

PARTS LIST

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
------	-------------	----------

Part	Description	Quantity
A	Main Frame (Larch Wood Beams)	Various
B	Swing Bench Seat	1
C	Canopy Fabric	1
D	Canopy Frame Rods	Various
E	Metal Chains (for swing)	2 pairs
F	Hardware (Bolts, Nuts, Washers, Wrenches)	1 set

A-SHAPED FRAME

Makes it more stable



Selected
Solid Wood



Sturdy
Metal Chains



Slatted Design



Reinforced
Bar



Image: Close-up view of the A-shaped frame, highlighting selected solid wood, sturdy metal chains, slatted design, and reinforced bar components.

ASSEMBLY (SETUP) INSTRUCTIONS

Assembly typically requires two adults. Please follow these steps carefully. Refer to the included assembly diagram for visual guidance.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify all parts using the provided parts list.
2. **Assemble the A-Frame:** Connect the main larch wood beams to form the A-shaped support frames on both sides. Secure them using the provided bolts, nuts, and washers. Do not fully tighten bolts until all frame pieces are in place.
3. **Connect the Crossbars:** Attach the horizontal crossbars between the two A-frames to create the main structure of the swing. Ensure the frame is stable and square before tightening all frame bolts.
4. **Install the Swing Bench:** Attach the metal chains to the pre-drilled holes on the swing bench seat. Ensure the chains are securely fastened to the bench.
5. **Hang the Swing Bench:** Carefully lift the swing bench and attach the metal chains to the hanging points on the top crossbar of the main frame. Use the provided carabiners or hooks to secure the chains.



Image: A close-up view of the sturdy metal chain connecting the swing bench to the main wooden frame.

6. **Assemble the Canopy Frame:** Connect the canopy frame rods according to the diagram. Slide the canopy fabric onto the assembled frame.
7. **Attach the Canopy:** Secure the assembled canopy to the top of the main frame. Ensure it is taut and evenly distributed to provide optimal shade.



Image: Detail of the canopy attachment point, showing the fabric secured to the wooden frame.

8. **Final Tightening:** Once all components are in place and aligned, fully tighten all bolts and nuts using the provided tools. Do not overtighten.
9. **Safety Check:** Before first use, gently test the swing to ensure all connections are secure and the structure is stable.

OPERATING INSTRUCTIONS

The Outsunny Patio Swing Chair is designed for comfortable outdoor relaxation. To operate:

- Gently sit on the swing bench, ensuring your weight is evenly distributed.
- Use your feet to push off the ground to initiate a gentle swinging motion.
- Avoid excessive or violent swinging, as this can strain the frame and chains.
- The canopy provides shade from the sun. While it offers UV protection, prolonged exposure to direct sunlight is not recommended.

3 SEATER SWING BENCH

Three-seater design provides room to relax with friends



Weight Capacity



Seats Up to 3

Image: The Outsunny Patio Swing Chair, designed as a three-seater bench, capable of supporting up to 300 kg (792 lbs).

MAINTENANCE

Proper maintenance will extend the life of your Outsunny Patio Swing Chair.

• Cleaning:

- Wipe the wooden frame with a damp cloth and mild soap. Rinse thoroughly and dry immediately to prevent water damage.
- The polyester canopy can be spot cleaned with mild soap and water. Allow it to air dry completely.
- Clean metal chains with a damp cloth. Consider applying a rust-inhibiting spray periodically.

• Seasonal Care:

- During prolonged periods of non-use or harsh weather (e.g., winter), it is recommended to store the swing indoors or cover it with a weather-resistant cover.
- If storing outdoors, remove the canopy to prevent snow or water accumulation.

• Inspection:

- Periodically check all bolts and nuts for tightness and re-tighten as necessary.
- Inspect the wooden frame for cracks, splinters, or signs of rot. Sand and re-seal if needed.
- Examine the metal chains for rust, bending, or weak links. Replace if any damage is found.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Swing feels unstable or wobbly:**
 - Ensure the swing is placed on a completely flat and level surface.
 - Check and tighten all assembly bolts and nuts.
- **Squeaking noise during swinging:**
 - Apply a silicone-based lubricant to the chain connections and any moving metal parts.
 - Ensure chains are not rubbing against the wooden frame.
- **Canopy collects water:**
 - Ensure the canopy fabric is stretched taut and properly secured to its frame.
 - Periodically clear any accumulated water or debris from the canopy surface.
- **Wood appears faded or weathered:**
 - This is normal for outdoor wood. To restore appearance and protect the wood, apply a suitable outdoor wood stain or sealant.

SPECIFICATIONS

Feature	Detail
Model Number	CA01-03010231
Overall Dimensions	78.75" L x 51.25" W x 72.75" H (200 cm L x 130 cm W x 185 cm H)
Canopy Size	80.7" L x 47.2" W (205 cm L x 120 cm W)
Seat Size	61" L x 19.7" W (155 cm L x 50 cm W)
Material	Larch Wood, Polyester Cloth
Color	Natural Wood Frame, Cream White Canopy
Net Weight	140.8 lbs (55.8 kg)
Weight Capacity	792 lbs (360 kg)
Seating Capacity	3 Person

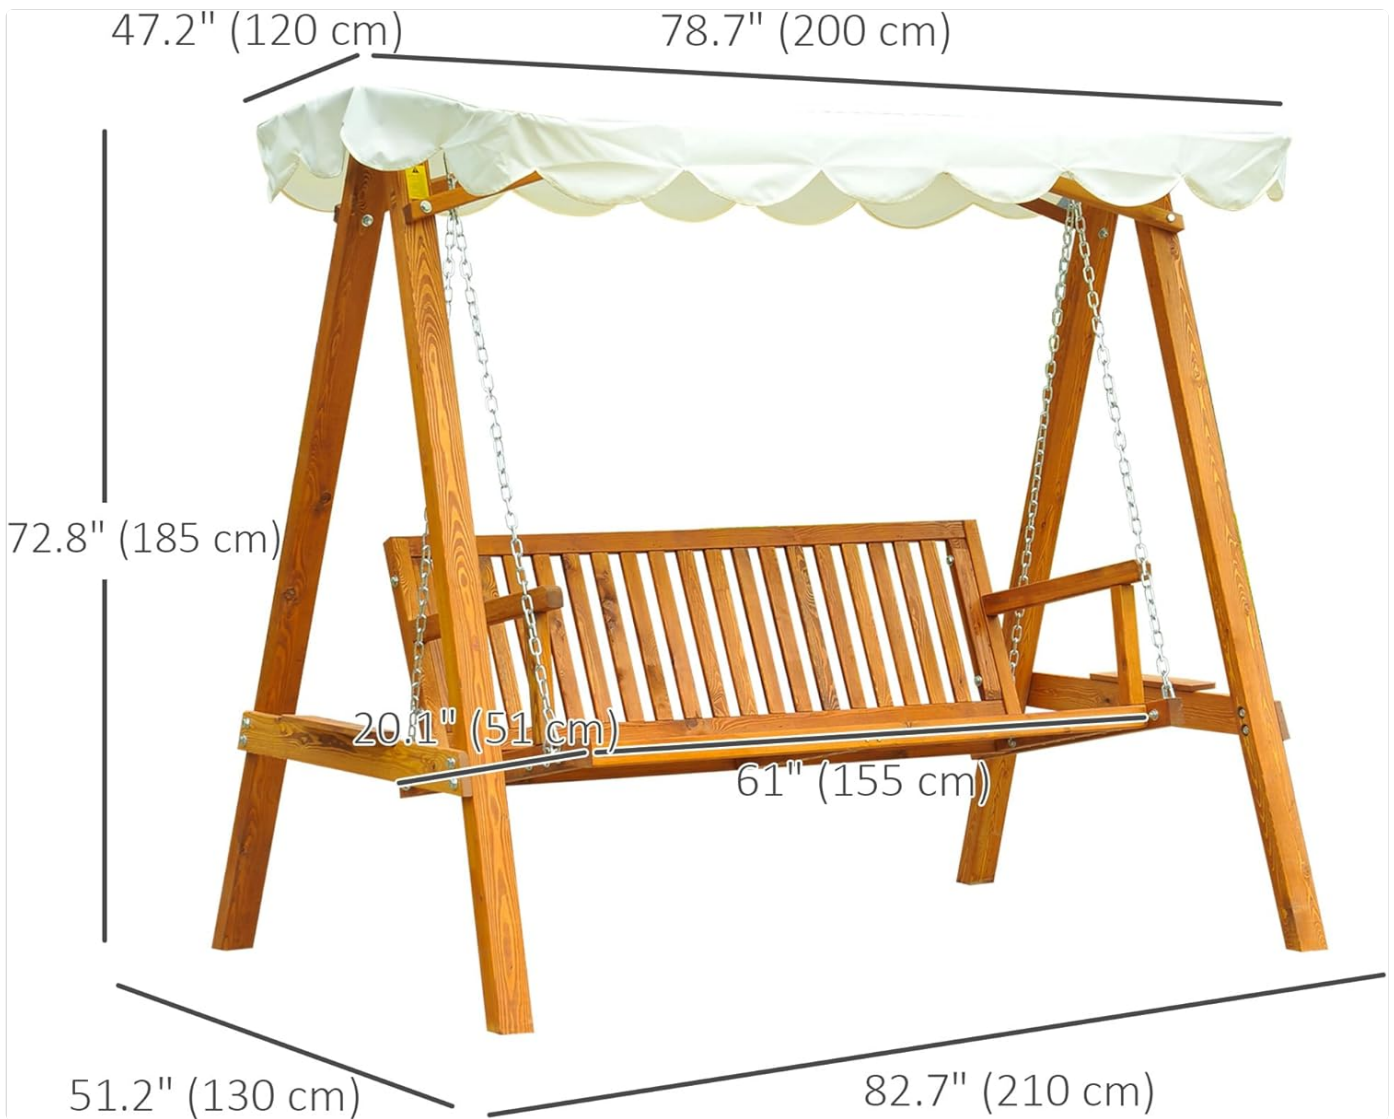


Image: A diagram illustrating the key dimensions of the Outsunny Patio Swing Chair, including overall length, width, height, and seat dimensions.

WARRANTY AND SUPPORT

This product is sold by Aosom Canada. For information regarding warranty, returns, or customer support, please refer to the seller's policy on the platform where the product was purchased. Typically, a return policy of 30 days is offered for refunds or replacements.

For direct inquiries, you may contact Aosom Canada at their listed business location: Markham, Ontario, CA. Tel: 1-416-792-6088. You can also visit the official Outsunny brand store for more information and products: [Outsunny Brand Store](#)

© 2024 Outsunny. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.