



[Manuals.plus](#) /

› [Garmin](#) /

› [Garmin Edge 1000 Color Touchscreen GPS User Manual](#)

## Garmin 010-01161-00

# Garmin Edge 1000 Color Touchscreen GPS User Manual

Model: 010-01161-00

## INTRODUCTION

The Garmin Edge 1000 is a color touchscreen GPS bike computer designed to enhance your cycling experience with advanced navigation and performance tracking features. This manual provides comprehensive instructions for setting up, operating, and maintaining your device.

### Key Features:

- **Large 3.0" Display:** A glove-friendly, touchscreen display that automatically adjusts for varying light conditions.
- **Segments:** Compete on Garmin Connect Segments with real-time results and leaderboard rankings.
- **Smart Notifications:** Receive text, email, and call notifications from your iPhone 4s or later directly on the device.
- **Bike-Specific Navigation:** Utilize preloaded maps and points of interest (POIs) for optimal cycling routes. Features include Round-trip Routing and on-device Route Planner.

## SETUP

### What's in the Box:

- Garmin Edge 1000 Device
- Preloaded Maps
- Extended Out-Front Mount
- Standard Mount
- Tether
- USB Cable
- Manuals

## Mounting the Device:

The Edge 1000 comes with two mounting options: an extended out-front mount and a standard mount. Choose the mount that best suits your bicycle and riding preference.

1. Select the desired mount (extended out-front or standard).
2. Securely attach the mount to your bicycle's handlebars or stem using the provided rubber bands or screws, ensuring a firm fit.
3. Align the tabs on the back of the Edge 1000 device with the slots on the mount.
4. Press down lightly and twist the device clockwise until it locks securely into place.
5. Attach the tether to the device and your bicycle for added security.





*Image: Side view of the Garmin Edge 1000, illustrating the device's profile and the mounting interface.*

### **Initial Power-On and Configuration:**

1. Press and hold the power button (located on the side) until the screen illuminates.
2. Follow the on-screen prompts to select your language, set up user profiles, and configure basic settings.
3. Connect the device to your computer via the provided USB cable to ensure it has the latest software updates and map data.

## **OPERATING THE GARMIN EDGE 1000**

### **Display and Interface:**

The Edge 1000 features a large 3.0-inch color touchscreen. The interface is designed for easy navigation, even while wearing gloves. The display automatically adjusts brightness for optimal visibility in various lighting conditions, including tunnels and shaded areas.



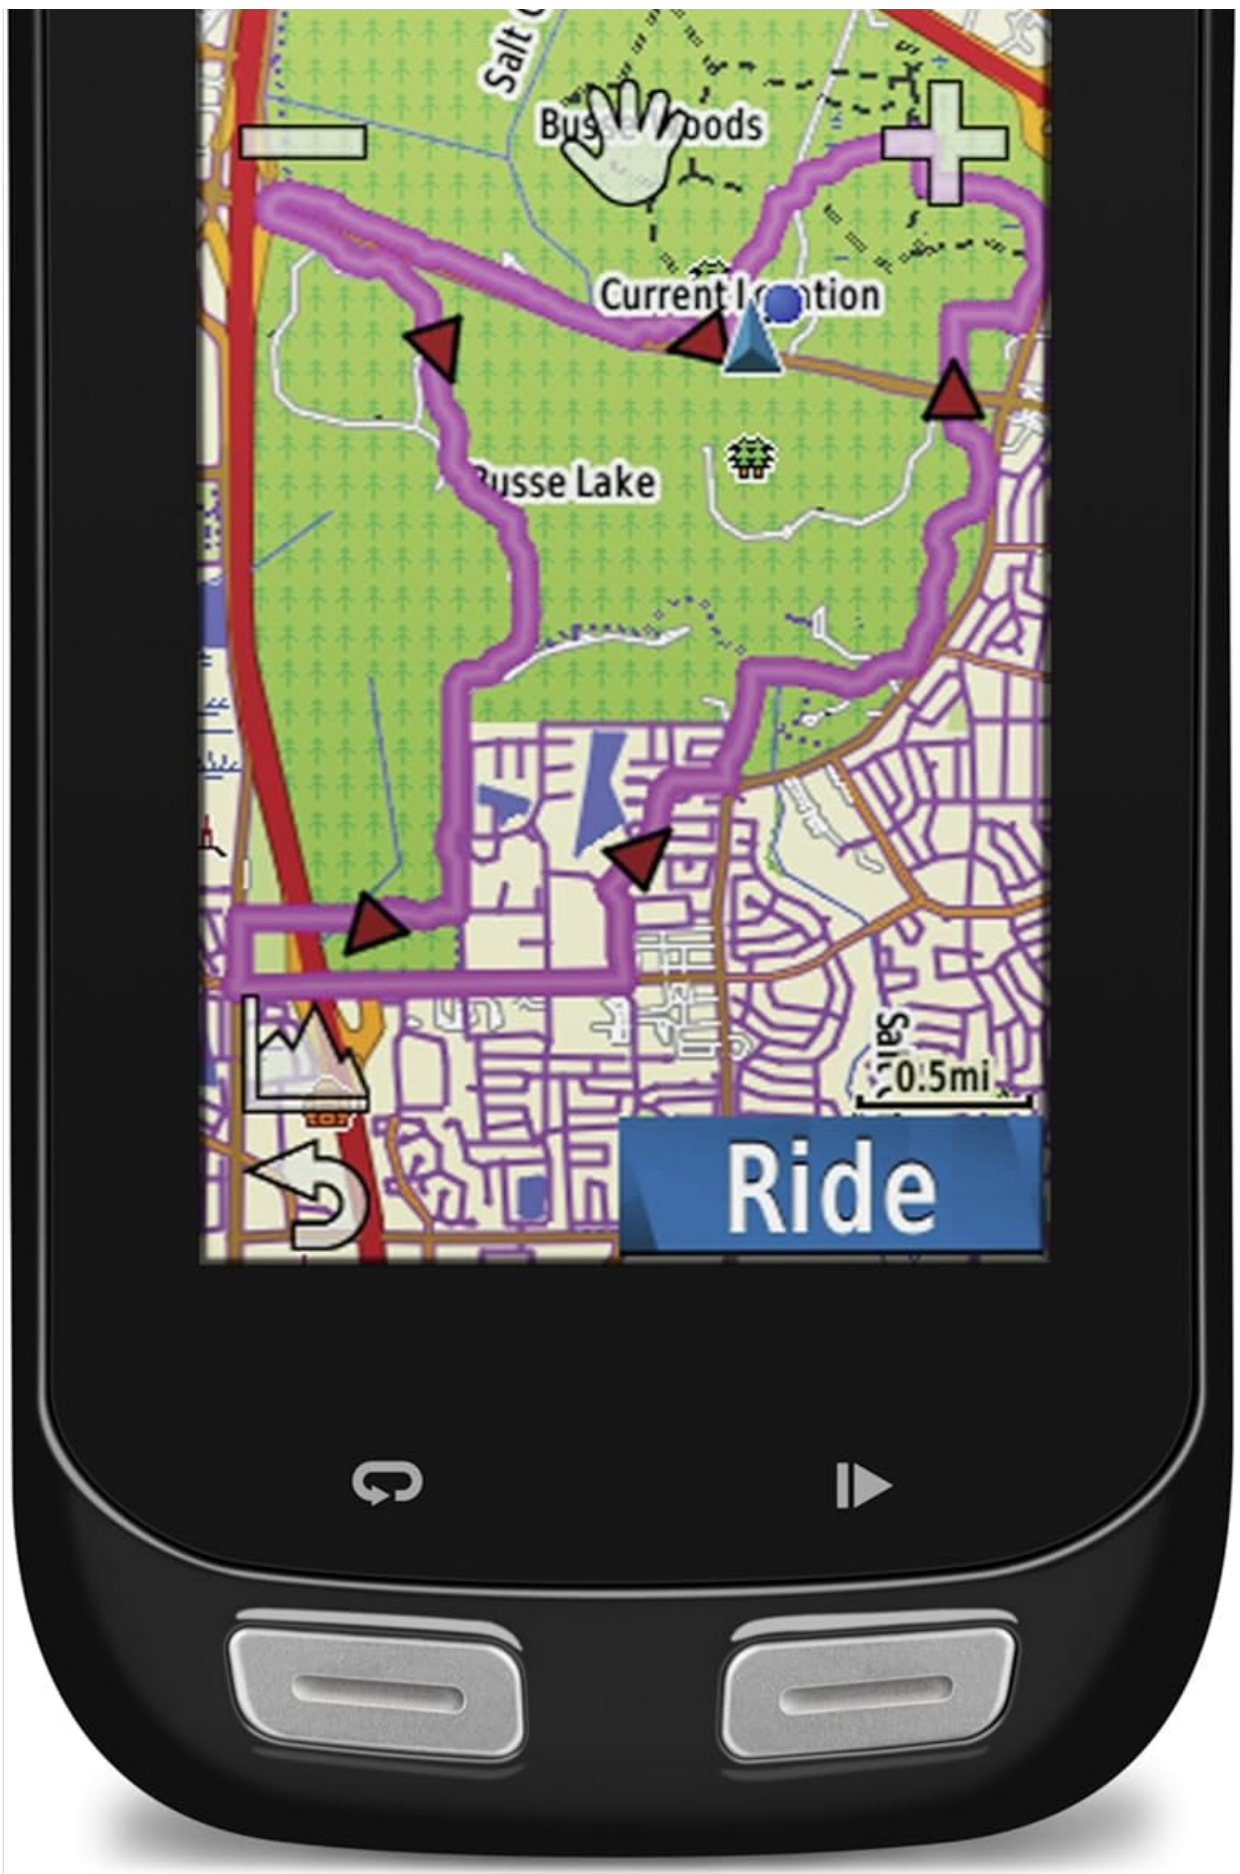


Image: Front view of the Garmin Edge 1000 displaying a detailed map route with current location and distance information.

### Navigation:

Utilize the preloaded maps for bike-specific navigation. The device supports various navigation functions:

- **Route Planning:** Create routes directly on the device using the map or points of interest (POIs).
- **Round-Trip Routing:** Enter a desired distance, and the device will suggest up to three round-trip routes.
- **Turn-by-Turn Directions:** Receive clear prompts for upcoming turns and street names.
- **Off-Course Recalculation:** If you deviate from your planned route, the device will automatically recalculate to guide you back.





*Image: Garmin Edge 1000 showing a navigation screen with a route, current position, and a "Personal Best" overlay indicating distance to go and time ahead.*

### **Performance Tracking and Training:**

The Edge 1000 offers extensive data tracking capabilities to monitor your performance:

- **Customizable Data Fields:** Display various metrics such as speed, distance, time, heart rate, cadence, and power (with compatible sensors).
- **Garmin Connect Segments:** Compete against other riders on pre-defined segments and view your real-time performance against the leaderboard.
- **Activity Profiles:** Create and customize profiles for different ride types (e.g., road, mountain, indoor) with specific data screens and settings.





*Image: Garmin Edge 1000 displaying current speed, heart rate, and a map view of the surrounding streets.*

### **Smart Notifications:**

Pair your Edge 1000 with a compatible iPhone (4s or later) to receive smart notifications directly on your device. This allows you to see incoming calls, text messages, and email alerts without needing to check your phone.

## **MAINTENANCE**

### **Cleaning the Device:**

- Wipe the device with a soft, damp cloth.
- Avoid using abrasive cleaners or solvents that could damage the screen or casing.
- Ensure the USB port cover is securely closed to maintain water resistance.

## Battery Care:

- The Edge 1000 uses a rechargeable Lithium Ion battery.
- Charge the device fully before its first use and regularly thereafter.
- Avoid exposing the device to extreme temperatures, as this can affect battery life.
- For optimal battery longevity, store the device with a partial charge if it will not be used for an extended period.

## TROUBLESHOOTING

### GPS Signal Issues:

- Ensure you are in an open area with a clear view of the sky when acquiring a GPS signal.
- Allow several minutes for the device to locate satellites, especially after being off for an extended period or moved a significant distance.
- If signal acquisition is consistently slow, try syncing the device with Garmin Connect to update satellite prediction data.

### Device Not Responding:

- Perform a soft reset by holding down the power button for 10-15 seconds until the device turns off. Then, power it back on.
- Ensure the battery is charged. Connect the device to a power source using the USB cable.

### Connectivity Problems (Bluetooth/ANT+):

- Ensure Bluetooth is enabled on your smartphone and the Edge 1000.
- Verify that sensors (heart rate, cadence, power) are properly paired and within range of the device.
- Try unpairing and re-pairing devices if connection issues persist.

## SPECIFICATIONS

Attribute	Value
Product Dimensions	4.4 x 2.3 x 0.8 inches
Item Weight	4 ounces
Item Model Number	010-01161-00
Batteries	1 Lithium Ion batteries required (included)
Connectivity Technologies	USB, Wireless
Special Features	Lightweight, Water resistant
Human Interface Input	Touchscreen
Screen Resolution	240 x 400 pixels

Screen Size	3 Inches
Map Type	North America
Battery Life	Up to 15 Hours
Mounting Type	Handlebar Mount

## WARRANTY AND SUPPORT

For warranty information, product registration, and technical support, please visit the official Garmin website or contact Garmin customer service. Refer to the included manuals for detailed warranty terms and conditions specific to your region.

No seller-created product videos were available for this specific model in the provided data.