

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Senz](#) /

› [Senz Original Umbrella User Manual - Pure Black, Model 2011046](#)

Senz 2011046

Senz Original Umbrella User Manual

Model: 2011046 | Brand: Senz

1. INTRODUCTION

This manual provides essential instructions for the proper use, care, and maintenance of your Senz Original Pure Black umbrella. Designed for optimal performance in various weather conditions, this umbrella features an aerodynamic design and robust construction.



Image 1.1: The Senz Original umbrella in its open, aerodynamic configuration.

2. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- Senz Original Pure Black Umbrella
- Protective Cover



Image 2.1: The Senz Original umbrella neatly stored within its protective cover.

3. SETUP AND INITIAL USE

3.1 Opening the Umbrella

1. Remove the umbrella from its protective cover.
2. Hold the handle firmly.
3. Press the release button located on the handle to extend the canopy. Ensure the canopy fully locks into the open position.



Image 3.1: Detail of the umbrella handle with the opening mechanism.

4. OPERATING INSTRUCTIONS

4.1 Wind Resistance

The Senz Original umbrella is engineered with an aerodynamic design that allows it to naturally find the optimal position in the wind, preventing it from inverting. It is windproof up to 100 km/h (approximately 62 mph).

- Allow the umbrella to orient itself with the wind. Do not fight against the wind direction.
- Maintain a firm grip on the handle during strong gusts.



Image 4.1: Top view of the open umbrella, illustrating its wind-optimized shape.

4.2 UV Protection

The canopy material provides UV protection with a UPF 50+ rating, offering excellent defense against harmful sun rays.

4.3 Closing the Umbrella

1. Press the release button on the handle.
2. Gently pull the canopy down until it fully collapses.
3. Secure the canopy with the integrated strap.

5. CARE AND MAINTENANCE

5.1 Cleaning

- To clean the canopy, wipe with a damp cloth and mild soap if necessary.
- Do not use harsh chemicals or abrasive cleaners.

5.2 Drying and Storage

- Always allow the umbrella to dry completely in an open position before closing and storing. This prevents mildew and preserves the fabric.
- Once dry, close the umbrella and place it back into its protective cover for storage.
- Store in a cool, dry place away from direct sunlight.



Image 5.1: Detail of the umbrella canopy fabric and frame connection point.

6. TROUBLESHOOTING

6.1 Umbrella Does Not Stay Open

- **Issue:** The umbrella canopy does not lock into the open position.
- **Solution:** Ensure you press the release button fully and extend the canopy until you hear a distinct click, indicating it is securely locked. If the issue persists, gently push the canopy upwards until it engages. Avoid forcing the mechanism.

6.2 Difficulty Closing the Umbrella

- **Issue:** The canopy is stiff or difficult to collapse.
- **Solution:** Ensure the release button is fully depressed. If the umbrella has been exposed to extreme temperatures or moisture, allow it to return to room temperature and dry completely before attempting to close it again.

7. SPECIFICATIONS

Model Number	2011046
Brand	Senz

Color	Pure Black
Product Dimensions (L x W x H)	34.25 x 0.79 x 35.43 inches
Item Weight	15.5 ounces
Frame Material	Stainless Steel
Shaft Material	Steel
Handle Material	Stainless Steel / Metal
Special Features	Windproof (up to 100 km/h), UV Protection (UPF 50+)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

For specific warranty details, please refer to the documentation included with your purchase or visit the official Senz Umbrellas website. Keep your proof of purchase for any warranty claims.

8.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Senz Umbrellas customer support through their official website or the retailer from whom you purchased the product.