

[Manuals.plus](#) /

› [SpyX](#) /

› SpyX Recon Spy Watch Instruction Manual

## SpyX 10401

# SpyX Recon Spy Watch Instruction Manual

Model: 10401

Brand: SpyX

## INTRODUCTION

Welcome, junior agent! The SpyX Recon Spy Watch is an 8-in-1 wearable gadget designed to equip you for any secret mission. This versatile device combines essential spy tools with everyday watch functions, making it the perfect companion for surveillance, communication, and concealment. Familiarize yourself with its capabilities to become the ultimate secret agent.



Image: The SpyX Recon Spy Watch displayed alongside its retail packaging.

## SAFETY INFORMATION

**Warning: Not suitable for children under the age of 3 years due to small parts which may present a choking hazard.**

Always use the product as intended. Do not attempt to modify or disassemble the watch beyond what is described in this manual. Keep batteries out of reach of small children.

## PACKAGE CONTENTS

Your SpyX Recon Spy Watch package should contain the following items:

- 1 x SpyX Recon Spy Watch
- Secret Message Paper
- Message Drop Capsules

- Instruction Manual (this document)



Image: Contents of the SpyX Recon Spy Watch package, including the watch, secret message paper, and capsules.

## GETTING STARTED: BATTERY INSTALLATION

The SpyX Recon Spy Watch requires 1 CR123A battery (included). To install or replace the battery:

1. Locate the battery compartment on the back of the watch.
2. Using a small screwdriver (not included), carefully open the battery compartment cover.
3. Insert the CR123A battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.
5. If the watch does not power on, locate the reset button (often a small pinhole) and press it gently with a paperclip.

*Note: The watch comes with a CR2032 3V Lithium Battery according to some product information. Please verify the exact battery type on your packaging.*

## UNDERSTANDING YOUR SPY RECON WATCH: 8-IN-1 FUNCTIONS

Your SpyX Recon Spy Watch is packed with features to assist you on your missions. Here's how to use each one:



- Features 8 different Spy Tools
- Play during day or night
- Send Secret Messages
- Create fun Spy Missions
- Imaginative Role Play Adventures
- Ages 6 and up
- Fantastic Spy Gadget Gift

Image: Visual representation of the SpyX Recon Spy Watch's 8-in-1 capabilities.

### 1. Digital Watch

The core function of your Recon Spy Watch is to tell time. Use the side buttons to set the time, date, and switch between 12-hour and 24-hour formats. Refer to the on-screen prompts for specific setting instructions.



Image: The digital display of the SpyX Recon Spy Watch on a user's wrist.

## 2. LED Night Vision Spotlight

Activate the integrated LED spotlight to illuminate dark areas during your night missions. This feature is useful for navigating low-light environments or finding hidden clues. The light is designed for close-range illumination.

## 3. Stopwatch

Use the stopwatch function to time your missions, track progress, or engage in timed challenges. Press the designated button to start, stop, and reset the timer.

## 4. Alarm

Set an alarm to alert you at a specific time, whether for a rendezvous point or to signal the end of a mission. The alarm can also be used as a 'thieves' alarm, as mentioned in some user feedback.

## 5. Secret Message Paper & Capsules

Communicate covertly with your fellow agents. Write secret messages on the provided paper using a pencil. Roll up the message and insert it into one of the discreet message drop capsules. These capsules can be hidden within the watch band for transport or dropped at a designated location.



Image: The SpyX Recon Spy Watch with its secret message paper and capsules.

## 6. Flip-Face Message Decoder

To read secret messages, flip open the red cover on the watch face. This cover acts as a decoder, revealing the hidden text on the secret message paper. Ensure the message is written lightly with a pencil for optimal decoding.

## 7. Motion Alarm

Set up a perimeter alert with the motion alarm. When activated, the watch will emit a loud sound if it detects movement, alerting you to intruders or unexpected activity. This feature is sensitive and can be triggered by slight bumps.

Video: An official product video showcasing various SpyX gadgets, including the Recon Spy Watch, in action during simulated spy missions. This video provides a dynamic overview of the product's features and potential uses.

## CARE AND MAINTENANCE

- Keep the watch clean by wiping it with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.

- Do not submerge the watch in water. It is not waterproof.
- Store the watch and its accessories in a safe place when not in use to prevent loss or damage, especially the small message capsules.

## TROUBLESHOOTING

| Problem                                               | Possible Cause / Solution                                                                                                                    |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Watch does not turn on.                               | Battery is dead or incorrectly installed. Replace battery and ensure correct polarity. Press the reset button if available.                  |
| Secret message capsules fall out of the band.         | The holders may be loose. Ensure capsules are securely inserted. Consider storing them separately when not actively in use to prevent loss.  |
| Flip-face decoder is broken or detached.              | This part is plastic and can be fragile. Handle with care. If detached, it may be possible to reattach with adhesive if the hinge is intact. |
| Motion alarm is too sensitive or goes off frequently. | The motion sensor is designed to be sensitive. Ensure the watch is placed on a stable surface away from vibrations or accidental bumps.      |
| Time/settings change unexpectedly.                    | Buttons may be accidentally pressed. Familiarize yourself with the button functions and avoid unintentional presses.                         |

## PRODUCT SPECIFICATIONS

- **Model Number:** 10401
- **Product Dimensions:** 9.84 x 1.73 x 0.71 inches (25cm x 4.4cm x 1.8cm)
- **Weight:** 3.2 ounces
- **Recommended Age:** 6 - 15 years
- **Batteries:** 1 CR123A battery required (included) - *Note: Some packaging may indicate CR2032 3V Lithium Battery. Please confirm on your product.*
- **Department:** Unisex-child
- **UPC:** 840685104019

## SUPPORT AND WARRANTY

For further assistance, technical support, or inquiries regarding your SpyX Recon Spy Watch, please refer to the contact information provided on the product packaging or visit the official SpyX website. While specific warranty details are not provided in this manual, standard consumer rights and return policies apply. Please retain your proof of purchase for any warranty claims.

You can visit the [SpyX Store on Amazon](#) for more information and other products.

