

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [SpyX](#) /

› SpyX Micro Motion Alarm Instruction Manual

SpyX 10041

SpyX Micro Motion Alarm Instruction Manual

Model: 10041

INTRODUCTION

The SpyX Micro Motion Alarm is a compact device designed to protect your belongings by detecting motion or vibration. It alerts users to unauthorized access or movement, making it an ideal tool for surveillance and security in a playful context.



Image: The SpyX Micro Motion Alarm shown alongside its retail packaging, highlighting its compact design and purpose.

SAFETY INFORMATION

- This product is intended for ages 6-15 years. Adult supervision is recommended.
- Do not expose the device to water or extreme temperatures.
- Keep small parts away from young children to prevent choking hazards.
- Ensure batteries are inserted with correct polarity. Remove batteries if the device will not be used for an extended period.

PACKAGE CONTENTS

- 1 x SpyX Micro Motion Alarm unit
- Instruction Manual (this document)

Note: 2 AAA batteries are required and are not included.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the Micro Motion Alarm.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

OPERATING INSTRUCTIONS

The SpyX Micro Motion Alarm features two primary detection modes: Motion Detection and Vibration Mode.

Mode Selection



Image: A close-up view of the mode switch on the side of the alarm, labeled 'M' for Motion and 'V' for Vibration.

- Locate the M/V switch on the side of the alarm unit.
- Slide the switch to 'M' for **Motion Detection Mode**. In this mode, the alarm will trigger if it detects movement within its sensor range.
- Slide the switch to 'V' for **Vibration Mode**. In this mode, the alarm will trigger if the unit itself is moved or vibrated.

Setting the Alarm

1. Once the desired mode is selected, place the Micro Motion Alarm in the desired location.
2. Ensure the sensor (for Motion Detection Mode) is facing the area you wish to monitor. The motion detection range is approximately 5 feet.

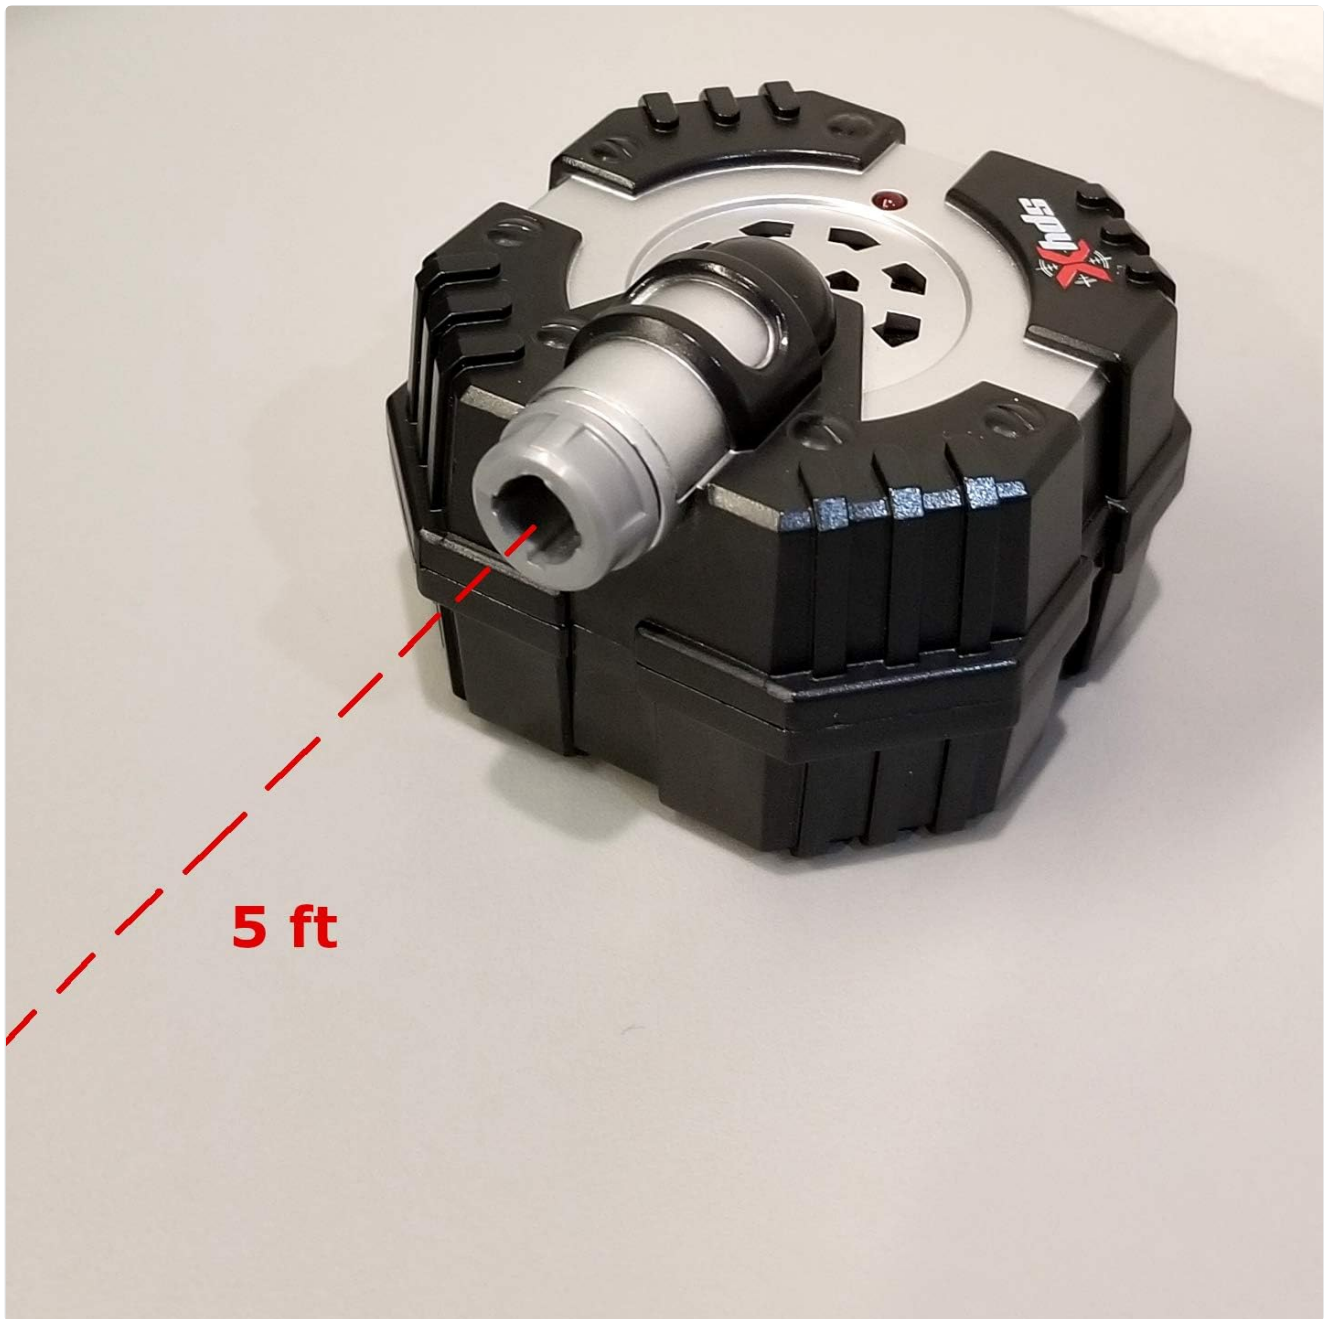


Image: The Micro Motion Alarm illustrating its approximate 5-foot detection range with a red dashed line.

3. Activate the alarm by pressing the power button. A small indicator light may illuminate to confirm activation.
4. When motion or vibration is detected (depending on the selected mode), the alarm will sound.



Image: The Micro Motion Alarm placed on a wooden floor, with green waves indicating motion detection near a shoe.



Image: A detailed view of the Micro Motion Alarm, showing blue and yellow waves emanating from it, symbolizing active motion or vibration detection.

5. To deactivate the alarm, press the power button again.

Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing various SpyX gear, including the Micro Motion Alarm in action, demonstrating its motion detection capabilities and how it alerts users.

MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the device or subjecting it to strong impacts.
- Store the alarm in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Alarm does not activate.	Batteries are low or incorrectly installed.	Check battery polarity or replace with fresh AAA batteries.

Problem	Possible Cause	Solution
Alarm triggers too easily/frequently.	Sensitivity is too high or placed in a high-traffic area.	Adjust placement or consider switching to Vibration Mode if motion is too sensitive.
Alarm does not detect motion.	Sensor is obstructed or range is exceeded.	Ensure sensor is clear and within 5 feet of the monitored area. Check battery level.

SPECIFICATIONS

- **Model:** 10041
- **Dimensions:** 3 x 2 x 2 inches
- **Weight:** 2.4 ounces
- **Power Source:** 2 x AAA batteries (not included)
- **Recommended Age:** 6 - 15 years
- **Manufacturer:** Mukikim

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

© 2024 SpyX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00IVOMDVG>

More documents and user manuals: <https://manuals.plus/>