

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Guide Gear](#) /

› [Guide Gear Deluxe Teepee Tent Instruction Manual](#)

### Guide Gear ETP2-1414

# Guide Gear Deluxe Teepee Tent Instruction Manual

Model: ETP2-1414

## 1. PRODUCT OVERVIEW

The Guide Gear Deluxe Teepee Tent is designed for outdoor camping, hiking, and backpacking, offering a spacious and durable shelter for up to 6 people. This 4-season tent features a heavy-duty waterproof polyester shell, a fully enclosed vestibule, and a simple setup process.

Your browser does not support the video tag.

*Official product overview video for the Guide Gear Deluxe Teepee Tent. This video highlights key features and benefits of the tent.*



*The Guide Gear Deluxe Teepee Tent, showcasing its overall structure and attached vestibule.*

## 2. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your teepee tent:

- 1. Unpack Components:** Lay out all tent components, including the tent body, center steel pole, stakes, and guy lines, on a clear, flat surface.
- 2. Position the Tent:** Spread the tent body flat on your chosen campsite. Ensure the sewn-in polyethylene floor is fully extended.
- 3. Insert Center Pole:** From inside the tent, position the steel center pole vertically in the designated center point. Extend the pole until the tent fabric is taut.
- 4. Secure Base with Stakes:** Locate the stake loops around the perimeter of the tent base. Drive stakes firmly into the ground through each loop to secure the tent's footprint.
- 5. Attach and Adjust Guy Lines:** Extend the pre-attached guy lines from the tent's exterior. Secure each guy line to the ground using additional stakes, adjusting tension to ensure stability and proper tent shape. This is crucial for wind resistance.
- 6. Vestibule Setup:** The vestibule is fully attached. Ensure its floor is spread out and secured with stakes. The vestibule provides additional space for gear or as a mudroom.



*The Guide Gear Teepee Tent fully set up in an outdoor environment, demonstrating its spaciousness and integrated vestibule.*



*Interior view of the tent, showing the central steel pole support and ample space for occupants and gear.*

### 3. OPERATING THE TENT

Understanding the features of your tent will enhance your camping experience:

- **Doors:** The tent features two doors for convenient entry and exit. The main door includes a no-see-um mesh screen to keep insects out while allowing airflow.
- **Windows:** Weatherproofed windows with internal shades provide privacy and allow light into the tent. These can be opened for ventilation.
- **Ventilation:** In addition to windows, the tent is designed with strategic vents to promote air circulation and reduce condensation.
- **Vestibule:** The fully enclosed vestibule offers a protected area for storing muddy boots, wet gear, or as an additional sheltered space. It has a removable floor for easy cleaning.
- **Capacity:** The tent comfortably sleeps 6 people with additional room for gear.



*A detailed view of the tent's fully enclosed vestibule, highlighting its structure and entrance.*



*A close-up of one of the tent's weatherproofed windows, designed for privacy and ventilation.*

## 4. MAINTENANCE

Proper care will extend the life of your tent:

- **Cleaning:** Hand wash the tent with mild soap and water. Do not use harsh detergents or bleach. Rinse thoroughly and allow to air dry completely before packing.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and fabric degradation.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspecting:** Periodically inspect seams, zippers, and poles for any signs of wear or damage. Address minor issues promptly to prevent them from worsening.

## 5. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Water leaking through fabric or seams	Damaged waterproof coating, unsealed seams, or heavy rain exceeding water resistance.	Ensure all zippers are fully closed. Apply seam sealer to worn seams. Consider a rainfly if not already integrated or if additional protection is desired in extreme conditions.
Tent instability in wind	Insufficiently staked tent, loose guy lines, or improper guy line placement.	Ensure all stake points are utilized and stakes are driven firmly into the ground. Tighten all guy lines and ensure they are properly angled away from the tent. Consider using stronger stakes in very windy conditions.
Condensation inside tent	Lack of ventilation, high humidity, or temperature difference between inside and outside.	Open windows and vents to increase airflow. If possible, choose a campsite with good air circulation.
Difficulty with pole assembly	Pole sections not fully connected or obstruction.	Ensure all pole sections are fully seated and locked into place. Check for any debris or kinks in the pole sections.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Guide Gear
Model Number	ETP2-1414
Product Dimensions (L x W x H)	51.2" x 49.2" x 70.9" (Vestibule)
Floor Width	14 Feet
Item Weight	24 Pounds
Occupancy	6 Person (Comfortably) / 10 Person (Maximum)
Seasons	4 Season
Material	190-denier Polyester Shell, Polyethylene Floor
Water Resistance Technology	1,000mm Polyurethane Coating
Included Components	Tent body, Steel center pole, Stakes, Guy lines
Number of Doors	2
Number of Vestibules	1 (Fully enclosed)
Packed Dimensions	33" x 10" x 10"

## 7. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact the retailer where the product was purchased. The primary seller for this product is **The Sportsman's Guide**.

For direct inquiries, you may visit the [Guide Gear Store on Amazon](#).

© 2024 Guide Gear. All rights reserved.