

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [allen + roth](#) /

› [allen + roth Mazon 44 Inch Oil Rubbed Bronze Ceiling Fan User Manual](#)

allen + roth 0356762

allen + roth Mazon 44 Inch Oil Rubbed Bronze Ceiling Fan User Manual

Model: 0356762

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your allen + roth Mazon 44 Inch Oil Rubbed Bronze Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image: The allen + roth Mazon 44 Inch Oil Rubbed Bronze Ceiling Fan, featuring a dark bronze motor housing, three wooden-look blades, and a single frosted glass light globe at the bottom.

SAFETY INFORMATION

Always follow basic safety precautions when installing and operating this ceiling fan to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (minimum 35 lbs).

- Do not operate the fan with damaged blades or housing.
- Keep hands, clothing, and other objects clear of the fan blades when in operation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Housing (Oil Rubbed Bronze)
- Fan Blades (3)
- Light Kit Assembly
- Frosted Glass Globe
- Remote Control with Wall Mount
- Mounting Hardware
- Instruction Manual

SETUP AND INSTALLATION

1. **Turn off Power:** Locate the circuit breaker and turn off the power to the fan's location.
2. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling junction box. Ensure the junction box is rated for ceiling fan support.
3. **Fan Assembly:** Attach the fan blades to the motor housing. Connect the light kit assembly to the fan motor.
4. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full manual. Ensure all connections are secure.
5. **Canopy Installation:** Lift the fan assembly and secure it to the mounting bracket. Install the canopy to cover the wiring connections.
6. **Light Globe Installation:** Install the light bulb (not included) and attach the frosted glass globe to the light kit.
7. **Restore Power:** Turn the power back on at the circuit breaker.

For detailed wiring diagrams and specific hardware instructions, refer to the complete installation guide included in your product packaging.

OPERATING INSTRUCTIONS

Your Mazon ceiling fan is operated using the included remote control.

- **Fan On/Off and Speed Control:** Use the fan speed buttons on the remote to turn the fan on/off and adjust between low, medium, and high speeds.
- **Light On/Off:** Press the light button to turn the light kit on or off.
- **Light Dimming:** If your light kit supports dimming, press and hold the light button to adjust the brightness.
- **Reverse Function:** A reverse switch (often located on the fan motor housing) allows you to change the direction of the fan blades for summer (downward airflow) or winter (upward airflow) operation. Ensure the fan is off before changing direction.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- Cleaning:** Dust the fan blades and motor housing periodically with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- Blade Screws:** Check all blade screws for tightness at least twice a year. Loose screws can cause noise and wobble.
- Light Kit Screws:** Ensure the screws holding the light kit and glass globe are secure.
- Electrical Connections:** Periodically inspect electrical connections for any signs of wear or loosening. (Ensure power is off before inspection).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery dead.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use a balancing kit (sold separately); Ensure mounting bracket is securely fastened.
Light does not work	Bulb burned out; Loose wire connection in light kit; Light switch off.	Replace bulb; Check light kit wiring; Ensure light switch on remote is pressed.

If you encounter issues not listed here, or if solutions do not resolve the problem, contact customer support.

SPECIFICATIONS

Brand: allen + roth

Model Number: 0356762

Fan Size: 44 Inches

Finish Type: Oil Rubbed Bronze

Control Method: Remote Control

Special Feature: Remote Control

UPC: 803390601419

First Available: March 11, 2014

WARRANTY INFORMATION

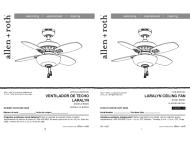
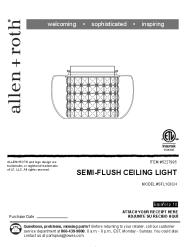
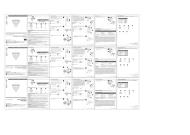
This allen + roth Mazon Ceiling Fan comes with a **Limited Lifetime Warranty**. Please refer to the warranty card included with your product for specific terms, conditions, and coverage details. Retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact allen + roth customer service. Contact information can typically be found on the product packaging or the brand's official website. *Note: Always have your model number (0356762) and date of purchase ready when contacting support.*

© 2023 allen + roth. All rights reserved.

Related Documents - 0356762

	<p><u>Allen + Roth LED Ceiling Fan Installation Manual</u></p> <p>Comprehensive installation, operation, and maintenance guide for the Allen + Roth LED Ceiling Fan (Model #41945). Includes safety information, troubleshooting, and warranty details.</p>
	<p><u>Allen + Roth LED Flushmount Ceiling Fixture Installation Guide and Manual</u></p> <p>Comprehensive guide for installing and maintaining the Allen + Roth LED Flushmount Ceiling Fixture (Model MXL1089-LED35K9027B/N). Includes safety, troubleshooting, care, and warranty information.</p>
	<p><u>Allen + Roth Laralyn Ceiling Fan Model 00882 Installation and Operation Manual</u></p> <p>Comprehensive installation, operation, care, and warranty guide for the Allen + Roth Laralyn Ceiling Fan (Model 00882, UL Model LRN32). Includes safety information, parts list, troubleshooting, and replacement parts.</p>
	<p><u>allen + roth SFL103CH Semi-Flush Ceiling Light Installation Guide</u></p> <p>This document provides comprehensive installation instructions for the allen + roth SFL103CH Semi-Flush Ceiling Light. It includes essential safety warnings, a list of package contents and hardware, step-by-step assembly procedures, care and maintenance tips, troubleshooting advice, and warranty information.</p>
	<p><u>Allen + Roth Victoria Harbor Ceiling Fan Installation and Operation Manual</u></p> <p>Comprehensive guide for installing and operating the Allen + Roth Victoria Harbor Ceiling Fan (Model #LP8242LCH). Includes safety information, package contents, assembly instructions, wiring diagrams, and care recommendations.</p>
	<p><u>Allen + Roth Flushmount Ceiling Fixture Installation Guide</u></p> <p>Step-by-step instructions and safety information for installing the Allen + Roth Flushmount Ceiling Fixture (Model #IXO8292A). Includes parts list, troubleshooting, and warranty information.</p>

