

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fuji STX-2 35mm SLR Camera User Manual

Fujifilm STX-2 (7122567)

Fuji STX-2 35mm SLR Camera User Manual

Model: STX-2 (7122567)

Brand: Fujifilm

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, operation, and maintenance of your Fuji STX-2 35mm SLR Camera. The Fuji STX-2 is a compact and versatile single-lens reflex camera designed for use with 35mm film, offering both manual and automatic exposure control options.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Verify that all items are present according to the product's packing list.



Figure 2.1: The Fuji STX-2 camera kit, including the camera body, lenses, flash, and carrying bag.

2.2 Battery Installation

The Fuji STX-2 requires specific batteries for its light meter and electronic functions. Open the battery compartment, typically located on the bottom or front of the camera body. Insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the compartment securely.

2.3 Lens Attachment

To attach a lens, align the red dot or indicator on the lens barrel with the corresponding mark on the camera's lens mount. Gently insert the lens into the mount and rotate it clockwise until it clicks into place, indicating it is securely locked. To remove, press the lens release button and rotate the lens counter-clockwise.



Figure 2.2: Front view of the X-FUJINAR-W 1:2.8 f=28mm DM lens, showing aperture and focus rings.



Figure 2.3: Rear view of the lens, showing the camera mount for attachment.

2.4 Film Loading

1. Open the camera back by pulling up the rewind knob.
2. Place a 35mm film cassette into the film chamber.
3. Pull the film leader across to the take-up spool and insert it into one of the slots.
4. Advance the film slightly using the film advance lever until the sprocket holes engage with the sprockets.
5. Close the camera back firmly.
6. Advance the film two frames, pressing the shutter button each time, to ensure the film is properly loaded and the film counter shows '1'.

3. OPERATING THE CAMERA

3.1 Camera Controls Overview

Familiarize yourself with the main controls of the Fuji STX-2:

- **Shutter Speed Dial:** Located on the top plate, used to select exposure time.

- **Aperture Ring:** On the lens, controls the lens opening and depth of field.
- **Focus Ring:** On the lens, used to adjust focus.
- **Film Advance Lever:** Winds the film to the next frame and cocks the shutter.
- **Shutter Button:** Releases the shutter to take a picture.
- **Rewind Knob/Crank:** Used to rewind the film back into its cassette.



Figure 3.1: Top view of the Fuji STX-2 camera, highlighting the shutter speed dial, film advance lever, and film counter.



Figure 3.2: Front view of the Fuji STX-2 camera with the lens attached, showing the lens release button and self-timer.

3.2 Shutter Speed and Aperture

The Fuji STX-2 supports both manual and automatic exposure control. In manual mode, you set both the shutter speed

(via the dial on top) and the aperture (via the ring on the lens) to achieve the desired exposure. In automatic mode, the camera's light meter assists in setting the correct exposure.

3.3 Focusing

Look through the viewfinder. Rotate the focus ring on the lens until the image appears sharp and clear. Many SLR cameras include a split-image or microprism focusing aid in the center of the viewfinder to assist with precise focusing.

3.4 Taking a Picture

1. Compose your shot through the viewfinder.
2. Adjust the focus until the subject is sharp.
3. Set the appropriate shutter speed and aperture based on lighting conditions and desired effect.
4. Gently press the shutter button all the way down to take the picture.
5. Advance the film using the film advance lever to prepare for the next shot.

3.5 Film Rewinding and Unloading

1. Once all frames on the film roll have been exposed, press the film rewind release button (usually on the bottom of the camera).
2. Fold out the crank on the rewind knob and turn it clockwise until you feel the tension release, indicating the film has been fully rewound into its cassette.
3. Pull up the rewind knob to open the camera back.
4. Remove the film cassette from the chamber.

4. MAINTENANCE

4.1 Cleaning the Camera Body

Use a soft, lint-free cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials. Do not spray cleaners directly onto the camera.

4.2 Lens Care

Keep lens surfaces clean. Use a lens brush or a can of compressed air to remove dust. For smudges or fingerprints, use a specialized lens cleaning solution and a microfiber lens cloth. Clean in a circular motion from the center outwards. Avoid touching the lens elements with your fingers.

4.3 Storage

When not in use, store the Fuji STX-2 in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity. It is advisable to store the camera with the lens cap on and, if storing for extended periods, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Common Issues

- **Film Not Advancing:** Ensure the film leader is properly engaged with the take-up spool and sprockets. Check if the film rewind release button is accidentally pressed.
- **No Shutter Release:** Verify that the film advance lever is fully wound. Check battery status if the camera has electronic components for the shutter.
- **Images Too Dark/Light:** Review your shutter speed and aperture settings. Ensure the film's ISO/ASA is correctly set on the camera (if applicable). Check the light meter's functionality.
- **Light Leaks on Film:** Inspect the camera back's light seals for wear or damage.

6. SPECIFICATIONS

Feature	Specification
Model Number	7122567
Film Format Type	35mm
Exposure Control Type	Manual, Automatic
Shutter Type	Focal Plane Shutter
Special Feature	Compact
Compatible Devices	Camera
Film Colour	Colored
Camera Lens	35 mm
UPC	755675257197

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, service, or technical support for your Fuji STX-2 camera, please refer to the warranty card included with your purchase or visit the official Fujifilm website. You can also visit the official Fujifilm store for more product information and support resources:[Fujifilm Store on Amazon](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question