

SONY RMF-JD010

SONY RMF-JD010 TV Remote Control Instruction Manual

Model: RMF-JD010 | Brand: SONY

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your SONY RMF-JD010 TV Remote Control. This remote is designed for use with specific SONY BRAVIA TV models, including KDL-22EX420, KDL-26EX420, and KDL-32EX420. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. SAFETY INFORMATION


- Do not expose the remote control to direct sunlight, high temperatures, humidity, or dust.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

3. SETUP

3.1 Battery Installation

The SONY RMF-JD010 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

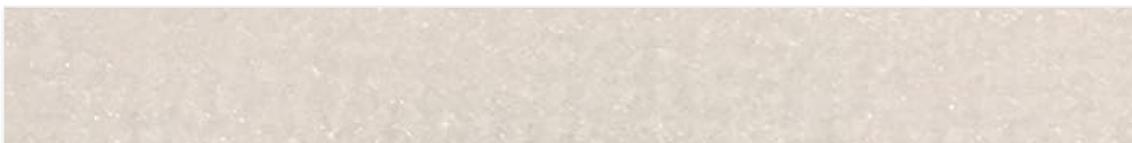

SONY





Figure 1: Battery compartment with AAA batteries.

3.2 Initial Pairing/Registration with TV

For the RMF-JD010 remote control to function with your SONY BRAVIA TV, it may require initial pairing or registration. This process typically involves using the physical buttons on your TV to navigate to the remote control settings menu.

1. Ensure your TV is powered on. If the remote is not yet working, use the power button on the TV itself.
2. Using the physical buttons on your TV (usually located on the side or back), navigate to the TV's main menu or settings. Look for options like "Settings," "Home," or a gear icon.
3. Within the TV's menu, locate the "Remote Control" or "Bluetooth Settings" section.
4. Follow the on-screen prompts to register a new remote control. This may involve pressing specific buttons on the new RMF-JD010 remote as instructed by the TV.
5. Once successfully paired, the remote control should respond to your commands.

4. OPERATING THE REMOTE CONTROL

4.1 Button Functions

The SONY RMF-JD010 remote control features a streamlined design with essential buttons for TV operation. Refer to the images below for button identification and their primary functions:





Figure 2: Front view of the SONY RMF-JD010 remote control.



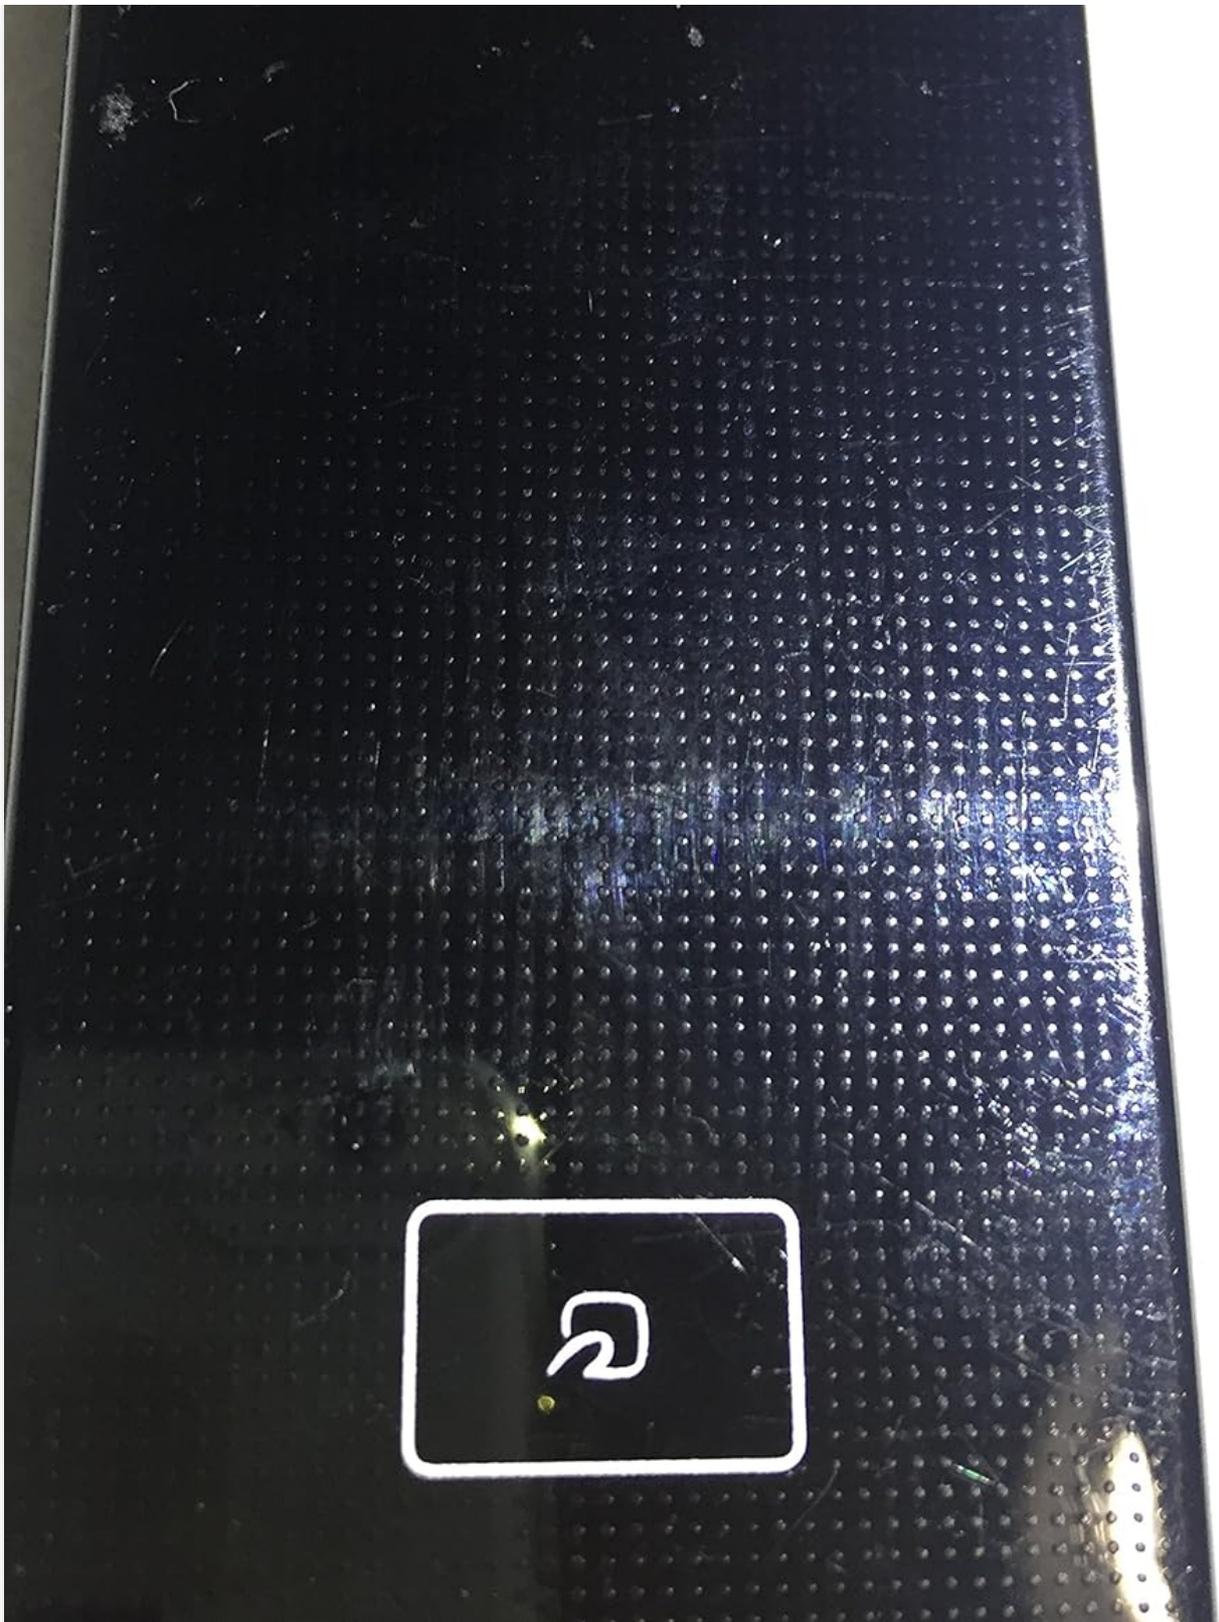


Figure 3: Close-up of the top buttons.

- **Power (I/O) Button:** Turns the TV on or off.
- **Home/Menu Button:** Accesses the TV's main menu or smart TV interface.
- **Input/Source Button:** Switches between different input sources (e.g., HDMI 1, HDMI 2, TV).
- **Guide/App Button:** Accesses the electronic program guide or a list of installed applications.
- *Note: Specific button labels and functions may vary slightly based on your TV model.*

4.2 Basic Operation

To operate your TV using the remote control, point the remote directly at the TV's remote sensor. Ensure there are

no obstructions between the remote and the TV. Press the desired button firmly but gently.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Follow the battery installation steps outlined in Section 3.1. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).

6. TROUBLESHOOTING

- **Remote control not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's sensor.
 - Confirm the remote is pointed directly at the TV.
 - If the remote was recently replaced, ensure it has been properly paired/registered with the TV (refer to Section 3.2).
- **Certain TV functions not working:**
 - Verify that your TV model is listed as compatible (KDL-22EX420, KDL-26EX420, KDL-32EX420).
 - Some advanced functions may require specific TV settings or software versions.
 - Re-attempt the pairing process (Section 3.2) if functions are inconsistent.

7. SPECIFICATIONS

Brand	SONY
Model Number	RMF-JD010
Compatible Devices	TV (KDL-22EX420, KDL-26EX420, KDL-32EX420)
Max Number of Compatible Devices	3
Color	Black
Controller Type	Remote Control
Number of Buttons	14
Battery Type	AAA Alkaline (x2)

8. WARRANTY AND SUPPORT

This product is covered by SONY's standard manufacturer's warranty. For detailed warranty information, please refer to the documentation provided with your original TV purchase or visit the official SONY support website for your region. For technical assistance or support, please contact SONY customer service.

You can find support information and contact details on the official SONY website:

www.sony.com/electronics/support

© 2024 SONY Corporation. All rights reserved.