

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Eureka Forbes](#) /
- › [Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner User Manual](#)

Eureka Forbes GFCDFTWDX00000

Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner User Manual

Model: GFCDFTWDX00000 | Brand: Eureka Forbes

1. INTRODUCTION

Thank you for choosing the Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the vacuum cleaner.
- Do not use the appliance on wet surfaces unless specifically operating in wet cleaning mode.
- Never pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the electrical outlet when not in use and before cleaning or servicing.
- Do not allow children to use the vacuum cleaner. Close supervision is necessary when used near children.
- Inspect the power cord and plug for damage before each use. Do not use if damaged.

3. PRODUCT OVERVIEW AND COMPONENTS

The Eureka Forbes Trendy Wet & Dry DX is designed for versatile cleaning, offering both wet and dry vacuuming, along with a powerful blower function. It features an 1150-watt motor for strong suction and efficient dirt removal.



Image 3.1: Main unit of the Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner, showing the motor head, dust tank, hose, and floor brush attachment.

Key Features:

- **Wet & Dry Cleaning:** Capable of cleaning both dry dust and wet spills.
- **Powerful Suction:** Equipped with an 1150 Watts motor providing 18 KPA suction for deep cleaning.
- **Blower Function:** Helps to blow off dirt from hard-to-reach areas.
- **Auto Cord Winder:** For convenient storage of the power cord.
- **Long Power Cord:** An 18-foot long cord for extended reach without frequent socket changes.

- **Large Dust Tank:** 8-liter capacity for uninterrupted cleaning, easy to empty.

Included Components:

- Main Vacuum Cleaner Unit
- Flexible Hose Pipe
- Extension Tubes (2)
- Carpet/Floor Brush
- Multi-Purpose Brush
- Wet Squeeze Tool
- Crevice Nozzle
- Upholstery Brush

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assemble the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Attach Extension Tubes:** Connect the two extension tubes together, then attach them to the end of the flexible hose.
4. **Select and Attach Cleaning Tool:** Choose the appropriate cleaning tool (e.g., floor brush, crevice nozzle) for your task and attach it to the end of the extension tubes.
5. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet. Ensure the cord is fully extended to prevent overheating.

5. OPERATING INSTRUCTIONS

5.1 Dry Cleaning

For dry cleaning, ensure the dust tank is empty and the dry filter is correctly installed. Attach the carpet/floor brush or multi-purpose brush for general cleaning, or the crevice nozzle for tight spaces.

Allows Deep Cleaning **Powerful Suction**

Comes with a 1150 Watts motor that helps remove dust and dirt from floors, carpets, etc.



Image 5.1.1: The vacuum cleaner demonstrating powerful suction on a rug, effectively removing dust and small particles.

1. Plug in the vacuum cleaner.
2. Press the power button to turn on the appliance.
3. Move the chosen attachment over the surface to be cleaned.
4. After use, press the power button to turn off and unplug.

5.2 Wet Cleaning

Before wet cleaning, remove the dry filter and ensure the dust tank is empty. Use the wet squeeze tool for effective liquid pickup.

Enables Complete Cleaning

Wet and Dry Cleaning

Easily eliminates dry dust and dirt and also cleans wet spills in one go.



Image 5.2.1: The vacuum cleaner in action, cleaning a wet spill on a floor, highlighting its wet cleaning functionality.

1. Ensure the dry filter is removed and the tank is ready for liquids.
2. Attach the wet squeeze tool to the extension tubes.
3. Plug in and turn on the vacuum cleaner.
4. Move the wet squeeze tool over the liquid spill to vacuum it up.
5. After use, turn off, unplug, and empty the liquid from the tank immediately.

5.3 Blower Function

The blower function is useful for dislodging dirt from crevices and hard-to-reach areas before vacuuming.

Blows Dirt Away

Powerful Blower

Helps to blow off the dirt from hard to reach areas like window channels, sofa corners etc.



Image 5.3.1: The vacuum cleaner's blower function being used to clear dirt from a window channel, showing its utility for inaccessible areas.

1. Detach the hose from the suction inlet.
2. Attach the hose to the blower outlet, usually located on the back or side of the motor head.
3. Plug in and turn on the vacuum cleaner.
4. Direct the airflow to blow away dirt from desired areas.
5. Turn off and unplug after use.

5.4 Auto Cord Winder

To retract the 18-foot long power cord, gently pull the cord slightly and then press the auto cord winder button. The cord will automatically retract into the unit.

Easy to Manoeuvre

Long Power Cord

Comes with an 18-foot long power cord, which makes it easy to clean without switching sockets.



Image 5.4.1: The vacuum cleaner connected to a power outlet, illustrating the length of its 18-foot power cord for extended reach.

6. MAINTENANCE

6.1 Emptying the Dust Tank

The vacuum cleaner features an 8-liter dust tank that is easy to empty.

Non-stop Cleaning Large Dust Tank

Comes with a 8 Liter dust tank (easily emptiable)
that ensures uninterrupted cleaning.



Image 6.1.1: The vacuum cleaner's main body, highlighting its large 8-liter dust tank for extended cleaning sessions.

1. Ensure the vacuum cleaner is turned off and unplugged.
2. Release the latches securing the motor head to the dust tank.
3. Carefully lift the motor head off the tank.
4. Dispose of collected dry debris or liquid into a suitable receptacle.
5. Clean the inside of the tank with a damp cloth if necessary.
6. Replace the motor head and secure the latches.

6.2 Filter Cleaning

Regular cleaning of the filter is crucial for maintaining optimal suction performance.

- For dry cleaning, tap the dry filter to remove accumulated dust. Wash if heavily soiled and allow to air dry completely before re-installing.
- For wet cleaning, ensure the foam filter is clean and properly seated.

6.3 General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth.

- Clean attachments regularly to prevent blockages.
- Store the vacuum cleaner in a dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on	No power supply; Power cord not plugged in; Faulty switch.	Check power outlet; Ensure cord is securely plugged in; Contact service center.
Low suction power	Dust tank full; Clogged filter; Blockage in hose or attachments.	Empty dust tank; Clean or replace filter; Remove blockage.
Water leakage during wet cleaning	Dust tank overfilled; Foam filter not correctly installed.	Do not overfill tank; Ensure foam filter is properly seated.
Unusual noise	Foreign object in fan or motor; Loose parts.	Turn off and unplug, inspect for foreign objects; Contact service center.

8. SPECIFICATIONS

- **Brand:** Eureka Forbes
- **Model Name:** Forbes Trendy Wet & Dry DX Vacuum Cleaner
- **Model Number:** GFCDFWDX00000
- **Wattage:** 1150 Watts
- **Maximum Suction:** 1800 Millimetres (equivalent to 18 KPA)
- **Capacity:** 8 litres (dust tank)
- **Filter Type:** Cartridge
- **Power Source:** Corded Electric
- **Voltage:** 230 Volts
- **Product Dimensions:** 36L x 35W x 46H Centimeters
- **Item Weight:** 6.8 Kilograms
- **Noise Level:** 80 Decibels
- **Special Features:** Automatic Cord Rewind, Wet/Dry Function, Blower Function, Wheels
- **Country of Origin:** China

9. PRODUCT VIDEOS

9.1 Detailed Product Demonstration

Your browser does not support the video tag.

This video provides a comprehensive demonstration of the Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner, showcasing its various features, attachments, and cleaning capabilities in detail. It includes usage examples for different surfaces and functions like wet cleaning, dry cleaning, and using specialized brushes.

9.2 Feature Highlights

Your browser does not support the video tag.

This short video highlights the key features of the Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner, including its powerful suction, wet and dry cleaning capabilities, blower function, auto cord winder, and large dust tank. It offers a quick visual overview of

the product's main benefits.

10. WARRANTY AND SUPPORT

The Eureka Forbes Trendy Wet & Dry DX Vacuum Cleaner comes with a **1-year manufacturer's warranty**. For warranty claims, technical support, or service requests, please contact Eureka Forbes customer service. You may also consider purchasing extended warranty plans for additional coverage.

Manufacturer: Eureka Forbes Limited

Importer: Eureka Forbes Limited (Formerly Forbes Enviro Solutions Limited). B1/B2, 701, 7th Floor, Marathon Innova, Off. Ganpatrao Kadam Marg, Lower Parel (West), Mumbai, Maharashtra – 400013.

Legal Disclaimer: Subject to Indore Jurisdictions.